



# QL-800 User Guide



# QL-800 User Guide

Part Number 22834649-EN-E  
Revision 1.6  
5/2018

QuickLabel, An AstroNova™ Division

World Headquarters  
600 East Greenwich Ave., West Warwick, RI 02893  
Tel: +1 (401) 828-4000 Fax: +1 (401) 822-2430  
E-mail: [info@QuickLabel.com](mailto:info@QuickLabel.com)

[www.QuickLabel.com](http://www.QuickLabel.com)

Technical Support  
Tel: +1 (401) 828-4000  
E-mail: [support@QuickLabel.com](mailto:support@QuickLabel.com)  
[www.QuickLabel.com/support/](http://www.QuickLabel.com/support/)

## © 2018 AstroNova, Inc. All Rights Reserved

This manual is copyrighted with all rights reserved. No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without written permission of QuickLabel.

## Trademarks

QL-800® and Custom QuickLabel Omni® are registered trademarks of AstroNova, Inc.

Adobe®, Photoshop®, and Illustrator® are registered trademarks of Adobe Systems, Inc.

Corel® is a registered trademark of Corel Corporation.

Microsoft® Windows® 7, Windows® 8, and Windows® 10 are registered trademarks of Microsoft Corporation.

Goo Gone® is a registered trademark of Weiman Products, LLC.

## QL-800 Limited Warranty

QuickLabel, An AstroNova Division, warrants all components of this product, except wear parts and consumables, against defects in materials or workmanship for a period of one (1) year from the date of original purchase. Wear parts include the transport unit, maintenance roller, maintenance cartridge, cutter blades and the like. Consumables include ink cartridges and labels, which are covered under a separate warranty. If the customer discovers a defect, this defect must be reported promptly to QuickLabel or an authorized QuickLabel dealer.

QuickLabel will, at its option, repair the printer or repair or replace its defective component(s) at no additional charge. Repair parts and replacement parts will be furnished on an exchange basis and will be either reconditioned or new. The customer is responsible for freight to return the printer or component to our factory or authorized service center. We will ship the repaired or replaced printer or component back to you via standard ground freight service. All replaced parts become the property of QuickLabel. Travel, freight and other expenses related to warranty repairs are not covered.

In the first year of product ownership, you may be covered by a separate Customer Support Agreement purchased from or issued by QuickLabel or an authorized QuickLabel dealer. In such a case, you would be entitled to an on-site installation and/or training visit. Otherwise, Customer Support Agreements and renewals are available for purchase and provide on-site support.

This warranty is void if the product has been damaged by accident, abuse, neglect or misapplication or by the use of incompatible consumables or parts, or if the product has been improperly installed, or if the product has been modified without the express written permission of QuickLabel. QuickLabel is not responsible for products lost or damaged in transit.

QuickLabel makes no warranty, either express or implied, with respect to this product's merchantability or fitness for a particular purpose. In no event shall QuickLabel be held liable for any direct, indirect, special, incidental, or consequential damages, whether based on a contract, tort, or any other legal theory and whether advised of the possibility of such damages.



## **Ink Limited Warranty**

This warranty covers QuickLabel QL-800 ink cartridge sold by QuickLabel.

Each QL-800 ink cartridge is warranted to be free from defects in materials and workmanship for up to 24 months from the date of manufacture if in original unopened packaging, or up to 3 months after installation, whichever occurs first. This warranty applies only to the ink cartridges as used in the QuickLabel QL-800 printing system.

If the customer suspects a defect in a QL-800 ink cartridge, the customer must notify QuickLabel or an authorized QuickLabel dealer within the warranty period. Upon return of the ink cartridge and QuickLabel's verification of the defect, QuickLabel will, at its option, either:

1. Replace the defective ink cartridge; or,
2. If the customer has used the ink, pro-rate the price of a new ink based upon the estimated life remaining for the ink, as reported by the QL-800 system. The QL-800 provides the estimated life remaining, and QuickLabel may obtain this information from the system remotely or request the customer to furnish this information.

This warranty does not cover QL-800 ink cartridges that have been emptied, refilled, remanufactured, modified, refurbished, misused, or tampered with, or that have expired, or when used to print on label or tag media that is not compatible with the QL-800.

This warranty is void if the QL-800 ink cartridge has been damaged by accident, abuse, neglect or misapplication, if the product has been improperly installed or maintained, if the product has been used outside of its environmental specifications, or if the product has been modified without the express written permission of QuickLabel.

QuickLabel makes no warranty, either express or implied, with respect to this product's merchantability or fitness for a particular purpose. In no event shall QuickLabel be held liable for any direct, indirect, special, incidental, or consequential damages, whether based on a contract, tort, or any other legal theory and whether advised of the possibility of such damages.

## **Printhead Limited Warranty**

QuickLabel warrants the printhead from the date of purchase for a period of 90 days or for 250,000 inches of printing, whichever comes first, contingent upon the use of QuickLabel ink and labels. The QL-800 printhead is calibrated for use with QuickLabel ink and labels and performs optimally only when used with these materials. This specific printhead warranty does not apply to printheads damaged by accident, abuse, neglect, misapplication or the like. This warranty is void if the product has been damaged by accident, abuse, neglect or misapplication, or if the product has been improperly installed, or if the product has been modified without the express written permission of QuickLabel.

## **ICC Profile**

ICC Profile Powered by X-Rite Incorporated

## **Obtaining Service**

To obtain warranted service, please contact QuickLabel Technical Support through one of the Factory Sales and Service Centers.

## Contact Information

### World Headquarters

600 East Greenwich Ave.  
West Warwick, RI 02893 USA  
Toll-Free: 877-757-7978 | Tel: +1 401-828-4000  
[quicklabel.com](http://quicklabel.com)

### European Headquarters

Waldstrasse 70  
63128 Dietzenbach | Germany  
Tel: +49 (0) 6074-31025-00  
[quicklabel.de](http://quicklabel.de)

### Canada

3505 Rue Isabelle  
Suite O  
Brossard, QC J4Y 2R2  
Tel: +1 800-565-2216  
[quicklabel.ca](http://quicklabel.ca)

### Latin America

Av Insurgentes Sur No 1602, 4º Piso  
Suite 467  
Col. Credito Constructor  
Ciudad de Mexico CDMX 03940  
Mexico  
Tel: +52 55 1000-9116  
[quicklabel.com/es](http://quicklabel.com/es)

### Denmark

Marielundvej 46A, 2.  
2730 Herlev  
Tel: +45 29 64 00 05  
[trojanlabel.com](http://trojanlabel.com)

### France

Parc Euclide  
ZA la Clef de St Pierre  
10A Rue Blaise Pascal  
78990 Elancourt  
Tel: +33 (1) 34 82 09 00  
[quicklabel.fr](http://quicklabel.fr)

### United Kingdom

A5 Westacott Business Centre  
Westacott Way, Maidenhead  
Berkshire, SL6 3RT  
Tel: +44 (0) 1628 668836  
[quicklabel.co.uk](http://quicklabel.co.uk)

**China**

1F, Bldg2#,  
458 North Fu Te Road,  
Shanghai Waigaoqiao F.T.Z., 200131  
Tel: +86 21 5868 2809  
quicklabel.cn

**Ownership Information**

Congratulations and thank you for your business. Your purchase of a QuickLabel digital label printer is an investment in production flexibility and packaging efficiency. Please record the model number and serial number of your product.

**FCC Part 15 Compliance**

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## RoHS2 Compliance

The QL-800 Label Printer does not contain the substances specified within ANNEX II of “Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS)”, that is, lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB) and polybrominated diphenyl ethers (PBDE) exceeding their specified maximum concentration values tolerated by weight in homogeneous materials, except for the exemptions set in ANNEX III of the Directive and its amendments.

This information is offered in good faith to the best of our knowledge, but is subject to revision as new information becomes available.

## WEEE Directive



European Union (and EEA) only.

These symbols indicate that this product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/EC), the Battery Directive (2006/66/EC) and/or your national laws implementing those Directives.

If a chemical symbol is printed beneath the symbol shown above, in accordance with the Battery Directive, this indicates that a heavy metal (Hg = Mercury, Cd = Cadmium, Pb = Lead) is present in this battery or accumulator at a concentration above an applicable threshold specified in the Battery Directive.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators. Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE.

Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources.

For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service.

(EEA: Norway, Iceland and Liechtenstein)

## WEEE Compliance - India only

This product is not to be disposed of with your household waste, according to the e-waste (Management and Handling) Rules, 2011. This product should be handed over to a designated collection point, e.g., to an authorized collection site for recycling waste electrical and electronic equipment (EEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information regarding return and recycling of WEEE products, please contact QuickLabel.


Also, this product complies with the “India E-waste Rule 2011” and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 % by weight and 0.01 % by weight for Cadmium, except for the exemptions set in Schedule II of the Rule.



## Battery - For CA, USA only

Included battery contains Perchlorate Material ---- special handling may apply.

See <http://www.dtsc.ca.gov/hazardouswaste/perchlorate> for details.

<b>Declaration of Conformity</b> <b>Declaration de Conformité</b> <b>Übereinstimmungserklärung</b> <b>Dichiarazione di Conformità</b>	
ID	DoC-22834649
Manufacturer's name and address Nom et adresse du fabricant Hersteller Nome del costruttore	AstroNova, Inc. 600 East Greenwich Avenue West Warwick, RI 02893 USA
Model No. Modèle No. Model Nr. Modello No.	QL-800, QL-800 w/ Rewinder
Description of Products Description des produits Produktbeschreibungen Descrizione dei Prodotti	Color Label Printer
Standards to which conformity is declared Standards auquel la conformité appartient Normen für welche Übereinstimmung erklärt wird Norme per le quali si dichiara la conformità	FCC 47CFR Part 15 Subpart B (3/2017) IC ICES-003:2016 Ed.6 EN 55032 ED 2:2015 EN 55024:2010 + AMD1:2015 IEC 60950-1:2005 (Second Edition) + Am 1:2009 + Am 2:2013 EN 60950-1:2006/A11:2009/A1:2010/A12:2011/A2:2013 ANSI/UL 60950-1:2007 Ed.2 +R:14Oct2014 CSA C22.2#60950-1:2007 Ed.2+A1;A2
Application of Council Directives Application des Decisions du Conseil Anwendbar für die Richtlinien Applicazione delle Direttive del Comitato	2014/30/EU 2014/35/EU
I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive and Standard. Je, Soussigné, déclare que l'équipement spécifié ci-dessus est en conformité avec la directive et le standard ci-dessus. Ich, der unterzeichnende erkläre hiermit, daß das oben beschriebene Gerät den vorgenannten Richtlinien und Normen entspricht. Il sottoscritto dichiara che l'apparecchio sopra specificato è conforme alle Direttive e Norme sopra specificate.	
Steven Holbrook Quality Assurance Manager AstroNova, Inc. CE Label First Affixed Date: 16	 Date of issue: <u>10/6/2017</u> Place of issue: <u>West Warwick, RI</u>
European Contact: Your local AstroNova, Inc. Sales and Service Office. FRANCE - Parc Euclide, ZA la Clef de St Pierre, 10A Rue Blaise Pascal 78990 Elancourt Tel: (+33) 1 34 82 09 00, Fax: (+33) 1 34 82 05 71 GERMANY - Waldstraße 70, D-63128 Dietzenbach Tel. +49 (0) 6074 31 025-00, Fax: +49 (0) 6074 31 025-99 UNITED KINGDOM - Westacott Way, Maidenhead Berkshire, SL6 3RT Tel: +44 (0)1628 668836 • Fax: +44 (0)1628 664994	

---

# Contents

<b>Chapter 1:</b>	<b>Getting Started . . . . .</b>	<b>17</b>
	About the QL-800 . . . . .	17
	Installation and Setup Overview . . . . .	18
	Unpacking the Printer . . . . .	19
	Checking the Included Parts . . . . .	21
	Before Installing the Printer . . . . .	22
	Choosing an Installation Location . . . . .	22
	Installation Precautions . . . . .	23
	System Requirements . . . . .	23
	Powering On . . . . .	23
	Installing the Printer Driver . . . . .	24
	Installing the Printer Driver (USB) . . . . .	24
	Installing the Printer Driver (Network) . . . . .	25
	Changing Printer Networking Settings . . . . .	26
	Using the After Shipping Wizard . . . . .	26
	Preparing the Maintenance Roller . . . . .	27
	Installing Ink Cartridges . . . . .	28
	Installing the Printhead . . . . .	29
	Loading and Unloading Media . . . . .	32
	Loading Media . . . . .	32
	Loading Media with Manual Feed Mode . . . . .	33
	Unloading Media . . . . .	35
	Working with Wide Gap Media . . . . .	36
	Working with Reflective Mark Media . . . . .	36
	QuickLabel Services . . . . .	36
	QL-800 Label Materials . . . . .	36
	QuickLabel BPO Blanket Purchase Order Program . . . . .	36
	Media Specialists . . . . .	37
<b>Chapter 2:</b>	<b>QL-800 Overview . . . . .</b>	<b>39</b>
	Printer Part Names and Functions . . . . .	39

Front View . . . . .	39
Back View . . . . .	40
Operation Panel . . . . .	41
LED Indicators . . . . .	42
Color Basics . . . . .	43
Color and Computers . . . . .	43
Color Profiling . . . . .	43
Display Profiling . . . . .	44
QuickLabel QL-800 Color Profiles . . . . .	44
A Profile for Each Device . . . . .	44

## Chapter 3: Designing and Printing Labels . . . . . 45

Designing Labels . . . . .	45
Label Media Type Overview . . . . .	45
Choosing Design Software . . . . .	45
Disabling Anti-aliasing . . . . .	46
Planning Full-Bleed and Non-Bleed Labels . . . . .	46
Setting up the Label Design Software . . . . .	47
Setting up Labels in CQL Pro . . . . .	47
Setting up Labels in Third-Party Design Applications . . . . .	47
Setting up the Printer Driver . . . . .	48
Setting up General Options . . . . .	48
Setting up a Custom Label Size . . . . .	50
Setting up Media Options . . . . .	52
Using Service Options . . . . .	54
Saving and Recalling Driver Settings . . . . .	56
Importing and Exporting Driver Settings . . . . .	58
Setting up the Driver for Full-Bleed Printing . . . . .	60
Printing Labels . . . . .	61
Using the Status Monitor . . . . .	63
Viewing the Printer Status . . . . .	63
Viewing the Job Status and Canceling Jobs . . . . .	64
Viewing Ink and Consumable Levels . . . . .	65
Estimating Ink Use . . . . .	65

## Chapter 4: QL-800 Maintenance Utility . . . . . 67

About the Maintenance Utility . . . . .	67
Printer Information Tab . . . . .	67
Viewing Printer Information . . . . .	67
Upgrading the Printer Firmware . . . . .	68
Setting the Clock . . . . .	69
Print Settings Tab . . . . .	70
Setting the Vertical Baseline . . . . .	70
Setting the Horizontal Baseline . . . . .	71
Setting the Cut/Stop Position . . . . .	72
Setting up External Unwind Mode . . . . .	73
Selecting a Transport Fan Speed . . . . .	74
Cleaning Tab . . . . .	75
Setting up Auto-Maintenance . . . . .	75
Updating Cleaning Procedures . . . . .	76
Cleaning Printheads . . . . .	77
Preparing for Moving . . . . .	77
Preparing for Shipping . . . . .	78



System Logs Tab . . . . .	79
Viewing the Error History . . . . .	79
Saving Log Files . . . . .	79
Parts Replacement Tab . . . . .	80
Replacing the Printhead . . . . .	80
Replacing the Cutter . . . . .	81
Replacing the Aerosol Filter . . . . .	81
Replacing the Maintenance Cartridge . . . . .	82
Replacing the Maintenance Roller . . . . .	83
Advanced Tab . . . . .	83
<b>Chapter 5: Printer Maintenance . . . . .</b>	<b>85</b>
Replacing Ink Cartridges . . . . .	85
Cleaning . . . . .	87
Cleaning the Printer Exterior . . . . .	87
Cleaning the Input Pinch Rollers . . . . .	87
Cleaning the Maintenance Tray Area . . . . .	88
Cleaning the Transport Belts . . . . .	89
Cleaning the Ink Cartridge Contacts . . . . .	90
Cleaning the Printhead Manually . . . . .	92
Powering Up After Extended Downtime . . . . .	93
Upgrading the Printer Driver and Utilities . . . . .	94
Upgrading the Print Module Firmware . . . . .	94
<b>Chapter 6: Error Messages . . . . .</b>	<b>97</b>
Error 1001 - Paper Path Error . . . . .	97
Solutions . . . . .	97
Error 1002 - No Media at Pinch . . . . .	97
Solutions . . . . .	97
Error 1003 - Unwind too Slow . . . . .	98
Solutions . . . . .	98
Error 1004 - Unwind too Fast . . . . .	99
Solutions . . . . .	99
Error 1005 - Out of Media . . . . .	99
Solutions . . . . .	99
Error 1006 - Cutter Jam . . . . .	99
Solutions . . . . .	99
Error 1007 - Reserved . . . . .	101
Error 1008 - Continuous Media Selected . . . . .	101
Solutions . . . . .	101
Error 1009 - Can't Calibrate Media . . . . .	102
Solutions . . . . .	102
Error 100A - Main Side Door Open . . . . .	102
Solutions . . . . .	102
Error 100B - Top Cover Open . . . . .	103
Solutions . . . . .	103
Error 100C - Maintenance Cartridge Missing . . . . .	105
Solutions . . . . .	105
Error 100D - Transport not Installed . . . . .	105
Solutions . . . . .	105
Error 100E - Belt Motor Stall . . . . .	105
Solutions . . . . .	105
Error 100F - Pinch Motor Stall . . . . .	106

Solutions . . . . .	106
Error 1010 - Can't Start Vacuum Fans . . . . .	106
Solutions . . . . .	106
Error 1011 - Unwind Over Current . . . . .	106
Solutions . . . . .	106
Error 1012 - TOF Mark not Found . . . . .	107
Solutions . . . . .	107
Error 1013 - Internal Error . . . . .	107
Solutions . . . . .	107
Error 1014 - Internal Error . . . . .	107
Solutions . . . . .	107
Error 1015 - Internal Error . . . . .	108
Solutions . . . . .	108
Error 1016 - Can't Tighten Unwind . . . . .	108
Solutions . . . . .	108
Error 1017 - Print Engine Start Timeout . . . . .	108
Solutions . . . . .	108
Error 1018 - Reserved . . . . .	109
Error 1019 - Reserved . . . . .	109
Error 101A - TOF Calibration . . . . .	109
Solutions . . . . .	109
Error 101D - Not Printing Timeout . . . . .	109
Solutions . . . . .	109
Error 1020 - Shared Memory Read Timeout . . . . .	109
Solutions . . . . .	109
Error 1021 - Shared Memory Write Timeout . . . . .	110
Solutions . . . . .	110
Error 1022 - Shared Memory Response Timeout . . . . .	110
Solutions . . . . .	110
Error 1023 - System Initialization Timeout . . . . .	111
Solutions . . . . .	111
Error 1024 - Unexpected Engine Response . . . . .	111
Solutions . . . . .	111
Error 1025 - Shutdown Timeout . . . . .	111
Solutions . . . . .	111
Error 1030 - Can't Erase EEPROM . . . . .	112
Solutions . . . . .	112
Error 1031 - Can't Program EEPROM . . . . .	112
Solutions . . . . .	112
Error 1032 - Invalid EEPROM Checksum . . . . .	112
Solutions . . . . .	112
Error 1038 - Upgrade Failure . . . . .	113
Solutions . . . . .	113
Error 1039 - Upgrade Failure . . . . .	113
Solutions . . . . .	113
Error 103A - Upgrade Failure . . . . .	114
Solutions . . . . .	114
Error 1040 - Failed to Read Job Status . . . . .	114
Solutions . . . . .	114
Error 1042 - Can't find Job Parameter . . . . .	114
Solutions . . . . .	114
Error 1043 - Can't find Job Parameter . . . . .	115
Solutions . . . . .	115
Error 1044 - Can't find Job Parameter . . . . .	115

Solutions . . . . .	115
Error 1045 - Can't find Job Parameter . . . . .	115
Solutions . . . . .	115
Error 1046 - Can't find Job Parameter . . . . .	116
Solutions . . . . .	116
Error 1050 - The Maint Cartridge is Full . . . . .	116
Solutions . . . . .	116
Error 1051 - Not ready to print . . . . .	117
Solutions . . . . .	117
Error 2001 - Faulty Printhead . . . . .	117
Solutions . . . . .	117
Error 2002 - Incorrect Printhead . . . . .	118
Solutions . . . . .	118
Error 2003 - Printhead Missing . . . . .	118
Solutions . . . . .	118
Error 2004 - Unlicensed Printhead . . . . .	118
Solutions . . . . .	118
Error 2005 - Unusable Printhead . . . . .	119
Solutions . . . . .	119
Error 2006 - Printhead Unprimed . . . . .	119
Solutions . . . . .	119
Error 2007 - Maintenance Busy . . . . .	120
Solutions . . . . .	120
Error 2008 - 1000 Series Error Occurred . . . . .	120
Error 2009 - Maintenance Jam . . . . .	120
Solutions . . . . .	120
Error 200A - Black Cartridge is Missing . . . . .	122
Solutions . . . . .	122
Error 200B - Magenta Cartridge is Missing . . . . .	122
Solutions . . . . .	122
Error 200C - Yellow Cartridge is Missing . . . . .	123
Solutions . . . . .	123
Error 200D - Cyan Cartridge is Missing . . . . .	123
Solutions . . . . .	123
Error 200E - Multiple Cartridges are Missing . . . . .	123
Solutions . . . . .	123
Error 200F - Black Ink Out . . . . .	123
Solutions . . . . .	123
Error 2010 - Magenta Ink Out . . . . .	124
Solutions . . . . .	124
Error 2011 - Yellow Ink Out . . . . .	124
Solutions . . . . .	124
Error 2012 - Cyan Ink Out . . . . .	124
Solutions . . . . .	124
Error 2013 - Multiple Inks Out . . . . .	124
Solutions . . . . .	124
Error 2014 - Missed TOF . . . . .	125
Solutions . . . . .	125
Error 2015 - Page Sequence Error . . . . .	125
Solutions . . . . .	125
Error 2016 - Cartridge Error . . . . .	125
Solutions . . . . .	125
Error 2017 - Encoder Error . . . . .	125
Error Occurs Prior to Media Moving . . . . .	125

	Error Occurs During Printing . . . . .	126
	Error 2100 - Unspecified Paper Path . . . . .	127
	Solutions . . . . .	127
	Error 3XXX - Software Communication Error . . . . .	127
	Solutions . . . . .	127
<b>Chapter 7:</b>	<b>Troubleshooting . . . . .</b>	<b>129</b>
	Removing a Media Jam . . . . .	129
	Removing a Media Jam in the Input Pinch Rollers . . . . .	132
	Removing a Media Jam in the Transport Unit . . . . .	133
	Removing a Media Jam in the Transport Area Inside the Printer . . . . .	135
	Known Issues . . . . .	137
	Printing Variable Data on Continuous Media Results in Blank Media	
	Feeding . . . . .	137
	Color Shifts or Drops Out During Printing . . . . .	137
	Powering On with the Main Side Door Open Results in Incomplete	
	Initialization . . . . .	137
	Resolving Windows 7/8/10 USB Installation Issues . . . . .	138
	Resolving USB Communication Issues . . . . .	140
	Identifying and Resolving Priming Problems . . . . .	142
	Addressing Data Starvation . . . . .	143
<b>Chapter 8:</b>	<b>Rewinder . . . . .</b>	<b>145</b>
	Before Installing the Rewinder . . . . .	145
	Installing the Rewinder . . . . .	146
	Installing the Rewinder when using the External Unwinder . . . . .	147
	Rewinding Labels . . . . .	148
<b>Chapter 9:</b>	<b>External Unwinder . . . . .</b>	<b>151</b>
	Before Installing the External Unwinder . . . . .	151
	Installing the External Unwinder . . . . .	152
	Unwinding Labels with the External Unwinder . . . . .	155
<b>Chapter 10:</b>	<b>Shipping Precautions . . . . .</b>	<b>157</b>
	Use the Before Shipping Feature . . . . .	157
	Pack the Printer Carefully . . . . .	157
<b>Chapter 11:</b>	<b>Safety Warnings and Precautions . . . . .</b>	<b>159</b>
	Location . . . . .	159
	Power Supply and Power Cord . . . . .	160
	General Safety . . . . .	160
	Moving the Printer . . . . .	161
	Ink Cartridge and the Maintenance Cartridge . . . . .	162
<b>Chapter 12:</b>	<b>Specifications . . . . .</b>	<b>163</b>
	Printer Specifications . . . . .	163
	Label Specifications . . . . .	166
	<b>Index . . . . .</b>	<b>169</b>

# 1

## Getting Started

### About the QL-800

When you start printing your own labels in your office or factory with the QL-800 from QuickLabel, you'll stop production delays and reduce excess inventory. You will achieve flexibility and cost-savings because you are digitally printing the right label for the right customer in the right quantity, just-in-time.



As a true digital printer, the QL-800 easily prints labels with any text, barcode, or graphics in affordable small batches, perfect for labeling multiple different products or labeling for different wholesale customers. The QL-800 is the best tool for customizing your product labels in affordable small quantities.

- Fast print speed, up to 305 mm/s
- Excellent print quality up to 1600 dpi
- High-yield, vivid inks
- Complete with color labeling software

The QL-800 is designed with all the power of a high-end digital label printing press, but it's sold at just a fraction of the price and fits on your desk or tabletop. The QL-800 is a versatile, in-house digital color label printer that prints both labels in a range of widths at high speeds, and in high-quality.

The QL-800 makes great-looking labels that perform well even in challenging conditions. Your products will look appealing and professional, with bright, vivid inks that reproduce a wide gamut of colors. Genuine QL-800 inks are available in large capacity, high-yield separate cyan, magenta, yellow, and black (CMYK) cartridges.

## Installation and Setup Overview

Refer to the installation and setup summary for an outline of the required steps.

- 1   Unpack the printer. *See “Unpacking the Printer” on page 19.*
- 2   Ensure all parts are included. *See “Checking the Included Parts” on page 21.*
- 3   Before installing the printer, select an appropriate location and ensure system requirements are met.
  - *See “Choosing an Installation Location” on page 22.*
  - *See “Installation Precautions” on page 23.*
  - *See “System Requirements” on page 23.*
- 4   Connect the power cable to the printer. Switch the printer power on. *See “Powering On” on page 23.*
- 5   Install the printer driver.
  - *See “Installing the Printer Driver (USB)” on page 24.*
  - *See “Installing the Printer Driver (Network)” on page 25.*
- 6   Use the After Shipping wizard in the QL-800 Maintenance Utility. *See “Using the After Shipping Wizard” on page 26.* This wizard will guide you through the following actions.
  - Foam support block removal - *See “Preparing the Maintenance Roller” on page 27.*
  - Ink cartridge installation - *See “Installing Ink Cartridges” on page 28.*
  - Printhead installation - *See “Installing the Printhead” on page 29.*
- 7   Load media. *See “Loading Media” on page 32.*


## Unpacking the Printer

The printer is secured using packing tape and cushioning materials to protect it against vibrations and shock during transportation. Use the following procedure to unpack the printer. Keep the packing materials for future transportation.

**Note:** If you open the top cover of the printer, you will see a foam block installed over the maintenance roller. You will remove this block later when using the After Shipping Wizard to prepare the maintenance roller, install ink cartridges, and install the printhead. See “Using the After Shipping Wizard” on page 26.


- 1 Remove the packing straps from the shipping carton. Cut the tape securing the top of the carton. Then open the top of the carton.
- 2 Remove the accessory box and packing materials from the shipping carton.
- 3 Lift the shipping carton off the printer and shipping pallet.
- 4 With help from another person, lift the printer off the shipping pallet.

**Caution:** The printer is heavy and moving it requires two people. One person should lift the front by the indicated lift point, while the other person should lift the back by the indicated lift point. Do not lift the printer by the mandrel. Lift the front of the printer by the recessed handle. Lift the rear of the printer by the flat area of the purple frame above the mandrel. Keep the printer level while lifting it.

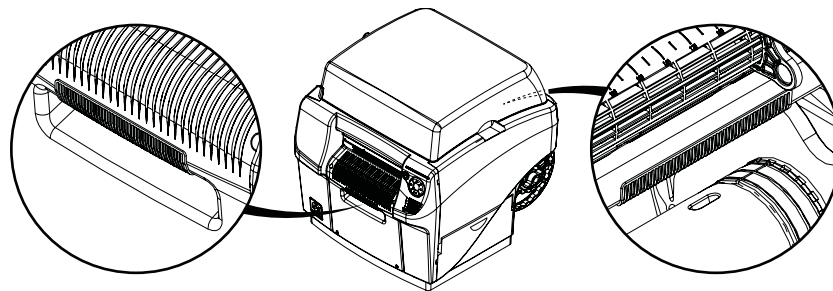


- 5 Place the printer on a sturdy, flat horizontal surface that can support at least 100 pounds (45.4 kilograms).
- 6 Remove all packing tape from the printer exterior. This tape is used to secure the doors and covers in place.

There is also tape holding the maintenance cartridge in place. Open the main side door and lower side door to access and remove this tape.

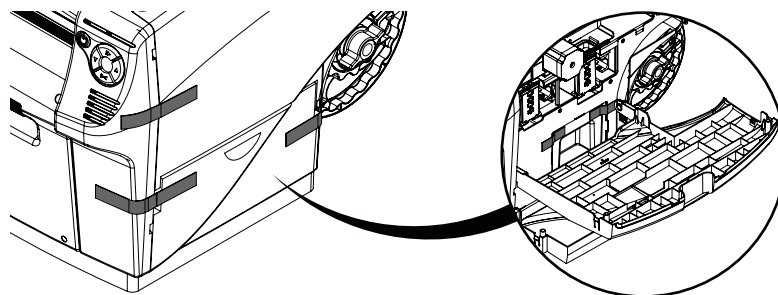


- 7 With the main side door open, remove the yellow transport unit shipping lock by rotating it counterclockwise approximately 45 degrees, aligning it, and then pulling it straight out. Save the lock for future shipping purposes.

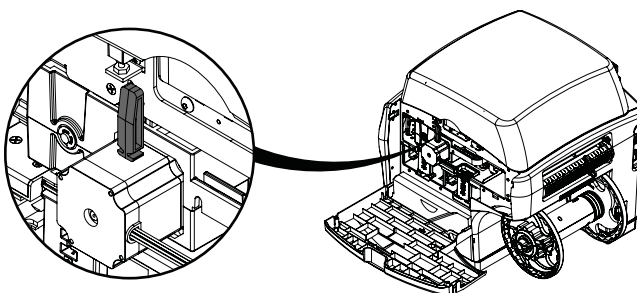


**Note:** The printer will function with the transport shipping lock installed. However, the transport unit cannot be removed while the lock is in place.

- 8 Grasp the transport unit handle and pull the transport unit straight out of the printer.

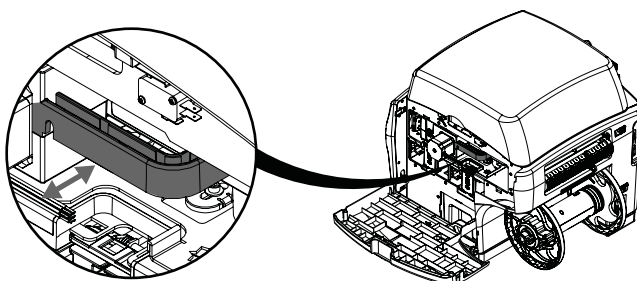


An absorbent pad is positioned above the transport unit for shipping. Remove this pad.

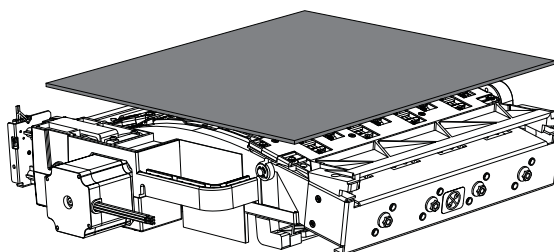

- 9 Reinstall the transport unit. Ensure it is fully inserted in the printer.
- 10 Close the main side door but leave the lower side door open.



- 11** Grasp the maintenance cartridge and pull it straight out of the printer. Then reinstall the maintenance cartridge. Ensure it is fully inserted in the printer.

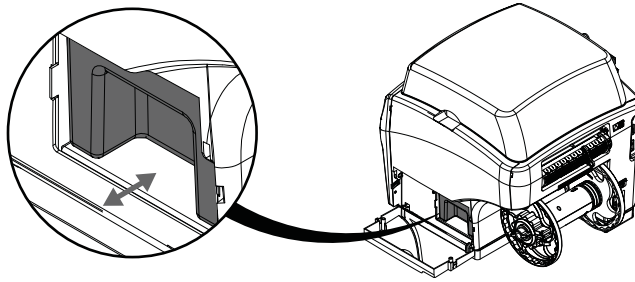

- 12** Close the lower side door.

## Checking the Included Parts

Check to make sure the following items are included with the printer.


- Power cable
- USB cable (do not connect until prompted during driver installation)
- Printhead
- Four ink cartridges (one for each color)
- Installation CD

## Before Installing the Printer

### Choosing an Installation Location

The installation environment must be as described in this section.


- The printer power cord must be able to connect to an outlet (100V - 240V AC). This outlet must be easily accessible.
- Avoid installing the printer near a faucet, water heater, humidifier, or refrigerator.
- Ensure the environment temperature is within 41 to 95 degrees Fahrenheit (5 to 35 degrees Celsius). For optimal print quality, an environment temperature of approximately 73 degrees Fahrenheit (23 degrees Celsius) is recommended.
- Ensure the environment humidity is within 20% to 80% (non-condensing) relative humidity. For optimal print quality, a relative humidity of approximately 60% is recommended.
- Avoid placing the printer in areas exposed to high temperature and humidity, extremely low temperature, severe temperature changes, or direct sunlight. Especially, avoid placing the printer near fire, outdoors, in distribution warehouses, or in refrigerated areas.
- Avoid installing the printer in areas subject to dust.
- The room must be properly ventilated.
- No printer feet should float. The printer must be held level constantly.
- When placing the printer on a desk, table, or other similar surface, it must be sturdy and stable enough to support the weight of the printer. The table must be rated for a minimum of 100 pounds.
- The minimum space required for installation and maintenance is shown below.

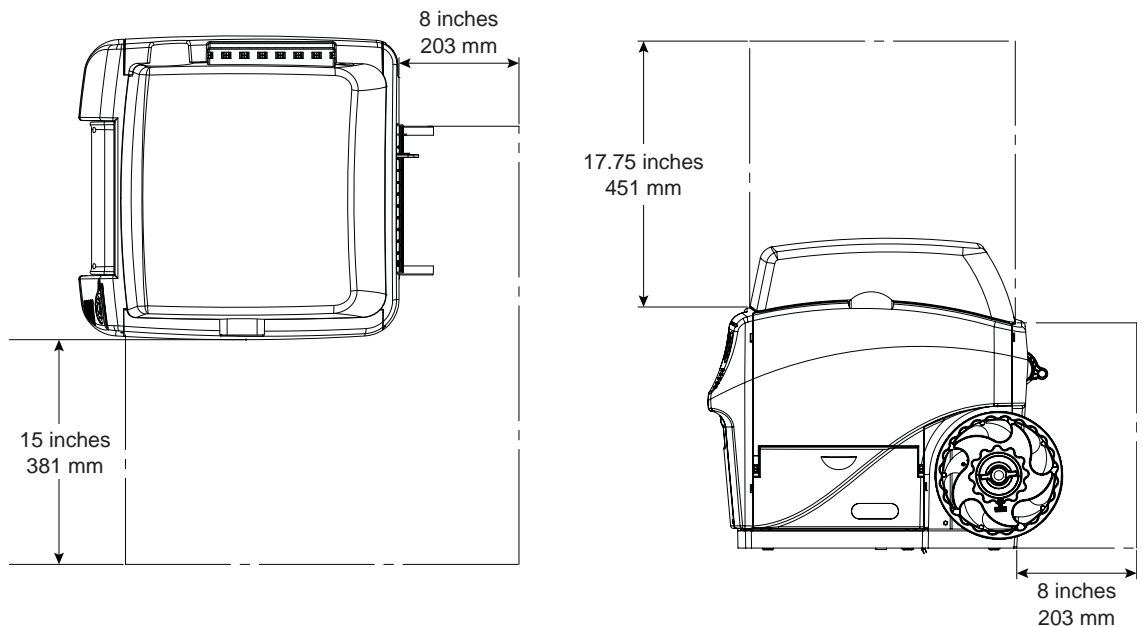

## Installation Precautions

When installing the printer, observe the following precautions.

- Imaging faults can result from dew condensation that occurs when the printer is moved from a cold place to a warm place. Leave the unpacked printer as is for at least two hours before installing it.
- The printer is heavy and moving it requires two people. One person should lift the front by the indicated lift point, while the other person should lift the back by the indicated lift point. Do not lift the printer by the mandrel. Lift the front of the printer by the recessed handle. Lift the rear of the printer by the flat area of the purple frame above the mandrel. Keep the printer level while lifting it.

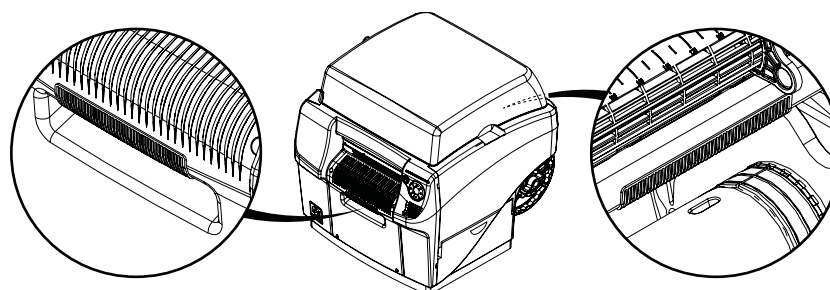


- The printer has rubber feet that help secure the printer and prevent accidental movement. When moving the printer on the installation surface, apply slight upward lifting pressure. Dragging the printer may result in damage to the rubber feet.

## System Requirements

- Windows® 10/8/7
- Microsoft .NET Framework 3.5 SP1
- 350 MB free hard drive space
- CD/DVD drive (or Internet connection)
- One available USB 2.0 port for USB installation *or* network connectivity for network installation

## Powering On

- 1 Connect the power cable to the printer power inlet [1]. Connect the other end of the power cable to the power source. Then turn on the power via the power inlet switch [2].

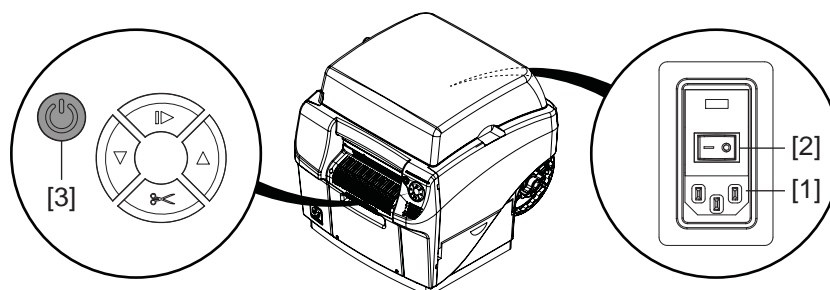

- 2 Press and hold the power key [3] for one second to turn the printer on.

The printer will begin the power-up process, including opening the printhead latch, and the green LED will flash momentarily. When the green LED stops flashing and remains on, the printer will be ready to use.

**Note:** The red error LED will be on until you use the After Shipping wizard later in this guide.

**Note:** If the printer is on, you can press and hold the power key [3] for three seconds to turn it off.

**Related Topics:**

- "Powering Up After Extended Downtime" on page 93

## Installing the Printer Driver

### Installing the Printer Driver (USB)

- 1 Ensure the QL-800 is powered on but **not** connected to your PC via the USB cable.

**Important:** Do not connect the USB cable until prompted later in this procedure.

- 2 Power on your PC and insert the QL-800 Installer CD in the CD drive. The Installer CD wizard will open. Choose **Install Driver**.

If the autorun program does not start automatically, use Windows Explorer to launch the "Setup.exe" file located on the CD.

**Note:** If you do not have a CD drive, you can obtain the software from [www.QuickLabel.com/downloads](http://www.QuickLabel.com/downloads).


- 3 Choose **Install Printer Software**. The software installation wizard will start.

**Note:** If the Windows logo testing or publisher verification warning messages appear during installation, choose to continue the installation.

- 4 When prompted to select a printer connection method, choose **Configure to print using USB**. Then choose **Next**.

**Note:** A USB configuration is required for the initial installation. You can later install the printer as a network printer.

- 5 When prompted, connect the QL-800 to your PC with a USB cable. The installation will continue once the USB connection is made.

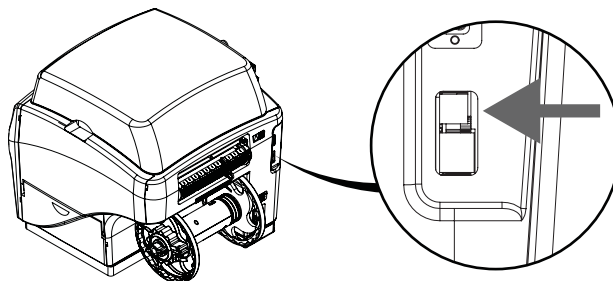

6 When prompted, select whether the QL-800 will be set as the default printer.

7 Choose **Finish**.

**Related Topics:**


- "Resolving Windows 7/8/10 USB Installation Issues" on page 138

## Installing the Printer Driver (Network)

Use the following instructions to install the printer via a network connection.

For detailed information about the topic of networking, refer to documentation applicable to your network environment and/or contact your network administrator.

1 Ensure the QL-800 is powered on and connected to the network via a LAN cable.

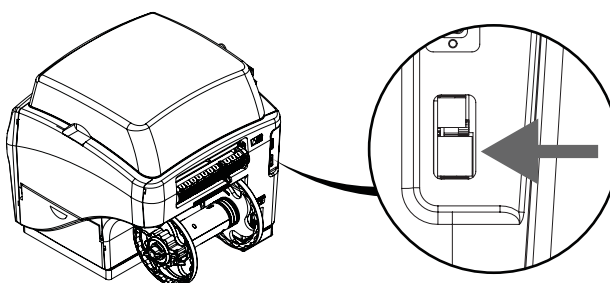

2 Power on your PC and insert the QL-800 Installer CD in the CD drive. The Installer CD wizard will open. Choose **Install Driver**.

If the autorun program does not start automatically, use Windows Explorer to launch the "Setup.exe" file located on the CD.

**Note:** If you do not have a CD drive, you can obtain the software from [www.QuickLabel.com/downloads](http://www.QuickLabel.com/downloads).

3 Choose **Install Printer Software**. The software installation wizard will start.

**Note:** If the Windows logo testing or publisher verification warning messages appear during installation, choose to continue the installation.

4 When prompted to select a printer connection method, choose **Configure to print over the network**. Then choose **Next**.

5 When prompted, view the list of printers discovered on your network.

- If your QL-800 printer is on the list, select it.
- If your QL-800 printer is not on the list, choose **Other Printer**. You can search for the printer by entering its IP address. See "Changing Printer Networking Settings" on page 26. When the printer is found, select it.

With your QL-800 printer selected, choose **Next**.

6 When prompted, select whether the QL-800 will be set as the default printer.

7 Choose **Finish**.

## Changing Printer Networking Settings

You can view and change printer networking settings with the QL-800 Toolbox application. This application is available in the following situations:

- Your PC is connected to the printer via USB and the driver software has been installed for USB printing.
- Your PC is connected to the printer via the network and the driver software has been installed for network printing.

The QL-800 Toolbox application allows you to enable/disable DHCP and change the IP address of the printer.

**Note:** Some QL-800 Toolbox features are not supported. Use only the features described in this procedure.

- 1 Open the QL-800 Toolbox application from a PC connected to the printer via USB.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > Toolbox**.

A web browser will open and display the QL-800 Toolbox application.

- 2 Choose the **Diagnostics** link to display the Diagnostics information.

The IP address for the printer is displayed on this page. Note the IP address for reference purposes.

- 3 If the IP address does not appear, or you would like to change the IP address, choose the **Network Config** link. Network configuration information will be displayed.

- If you would like to automatically assign a new IP address based on DHCP, select the **dhcp** and **autoip** options. Then choose **Submit**.
- If you would like to assign a specific IP address, ensure the **dhcp** and **autoip** options are not checked. Enter the new IP address in the **ip\_address** field and choose **Submit**.

- 4 Choose the **Diagnostics** link to return to the Diagnostics information. Confirm the network settings before exiting the application.

Close the web browser to exit the QL-800 Toolbox application.

## Using the After Shipping Wizard

After installing the driver, the QL-800 Maintenance Utility will be available for use. You will use the After Shipping wizard in this utility to prepare the maintenance roller, install ink cartridges, and install the printhead.

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Cleaning** tab.


3 Choose **After Shipping**. Follow the on-screen instructions to complete this procedure. This wizard will guide you through the following actions.

- Preparing the Maintenance Roller - See *"Preparing the Maintenance Roller" on page 27.*
- Installing Ink Cartridges - See *"Installing Ink Cartridges" on page 28.*
- Installing the Printhead - See *"Installing the Printhead" on page 29.*

## Preparing the Maintenance Roller

A foam block is installed over the maintenance roller to protect it during shipping. Use the following instructions to remove this foam block.


1 Open the top cover and remove the cinch strap [1].

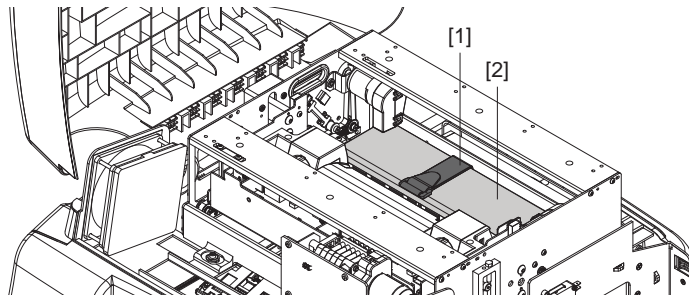

2 Remove the foam support block [2] from the printer. Use caution when removing the block to avoid dislodging the maintenance roller assembly.

Save the foam support block and strap for future shipping purposes.

3 Verify that the maintenance roller assembly is level and installed properly. Make sure both ends of the roller are snapped into place.

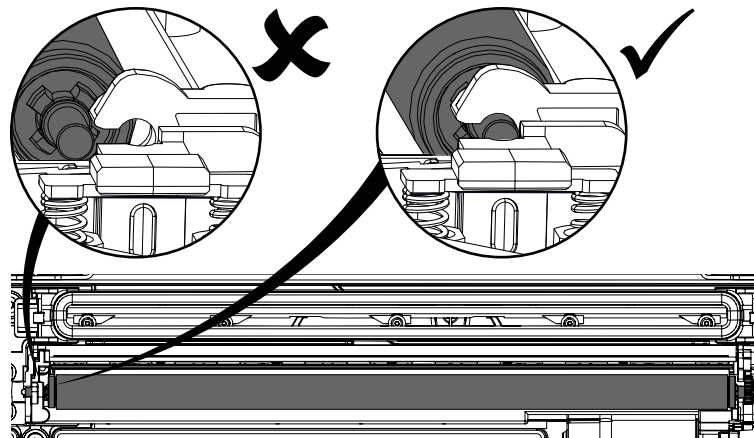


## Installing Ink Cartridges

Use the following instructions to install ink cartridges.

**Danger:** For safety, keep ink cartridges out of the reach of children. If ink is accidentally ingested, contact a physician immediately.

- 1 Open the main side door. Open both ink cartridge latches [1]. Each latch can be opened by pressing down on the top of the locking mechanism and pulling outward.

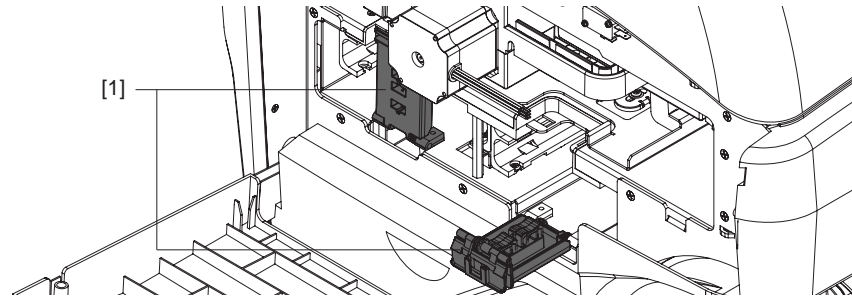


The ink cartridge latches have labels showing where each ink color will be installed.

- 2 Remove the four absorbent pads from the ink cartridge slots. Save the pads for future shipping purposes.
- 3 Slide in the ink cartridge, nozzle end first, label side up. Push the cartridge in all the way.

You will feel slight resistance near the end of this process as the nozzle engages the ink needles inside the printer. Repeat this step for each color.

**Caution:** There are sharp needles in the ink cartridge slot. Never put your fingers in this area.

**Note:** The printer is designed so that ink cartridges cannot be inserted in the wrong slots. Do not attempt to insert ink cartridges in the wrong slots.

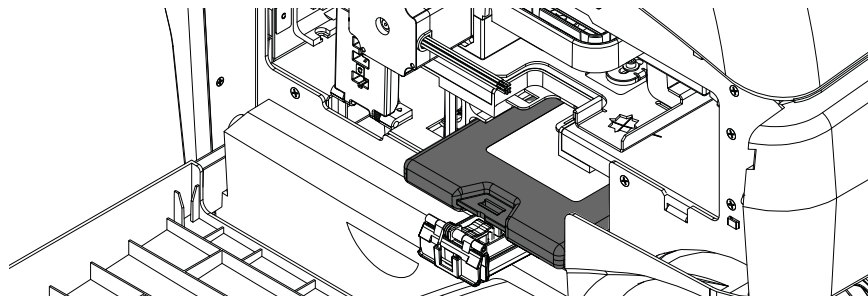

- 4 Close the ink cartridge latches. Then close the main side door.



## Installing the Printhead

Use the following instructions to install the printhead.


**Caution:** The printhead is sensitive to electrostatic discharge (ESD). Use ESD protection when handling the printhead.

**Caution:** Do not touch the printhead cartridge ink couplings, nozzle surface, or the electrical contacts when installing the printhead cartridge. Hold the printhead cartridge **ONLY** by the handles.

**Caution:** To avoid drying out the printhead, do not open the printhead packaging until you are ready to use it.

**Caution:** Open the printhead packaging over an appropriate receptacle to safely capture any excess shipping fluid.

- 1 Ensure the printer is powered on and the ink cartridges have been installed.
- 2 Open the top cover.
- 3 Make sure the printhead latch [1] is in the open (vertical) position. Remove the cap protectors [2] from the two fluidic couplings.

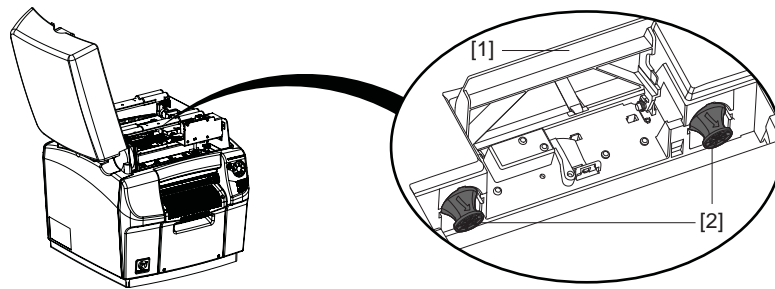

**Note:** The printhead latch will be in the open position. Do not close the latch before installing the printhead. If the latch is accidentally closed, do not pry it open. Turn the printer off and back on again. The latch automatically opens during power up if no printhead is installed.


- 4 Remove the printhead from the packaging.

**Note:** If the foil packing is damaged, report the issue to Technical Support or your reseller.


**Caution:** Do not place the unprotected printhead cartridge on any surface. Protect the printhead cartridge at all times from contamination such as dust or fibers.

- 5 Wipe any excess shipping fluid from the printhead cartridge with a clean, lint-free cloth.

- 6 Remove the orange protective plastic cover from the printhead cartridge, holding the printhead by the handle.
- Remove the flaps covering the ink ports.
  - Remove the clip holding the cover near the center of the printhead cartridge.
  - Carefully remove the protective cover. Do not touch any of the ink ports or nozzle plate after the orange cover is removed.

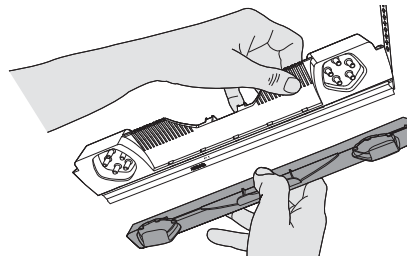


- 7 Hold the printhead cartridge by the handle with one hand. Carefully remove the protective plastic strips with the other hand.
- Grasp the pull tab and slowly peel back the plastic strip covering the electrical contacts.
  - Grasp the pull tab and slowly peel back the plastic strip covering the printhead nozzles. Maintain an angle of no less than 45 degrees with the printhead surface when pulling on the strip.

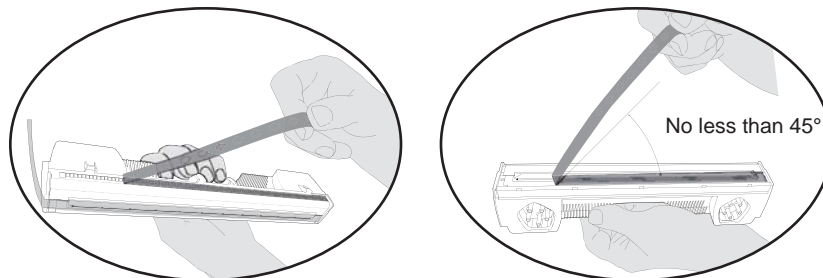


**Caution:** Dispose of the removed strips immediately and do not allow the removed strips to touch the electrical contacts or printhead nozzles.

- 8 Carefully remove the plastic bracket from the printhead cartridge.

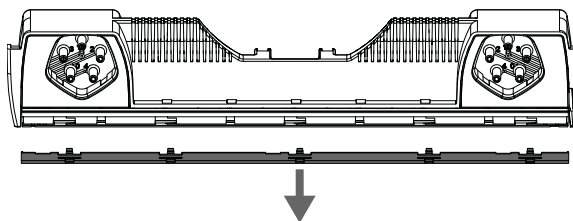


- 9 Point the ink ports away from the front (label exit side) of the printer.
- 10 Align the printhead cartridge with the printhead slot.

- 11 Tilt the top of the printhead cartridge toward the back of the printer, about 20 degrees. Then gently place the back of the printhead cartridge into the print engine.

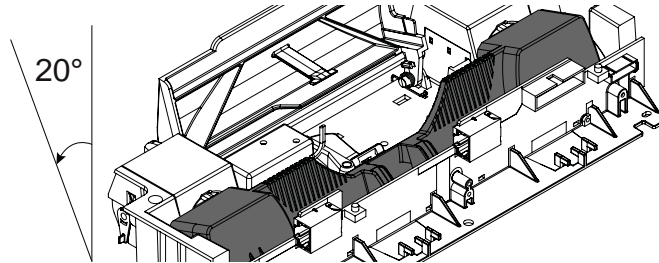


**Caution:** Avoid touching the printhead connector circuit board inside the printer.

- 12 When the back of the printhead is firmly in place, gently rotate the printhead cartridge forward into position against the stops on the printhead connector circuit board.

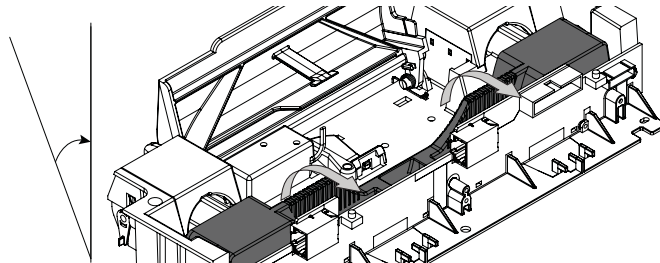

**Caution:** If the printhead will not rotate into position, do not force it. Remove the printhead and try again.


- 13 Slowly close the printhead latch. The fluidic couplings should advance and seal to the printhead cartridge.

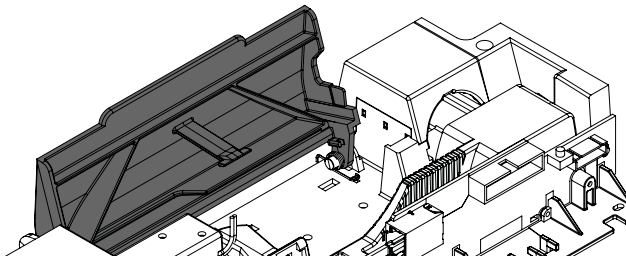

**Caution:** If the latch will not close, do not force it. Remove the printhead and try again.

- 14 Close the top cover.
- 15 Finish the After Shipping wizard in the QL-800 Maintenance Utility.

- 16 Open the top cover and verify that ink has filled all of the five tubes shown below.

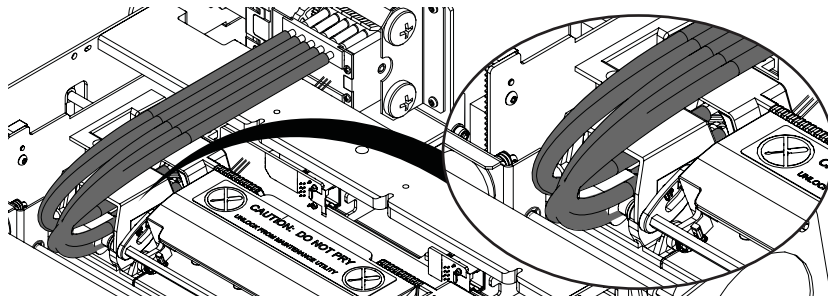

**Caution:** If ink is not visible in all of the indicated tubes, contact Technical Support. Do not run the After Shipping Wizard in the QL-800 Maintenance Utility again or an ink overflow may occur.


- 17 Close the top cover.

## Loading and Unloading Media

### Loading Media


**Note:** If you are using gap media with wide gaps between labels, special handling instructions may apply. See [“Working with Wide Gap Media”](#) on page 36.

- 1 Turn the wing nut [1] on the end of the mandrel counterclockwise to loosen the mandrel.

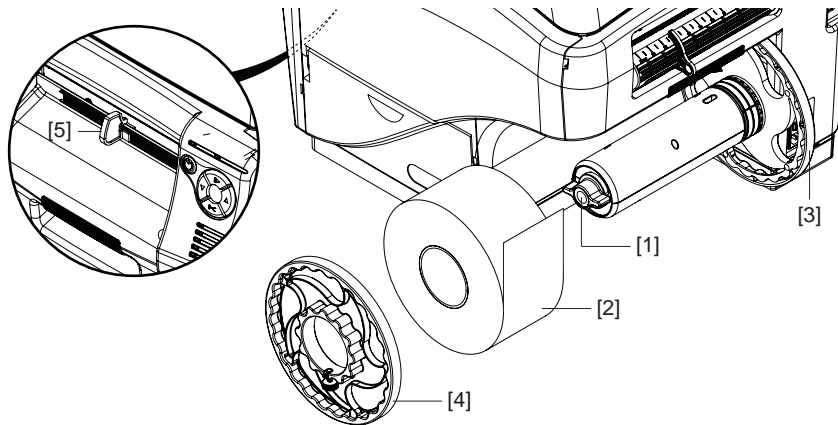

- 2 Loosen the fastener on the outer flange [4]. Then remove the outer flange from the mandrel.
- 3 Orient the media roll [2] as illustrated and put it on the mandrel. Make sure the roll makes contact with the inner flange [3].
- 4 Turn the wing nut [1] on the end of the mandrel clockwise until you feel resistance. This secures the roll in place.
- 5 Put the outer flange [4] on the mandrel. Make sure the outer flange makes contact with the roll [2].

- 6 Tighten the fastener on the outer flange [4] until you feel resistance. This secures the outer flange in place.
- 7 On the front of the printer, slide the media exit guide [5] all the way to the right toward the control panel. You can adjust this guide before printing.
- 8 Place the media near the entry slot and slide the adjustable media guide [6] to the width of the media. The edges of the media should lightly contact the edges of the fixed media guide [7] and the adjustable media guide [6].

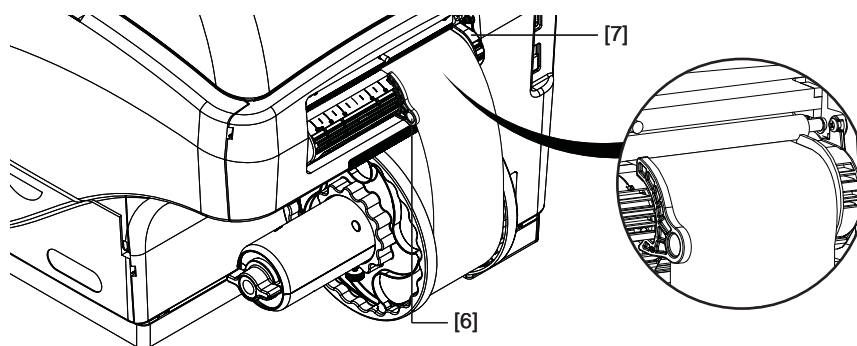


- 9 Slowly guide the media into the printer as illustrated. You will feel slight resistance as the media enters the roller area. Make sure there is no excessive slack in the media during this process.
- 10 The printer will beep three times to indicate the media has been detected. Release the media when the printer starts automatically feeding it into the printer. The printer will feed media and the loading process will be complete.

## Loading Media with Manual Feed Mode

In most cases, the standard media loading procedure is the best method for installing a label roll. If you experience multiple failures using the standard method, use the alternate method described in this section.


**Note:** This procedure applies only to printers with firmware version 1.1 or later.

- 1 Turn the wing nut [1] on the end of the mandrel counterclockwise to loosen the mandrel.

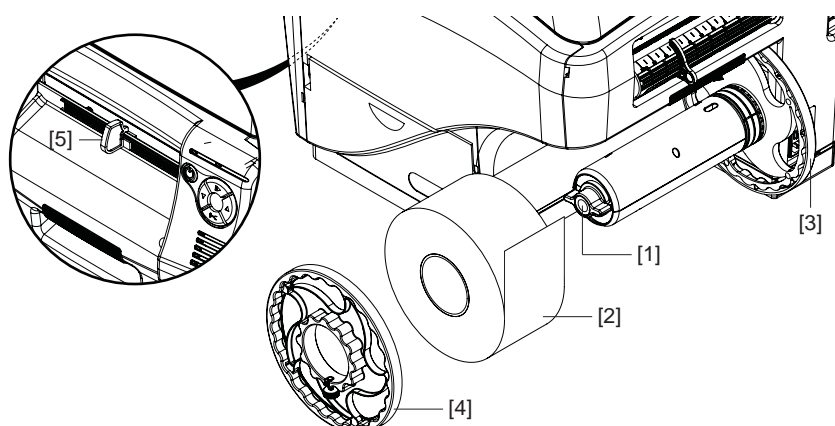


- 2 Loosen the fastener on the outer flange [4]. Then remove the outer flange from the mandrel.

- 3 Orient the media roll [2] as illustrated and put it on the mandrel. Make sure the roll makes contact with the inner flange [3].
- 4 Turn the wing nut [1] on the end of the mandrel clockwise until you feel resistance. This secures the roll in place.
- 5 Put the outer flange [4] on the mandrel. Make sure the outer flange makes contact with the roll [2].
- 6 Tighten the fastener on the outer flange [4] until you feel resistance. This secures the outer flange in place.
- 7 On the front of the printer, slide the media exit guide [5] all the way to the right toward the control panel. You can adjust this guide before printing.
- 8 Open the top cover. This step deactivates the automatic media loading feature.
- 9 Place the media near the entry slot and slide the adjustable media guide [6] to the width of the media. The edges of the media should lightly contact the edges of the fixed media guide [7] and the adjustable media guide [6].

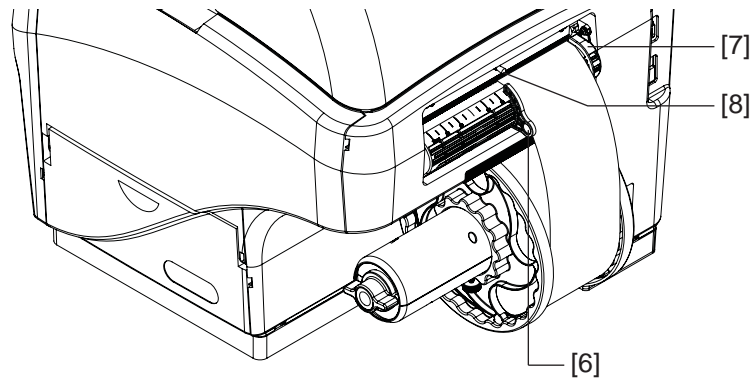

- 10 Lift the roller handle [8] to open the input pinch rollers.
- 11 Slowly guide the media into the printer as illustrated. Advance the media until it stops. The media will be positioned under the first star wheel on the transport unit. Make sure there is no excessive slack in the media during this process.

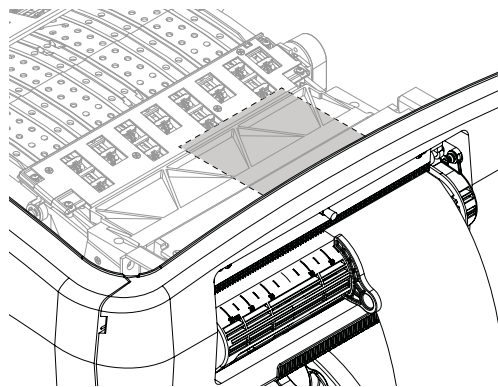


- 12 Release the roller handle [8] to close the input pinch rollers.

- 13 Close the top cover. The printer will feed media as needed and the media loading process will be complete.

**Note:** If the manual media feeding process fails, the media will be ejected back out of the printer.


## Unloading Media

- 1 Press and hold the back-feed key. The printer will back-feed media.

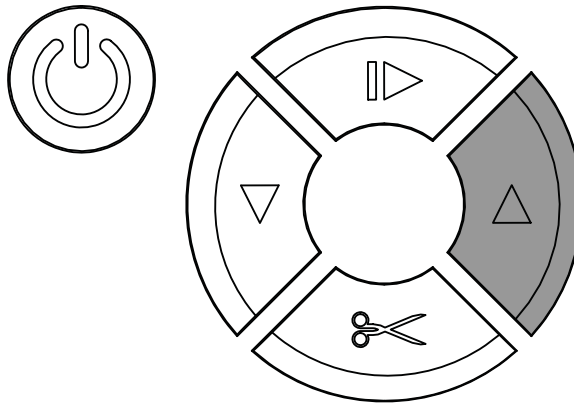

When the media has almost exited the back of the printer, back-feeding will stop and the printer will beep once. This confirmation tone alerts you that media is about to be unloaded.

- 2 To continue and unload media, press and hold the back-feed key again. Media will back-feed fully out of the printer.
- 3 Loosen the captive fastener on the outer flange [1]. Then remove the flange from the mandrel.

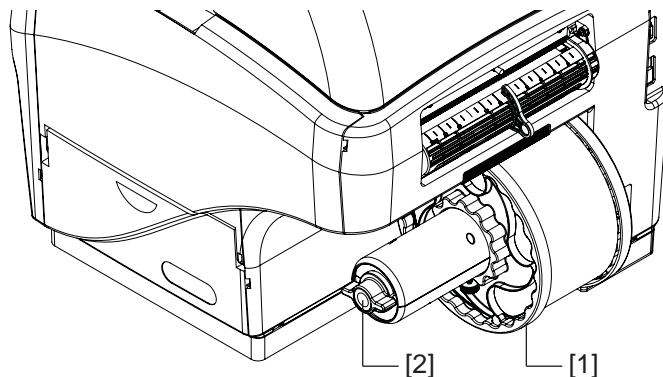

- 4 Turn the wing nut [2] on the end of the mandrel counterclockwise to loosen the mandrel. Loosen the wing nut until the media roll moves freely.
- 5 Remove the media roll from the mandrel.

## Working with Wide Gap Media

Gap media with wide gaps between labels may require special handling. If the gaps are larger than 0.125 inches (3.175 mm), observe the following guidelines.

- Before loading media, trim excess liner from the leading edge of the media roll. If the leading edge has more than 0.125 inches (3.175 mm) of exposed liner material, it may be difficult to load media properly.
- Adjust the cut/stop position so a leading edge of 0.125 inches (3.175 mm) or less of exposed liner material results after each print job. *See “Setting the Cut/Stop Position” on page 72.*

## Working with Reflective Mark Media

Reflective mark media may require special handling to ensure proper top-of-form calibration. Observe the following guidelines when using reflective mark media.

- Ensure the reflective mark meets the width, length, and density requirements. *See “Label Specifications” on page 166.*
- Before loading media, ensure that the leading edge of the media contains no reflective mark within the first ¼ inch from the cut edge. If any part of the reflective mark is within this area, cut the media directly behind the mark removing the entire mark but as little of the unmarked liner as possible. Then the media can be loaded into the printer without concern for a poor top-of-form calibration.
- If necessary, adjust the vertical offset in the printer driver. Also make sure the reflective sensor type is selected. *See “Setting up Media Options” on page 52.*

# QuickLabel Services

## QL-800 Label Materials

QuickLabel develops QL-800 label printing substrates. We sell cost-effective labels that meet various end-use requirements, including industry and government regulatory labeling standards.

## QuickLabel BPO Blanket Purchase Order Program

As the manufacturer of the QL-800 and the supplies, QuickLabel has the advantage of providing you with lower prices due to production efficiencies. QuickLabel's QL-800 BPO Program covers all of your requirements for printing supplies over a 12-month period. You receive a discounted price for your annual commitment and regular scheduled deliveries based on your production requirements. Customers who take advantage of our BPO program receive maximum savings on all of their ink and blank label purchases!



## Media Specialists

QuickLabel offers the services of our highly trained label experts to advise you on choosing the right label material and on designing label files for custom and special label shapes.

Your personal Media Specialist is available to:

- Provide a point of contact for ongoing development of label materials that may be required for unique labeling applications
- Advise you on expected usage so you can plan purchasing and manage your inventory levels
- Advise you on our convenient blanket orders, which automate shipment of your supplies to your location on dates you specify in advance
- Take your orders for labels and new label shapes
- Take your orders for printer supplies




# 2

## QL-800 Overview


### Printer Part Names and Functions

#### Front View

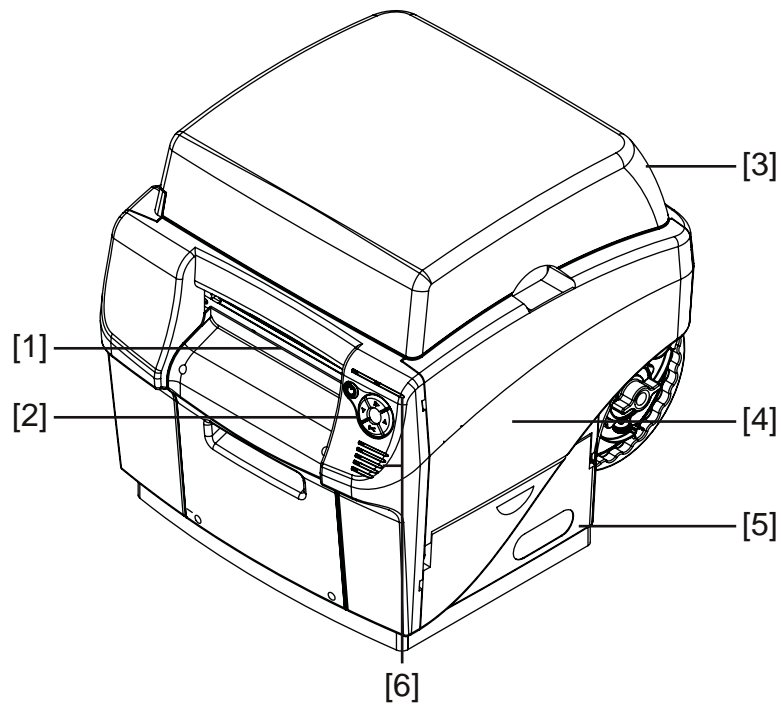


#	Part	Description
1	Media Exit Slot	Printed labels are ejected through this slot.
2	Operation Panel	Use these keys to operate various printer functions.
3	Top Cover	Open this cover to access the printhead.
4	Main Side Door	Open this door to access the transport unit and ink cartridges.
5	Lower Side Door	Open this door to access the maintenance cartridge.
6	LED Indicators	LEDs indicate the status of the printer.

Back View

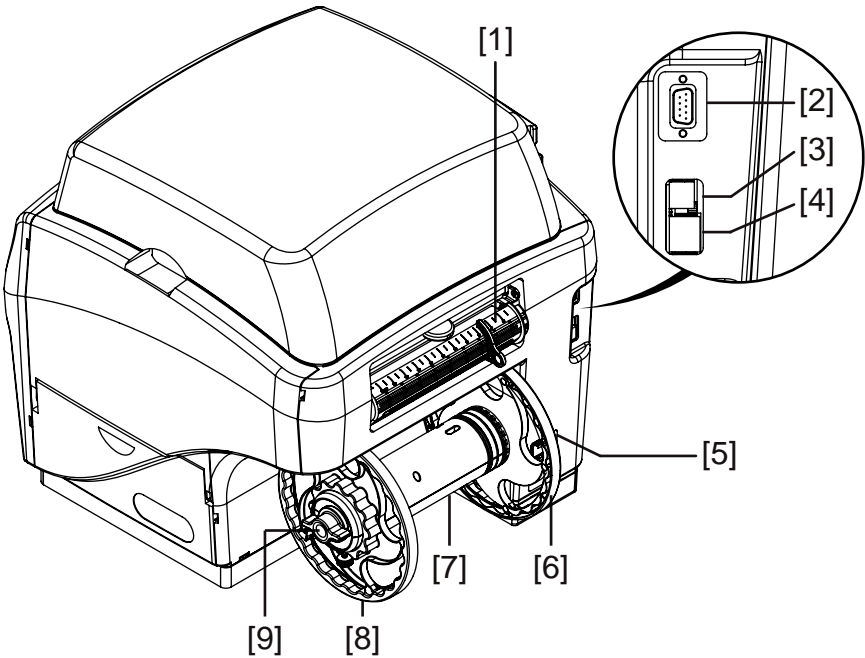

#	Part	Description
1	Media Entry Slot	Media enters the printer through this slot.
2	Reserved	This port is not used. Do not connect to this port.
3	USB Port	Connect the USB cable here when using the USB connection method.
4	LAN Port	Connect the LAN cable here when using the LAN connection method.
5	Power Inlet	Connect the power cord here.
6	Inner Flange	Position the media roll edge so it touches this flange.
7	Mandrel	Install the media roll on the mandrel.
8	Outer Flange	Adjust this flange so it touches the media roll edge opposite the inner flange.
9	Wing Nut	Turn this nut to tighten or loosen the media roll lock on the mandrel.


## Operation Panel

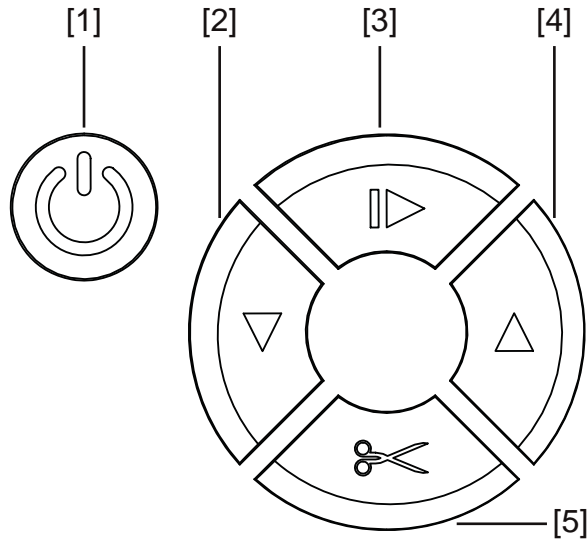

#	Key	Description
1	Power	<ul style="list-style-type: none"> <li>If the printer power is off, press and hold this key for one second to turn the power on.</li> <li>If the printer power is on, press and hold this key for three seconds to turn the power off.</li> <li>Press and release this key to recover from some error conditions.</li> </ul>
2	Feed	<ul style="list-style-type: none"> <li>Press and release the feed key to feed media one label length.</li> <li>Press and hold the feed key to feed media until you release the key.</li> <li>While paused, press and hold the feed key to perform a light printhead cleaning operation. Printhead cleaning options are also available in the QL-800 Maintenance Utility.</li> </ul>
3	Pause/Resume	<ul style="list-style-type: none"> <li>While printing, press and release this key to pause the print job.</li> <li>While paused, press and release this key to resume the print job.</li> <li>While paused, press and hold this key for approximately three seconds to cancel the print job.</li> </ul>

#	Key	Description
4	Back-Feed	<ul style="list-style-type: none"> <li>Press and release the back-feed key to back-feed media one label length.</li> <li>Press and hold the back-feed key to back-feed media until you release the key.</li> <li>To unload media, press and hold the back-feed key until the printer beeps once. Press and hold the back-feed key again to continue and unload media.</li> </ul>
5	Cut	If the printer is in the ready state, press and hold this key for approximately one second to cut media at the exit.

## LED Indicators

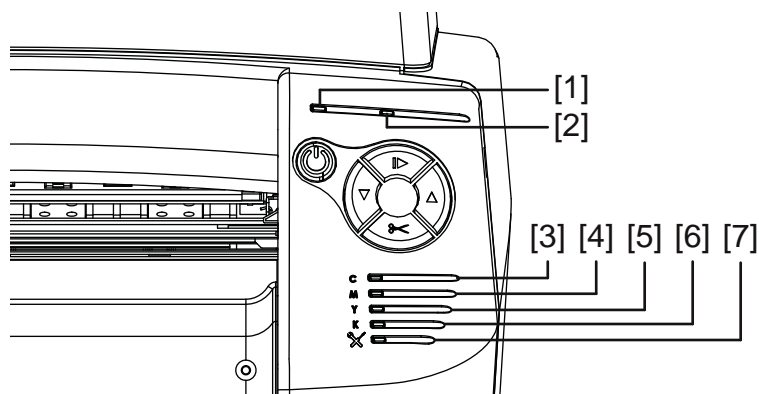

#	LED	Description
1	Power	<p>This green LED indicates the power status of the printer.</p> <ul style="list-style-type: none"> <li><b>Off</b> - Printer is off or in sleep mode.</li> <li><b>Flashing</b> - Printer is initializing or busy.</li> <li><b>Solid</b> - Printer is on and ready.</li> </ul>
2	Error	This red LED indicates when error conditions occur.
3	Cyan Ink	<p>These yellow LEDs indicate the status of each ink cartridge.</p> <ul style="list-style-type: none"> <li><b>Off</b> - Ink cartridge has sufficient ink.</li> <li><b>Flashing</b> - Ink cartridge is low.</li> <li><b>Solid</b> - Ink cartridge is empty.</li> </ul>
4	Magenta Ink	
5	Yellow Ink	
6	Black Ink	

#	LED	Description
7	Non-Ink Consumables	<p>This yellow LED indicates the status of the following items.</p> <ul style="list-style-type: none"> <li>• Printhead</li> <li>• Cutter</li> <li>• Aerosol Filter</li> <li>• Maintenance Cartridge</li> <li>• Maintenance Roller</li> </ul> <p>The LED will illuminate based on remaining service life.</p> <ul style="list-style-type: none"> <li>• <b>Off</b> - All items are above 20% service life remaining.</li> <li>• <b>Flashing Slowly</b> - One or more items are below 20% service life remaining.</li> <li>• <b>Flashing</b> - One or more items are below 10% service life remaining.</li> <li>• <b>Solid</b> - One or more items are at 0% service life remaining.</li> </ul> <p>Refer to the System Logs tab in the Maintenance Utility to determine the affected items.</p>

## Color Basics

Color in design and printing is a sophisticated topic. At QuickLabel, we have worked to make using the QL-800 printer as easy as possible. We understand that your goal is to design and print colorful, effective labels with consistency.

### Color and Computers

While colors seem straightforward, describing colors using computers is not so simple. Different display technologies can cause the same file to look different, and sometimes different graphics programs or operating systems can display colors differently.

With printers there is frequently a difference between what is shown on a computer screen and what comes out of the printer. The same file printed on printers using different technologies may look very different as well.

### Color Profiling

These technical differences are universal, and as a result of them, software developers, display manufacturers, and printer manufacturers have worked together to develop a way to successfully describe and use color taking into consideration the different technologies involved. This is called color profiling.

Color profiles have been developed to coordinate how each device displays or prints that color. When using the proper profiles, color can be relatively consistent across devices.

Color cannot be perfectly consistent because the human eye can see more colors than computer displays can show or printers can print. What's more, the ranges of colors available to displays and printers don't completely overlap.

Profiles help out when these ranges don't match; they help translate the differences to create the widest and most accurate range of colors a device can display.

### Display Profiling

There are devices that can help you develop profiles for your display to ensure that what you see is close to what you are getting. Using QL-800 profiles will help with consistency in printing, while using both QL-800 and display profiles will help with the full design and printing process.

If color matching is important to you, you may consider profiling your computer display.

### QuickLabel QL-800 Color Profiles

When printing, even the type of material printed on can change the way colors appear. QuickLabel has created color profiles for the materials you will be using in order to offer you the most accurate color reproduction possible.

### A Profile for Each Device

The more of your devices that have profiles, the better. Since color is based on technology, software, and the laws of physics, each device works with color differently.

In addition to your graphics program and the QL-800, you may be able to add profiles for your display, your digital camera, and your scanner. This will help all of these devices use color in a coordinated way. At minimum, to use color profiling, you need to use a color profile for the QL-800.



---

# 3

## Designing and Printing Labels

### Designing Labels

This section describes several factors you should consider before you start designing labels.

#### Label Media Type Overview

This section describes the types of label media you can use with the QL-800 printer.

- **Reflective Mark Media** - Reflective mark media has black cue marks printed on the back of the label liner. These marks are read by a sensor on the printer to determine the starting point of new labels.

During the die cutting process for this type of label, the matrix can be removed and called “matrix out” or left intact and called “matrix in” material. Labels with matrix in allow you to print colors over the label edge.

- **Gap Media** - Gap media has spaces between each label resulting from the removal of the matrix during the die cutting process.

When the matrix material is removed and the liner exposed, the die cut labels are separated by gaps. These gaps are read by a sensor on the printer to determine the starting point of new labels.

- **Continuous Media** - Continuous media does not have reflective marks. It also does not have die cuts, and therefore contains no gaps. It is a continuous sheet of label material affixed to a liner.

#### Choosing Design Software

You can print to the QL-800 using any design software with printing functionality. There are many graphic design software applications available, and the programs you choose will depend on your desired workflow and design requirements.


Design software is available from QuickLabel and other software vendors.

- **CQL Pro from QuickLabel** - This software product, developed by QuickLabel, makes it easy to create barcodes and position text and graphics on a label.
- **Third Party Applications** - There are a variety of graphic design programs available from other software companies such as Adobe and Corel. Adobe Photoshop, Illustrator, and similar professional image editing programs provide advanced tools for creating your artwork.

A common scenario is to use a mixed approach to designing labels. For example, you may want to edit a photographic element in Photoshop, create a logo in Illustrator, and then place both into a CQL Pro file for final layout and printing.

## Disabling Anti-aliasing

Most graphic design software applications provide anti-aliasing features that result in the appearance of smooth color transitions. The following illustration shows text with anti-aliasing disabled (top) and enabled (bottom). Note the smooth color transitions when anti-aliasing is enabled.

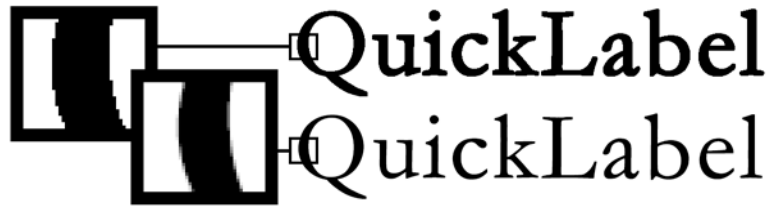

When designing labels that will be printed on the QL-800, do not use anti-aliasing. This is especially important if you are printing text or barcodes. For example, an anti-aliased barcode may not scan correctly due to the color transitions between lines.

The process for enabling/disabling anti-aliasing varies based on the graphic design application. Refer to the documentation for your application for details.

## Planning Full-Bleed and Non-Bleed Labels

In full-bleed labels, color prints up to the edge of the label. With non-bleed labels, color stops at a margin before the edge of the label.

Use the following guidelines when setting up a file for a **full-bleed label**.

- If you are using media with the matrix removed, you can print all the way to the edge of die-cut labels, but doing so may cause a small amount of ink to deposit onto the liner. In the event excess ink deposits on the liner, it will not dry and may smear onto other surfaces, including hands and other printed labels.
- The height and width of the label file “canvas” should be 0.04 to 0.08” (1-2 mm) larger than the height and width of the physical label.

Excessive width and length will result in increased ink on the liner. You may need to experiment to determine the optimal balance of bleed quality while minimizing ink deposited on the liner. As a guideline, no more than 0.02” (0.5 mm) of ink should be printed onto the liner.

- Design elements that will run to the edge of the label are the parts of the design that will “bleed” across the edge. Your bleed will most commonly be a solid color, pattern, or gradient background running off the edge of the label.

Use the following guidelines when setting up a file for a **non-bleed label**.

- The height and width of the label file “canvas” should be the same as the height and width of the physical label.
- All design elements should be placed inside a 0.063” (1.5 mm) border of the canvas. This will ensure such design elements never run to or over the edge of the label.

### **Related Topics:**

- *"Setting up the Driver for Full-Bleed Printing" on page 60*

## Setting up the Label Design Software

This section describes how to set up your label design software to print on the QL-800.

### Setting up Labels in CQL Pro

CQL Pro is a software application developed by QuickLabel to access special features in our printers and allow customers to easily design and print labels.

For detailed label setup and printing instructions, please refer to the CQL Pro Help.

### Setting up Labels in Third-Party Design Applications

You can design and print label files exclusively within a third-party application such as Adobe Photoshop or Illustrator. In this situation, use the following guidelines to ensure best results.

**Note:** *You can also use third-party applications to design components of a label to be imported into CQL Pro. In this situation, save or export graphic files in a .BMP, .PCX, uncompressed .JPG, uncompressed .TIF, .GIF, .PNG, or .PDF format.*

- **Select a resolution of 400 or 800 pixels per inch** - For raster-based design applications such as Adobe Photoshop, choose a resolution of 400 or 800 pixels per inch. This will provide sufficient image resolution to produce superior print quality. This setting is not used in vector-based design applications such as Adobe Illustrator.
- **If the application supports color management, enable it** - Professional design applications support color management. This option is typically found in the application's print window.

## Setting up the Printer Driver


### Setting up General Options

Before you print using a third-party application, you will need to select the appropriate general and label size options in the printer driver.

**Note:** Driver instructions apply only to printing via third party design applications. If you are using CQL Pro, this process is not required.


- 1 Open the appropriate printer window based on your version of Windows.
  - In Windows 7, choose **Start > Devices and Printers**.
  - In Windows 8 and 10, access the Search option by pointing to the upper-right corner of the screen. Search for “Control Panel” and click the **Control Panel** icon. In the Control Panel window, click **View Devices and Printers**.

Right-click the printer icon and choose **Printing Preferences**. The QL-800 Driver Printing Preferences window will open.

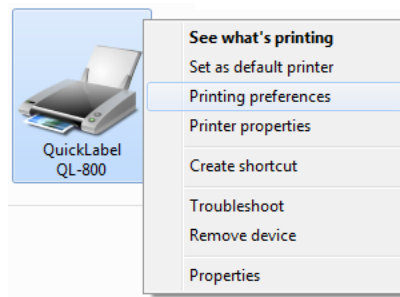

**Note:** You can also access the driver preferences via the application's print dialog. From the Print window in your software, select QuickLabel QL-800 from the printer list and choose Properties or Setup (varies based on program).

- 2 Choose the **General** tab.

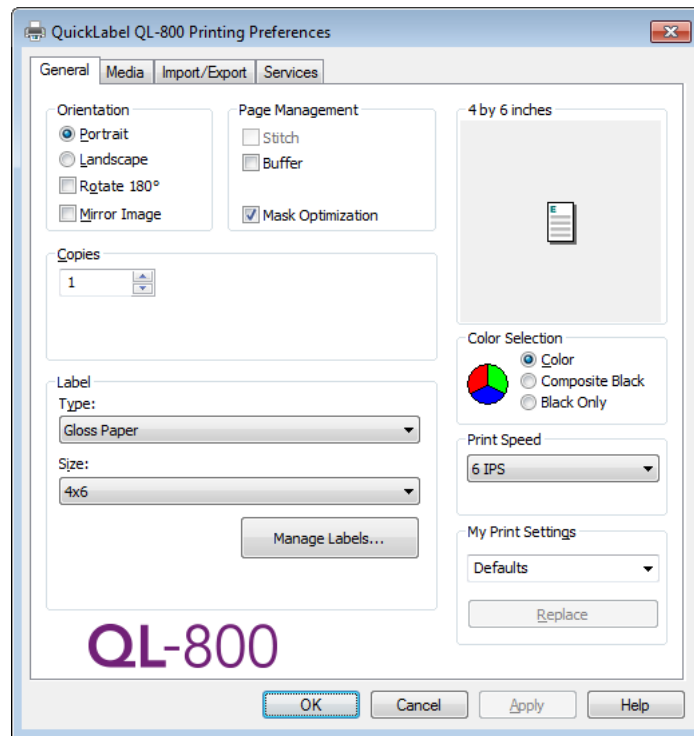

- 3 If necessary, you can select a printing orientation. Orientation is often set within the design application. However, if you cannot select an orientation in the design application, choose from the following options:
- **Portrait** - Select this option if you want to print the label in a portrait orientation on the label roll.
  - **Landscape** - Select this option if you want to print the label in a landscape orientation on the label roll.
- 4 If necessary, you can rotate the printed image 180 degrees by choosing **Rotate 180°**.
- 5 If necessary, you can print the image in a mirrored orientation by choosing **Mirror Image**.
- 6 Select the page management options.
- **Stitch** - Choose this option to print with no gaps between labels. This option should not be enabled when using gap media.
  - **Buffer** - Choose this option to process print jobs completely before sending them to the printer. This results in no pauses during printing.
  - **Mask Optimization** - Choose this option to apply mask optimization. If you observe image noise in printed labels, try turning off this option.
- 7 If necessary, you can select a printing quantity. Print copies are specified within the application before printing. However, you can override that value here, or use this setting if the application does not provide a setting.
- 8 Select the type of material the label will be printed on.

- 9 Select a label size from the list.

**Note:** If necessary, you can set up a custom label size to meet your needs.

- 10 Select a color mode.

- **Color** - Choose this option to print labels in color.
- **Composite Black** - Choose this option to print labels in monochrome using process black. Process black is a mixture of black and other inks.
- **Black Only** - Choose this option to print labels in monochrome using only black ink.

- 11 Select a printing speed.

- 12 Choose **OK**.


### Setting up a Custom Label Size

You can add and modify custom label sizes in the printer driver.

**Note:** Driver instructions apply only to printing via third party design applications. If you are using CQL Pro, this process is not required.


- 1 Open the appropriate printer window based on your version of Windows.
  - In Windows 7, choose **Start > Devices and Printers**.
  - In Windows 8 and 10, access the Search option by pointing to the upper-right corner of the screen. Search for “Control Panel” and click the **Control Panel** icon. In the Control Panel window, click **View Devices and Printers**.

Right-click the printer icon and choose **Printing Preferences**. The QL-800 Driver Printing Preferences window will open.

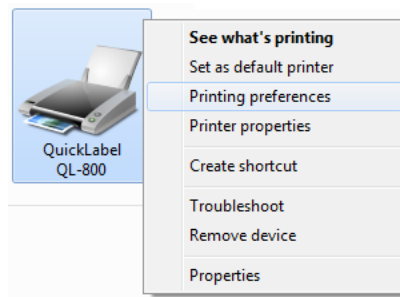


**Note:** You can also access the driver preferences via the application's print dialog. From the Print window in your software, select QuickLabel QL-800 from the printer list and choose Properties or Setup (varies based on program).

- 2 Choose the **General** tab.

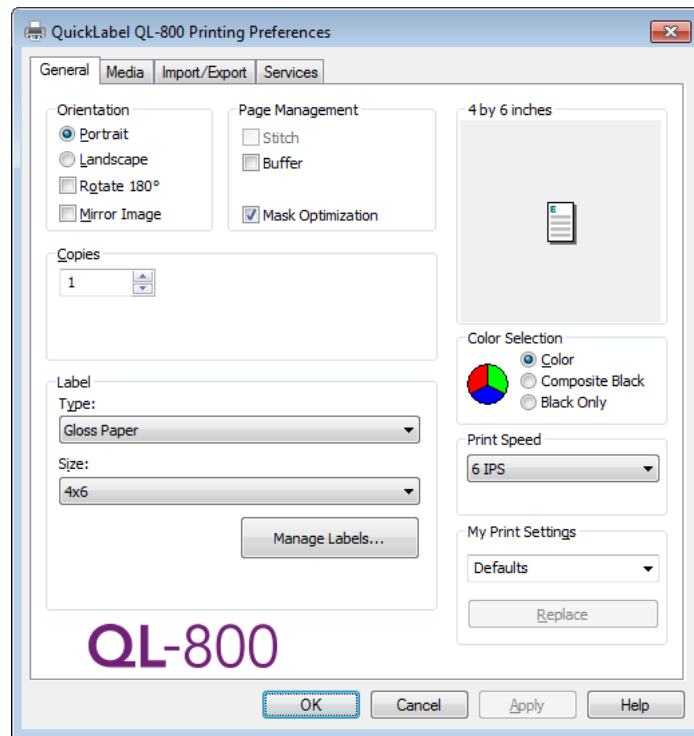

- 3 Choose **Manage Labels**. The Custom Label Size window will open.

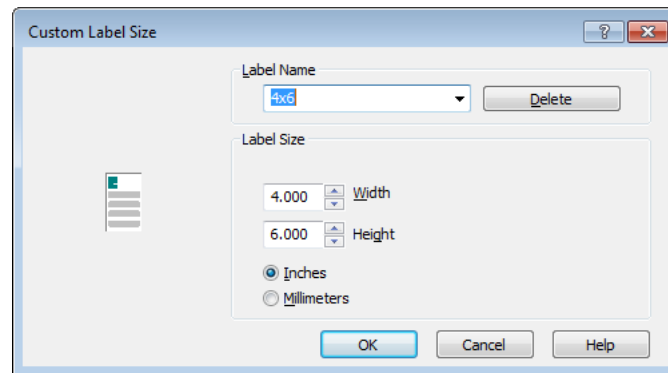

- 4 Enter or select a label name.
- To edit an existing label size profile, select the label name from the list.
  - To create a new label size profile, enter a label name in the list.
- 5 Enter the height and width of your label. You can specify these measurements in inches or millimeters.
- 6 Save the settings.
- If you edited an existing label size profile, choose **Replace**.
  - If you created a new label size profile, choose **Save**.

- 7 If necessary, you can delete a label size profile by selecting it from the list and then choosing **Delete**.
- 8 Choose **OK**.


### Setting up Media Options

Before you print using a third-party application, you will need to select media options for your label.

**Note:** Driver instructions apply only to printing via third party design applications. If you are using CQL Pro, this process is not required.

- 1 Open the appropriate printer window based on your version of Windows.
  - In Windows 7, choose **Start > Devices and Printers**.
  - In Windows 8 and 10, access the Search option by pointing to the upper-right corner of the screen. Search for “Control Panel” and click the **Control Panel** icon. In the Control Panel window, click **View Devices and Printers**.


Right-click the printer icon and choose **Printing Preferences**. The QL-800 Driver Printing Preferences window will open.

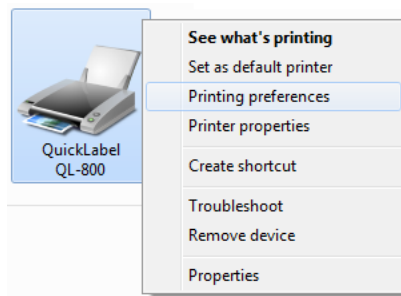

**Note:** You can also access the driver preferences via the application's print dialog. From the Print window in your software, select QuickLabel QL-800 from the printer list and choose Properties or Setup (varies based on program).




2 Choose the **Media** tab.

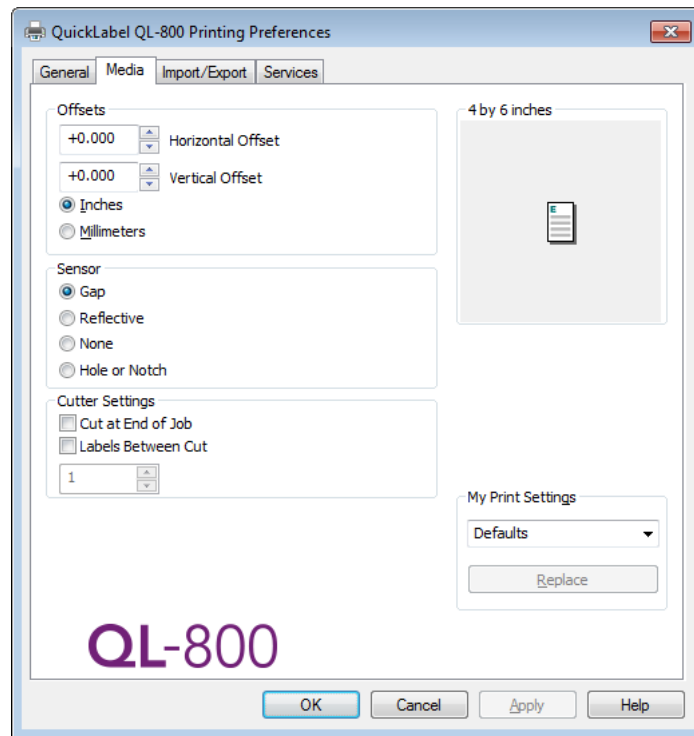

3 If necessary, use the offset options to adjust the location of a printed image relative to the registration marks on the media.

- **Horizontal Offset** - Negative values move the image left on the label. Positive values move the image right on the label.
- **Vertical Offset** - Negative values move the image down on the label (out away from the printer). Positive values move the image up on the label (in toward the printer).

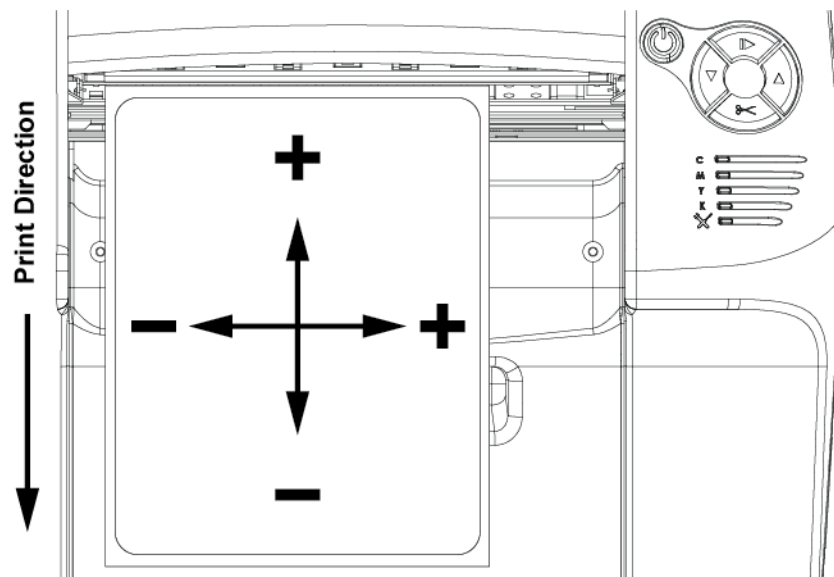


- 4 Select a sensor type.
  - **Gap** - Choose this option if you are using gap media.
  - **Reflective** - Choose this option if you are using reflective mark media.
  - **None** - Choose this option if you are using media without gaps or reflective marks (continuous media).
  - **Hole or Notch** - Choose this option if you are using media with die-cut holes or notches.
- 5 Select the cutter settings.
  - Check the **Cut at End of Job** option to enable the auto-cutter.
  - Use the **Labels Between Cut** field to indicate the number of labels to print between each cut.
- 6 Choose **OK**.

## Using Service Options

You can clean the printheads, launch the status monitor, order supplies, and contact technical support using the printer driver.


- 1 Open the appropriate printer window based on your version of Windows.
  - In Windows 7, choose **Start > Devices and Printers**.
  - In Windows 8 and 10, access the Search option by pointing to the upper-right corner of the screen. Search for “Control Panel” and click the **Control Panel** icon. In the Control Panel window, click **View Devices and Printers**.

Right-click the printer icon and choose **Printing Preferences**. The QL-800 Driver Printing Preferences window will open.

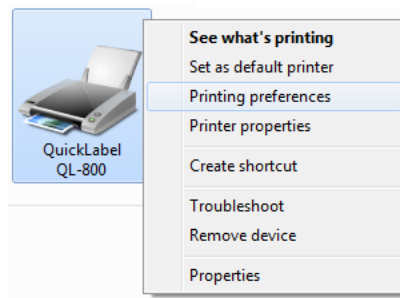

**Note:** You can also access the driver preferences via the application's print dialog. From the Print window in your software, select QuickLabel QL-800 from the printer list and choose Properties or Setup (varies based on program).

- 2 Choose the **Services** tab.

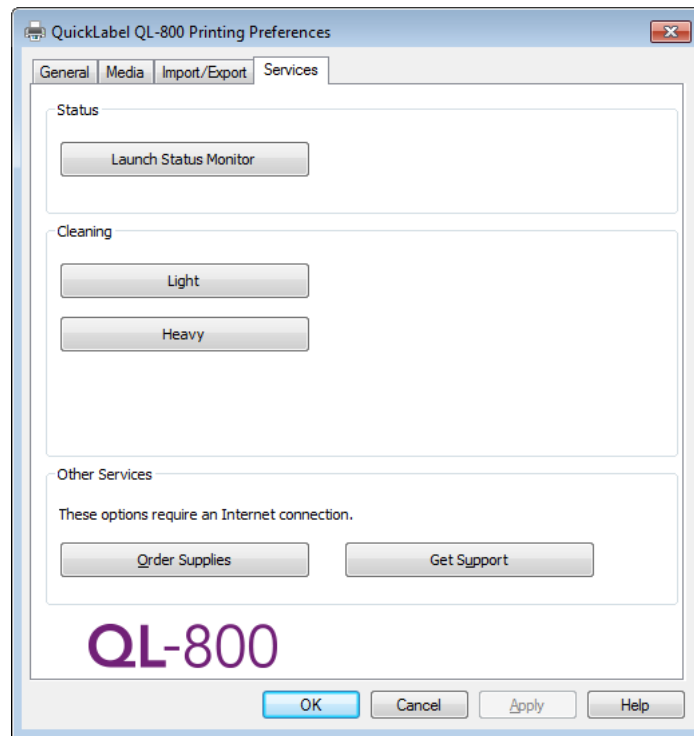

- 3 To launch the status monitor, choose **Launch Status Monitor**.
- 4 To clean the printheads, choose a cleaning option.
- **Light** - Start with light cleaning to resolve minor print defects. Then print a test label. If the issue is not resolved, use the heavy cleaning method.
  - **Heavy** - Use heavy cleaning to resolve major print defects, or when light cleaning has not fully resolved a print defect.
- If multiple heavy cleanings do not resolve the issue, contact Technical Support.
- 5 Use the service links to order supplies or contact technical support.
- 6 Choose **OK**.

**Related Topics:**


- "Cleaning Printheads" on page 77

## Saving and Recalling Driver Settings

After setting up the driver, you can save the driver settings. It may be helpful to save driver settings for each label you will be printing.


- 1 Open the appropriate printer window based on your version of Windows.
  - In Windows 7, choose **Start > Devices and Printers**.
  - In Windows 8 and 10, access the Search option by pointing to the upper-right corner of the screen. Search for “Control Panel” and click the **Control Panel** icon. In the Control Panel window, click **View Devices and Printers**.

Right-click the printer icon and choose **Printing Preferences**. The QL-800 Driver Printing Preferences window will open.

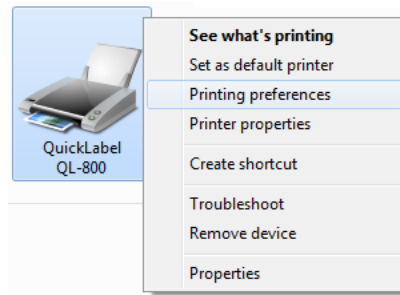

**Note:** You can also access the driver preferences via the application's print dialog. From the Print window in your software, select QuickLabel QL-800 from the printer list and choose Properties or Setup (varies based on program).

- 2 Choose the **General** or **Media** tab.

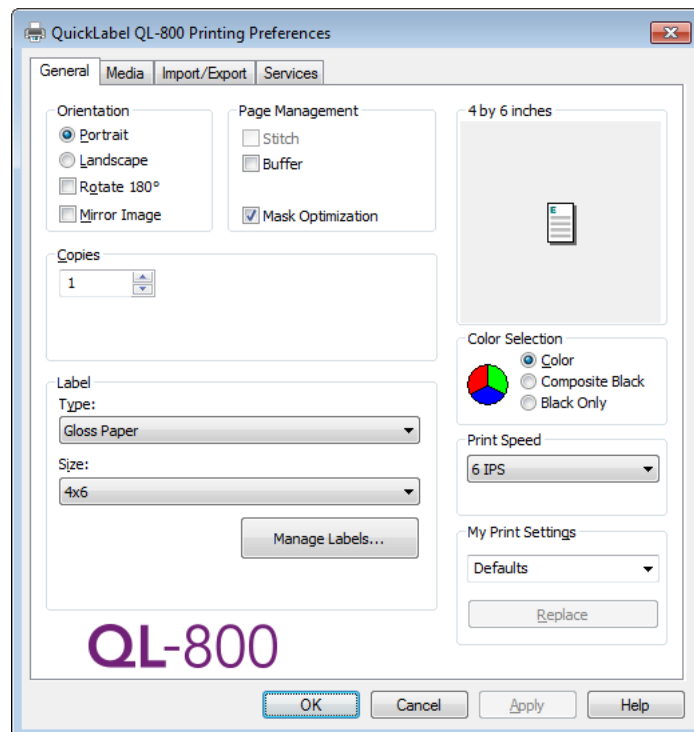

- 3 Enter or select a settings profile name in the **My Print Settings** area.
  - To edit an existing settings profile, select the profile name from the list.
  - To create a new settings profile, enter a profile name in the list.
- 4 Edit the driver settings as needed.
- 5 Save the settings.
  - If you edited an existing settings profile, choose **Replace**.
  - If you created a new settings profile, choose **Save**.
- 6 If necessary, you can delete a settings profile by selecting it from the list and then choosing **Delete**.
- 7 Choose **OK**.

## Importing and Exporting Driver Settings

You can import and export driver custom setting files. This feature is useful when you need to reinstall the driver but want to keep your settings. You can also use this feature to share driver settings from one PC with another.

Custom setting files (\*.ini) can include the following driver settings:


- **Label Sizes** - This option includes the custom label sizes defined in the General tab of the driver.
- **Print Settings** - This option includes the custom settings defined in the My Print Settings control in the driver.

You can save or load these settings using custom setting files in the Import/Export tab of the driver.

**1** Open the appropriate printer window based on your version of Windows.


- In Windows 7, choose **Start > Devices and Printers**.
- In Windows 8 and 10, access the Search option by pointing to the upper-right corner of the screen. Search for “Control Panel” and click the **Control Panel** icon. In the Control Panel window, click **View Devices and Printers**.

Right-click the printer icon and choose **Printing Preferences**. The QL-800 Driver Printing Preferences window will open.

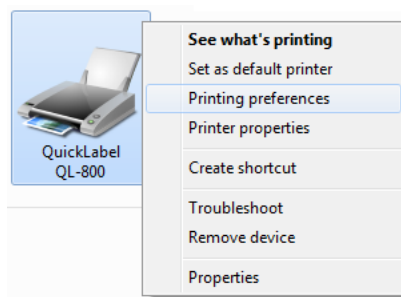

**Note:** You can also access the driver preferences via the application's print dialog. From the Print window in your software, select QuickLabel QL-800 from the printer list and choose Properties or Setup (varies based on program).

- 2 Open the **Import/Export** tab.

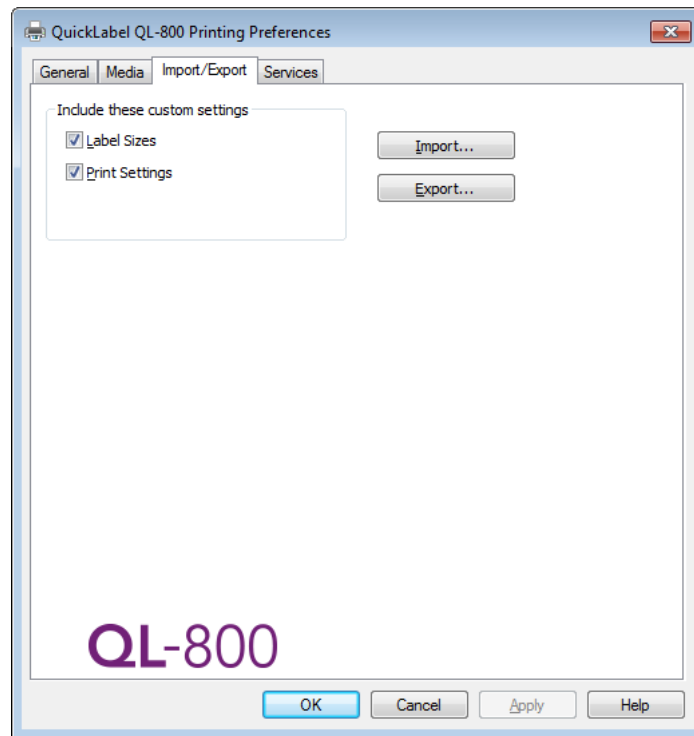

- 3 If you are exporting a setting file, select the settings to save to the file. You can save **Label Sizes** and/or **Print Settings**.

Choose **Export**. The Export Custom Settings window will open. Select a name and destination for the custom setting file. Then choose **Save**.

The setting file will be saved.

- 4 If you are importing a setting file, select the settings to load from the file. You can load **Label Sizes** and/or **Print Settings**.

Choose **Import**. The Import Custom Settings window will open. Browse to and select a custom setting file. Then choose **Open**.

The setting file will be loaded.

- 5 Choose **OK**.

**Related Topics:**

- "Setting up a Custom Label Size" on page 50
- "Saving and Recalling Driver Settings" on page 56

## Setting up the Driver for Full-Bleed Printing

Before you print full-bleed labels using a third-party application, you will need to select the appropriate options in the printer driver.

**Note:** *Driver instructions apply only to printing via third party design applications. If you are using CQL Pro, this process is not required.*

- 1 Create a custom media size profile for the full-bleed label. See *"Setting up a Custom Label Size" on page 50*.

- **Width** - Define the width as 0.04 to 0.08" (1-2 mm) larger than your label width.
- **Height** - Define the height as 0.04 to 0.08" (1-2 mm) larger than your label height.

For example, if your label media is 4 x 6 inches, you might define the media size as 4.04 x 6.04 inches.

**Note:** *Use the minimum size increase necessary to print your full-bleed label. An excessive size increase will result in ink being deposited on the liner.*

Save the media size profile. You may want to include the specified dimensions as part of the profile name.

Ensure this size profile is selected in the **General** tab.

- 2 Adjust the offsets for the full-bleed label. See *"Setting up Media Options" on page 52*.

- **Horizontal Offset** - Add 0.02 to 0.04" (0.5-1 mm) to the horizontal offset. The amount you add should be half of the width increase specified in the previous step.
- **Vertical Offset** - Subtract 0.02 to 0.04" (0.5-1 mm) from the vertical offset. The amount you subtract should be half of the height increase specified in the previous step.

For example, if you defined the media size as 4.04 x 6.04 inches, use 0.02 as the horizontal offset and -0.02 as the vertical offset.

- 3 Use the **My Print Settings** feature to save the full-bleed label settings. See *"Saving and Recalling Driver Settings" on page 56*.

Save the settings with a meaningful name. For example, if your label is 4 x 6 inches, "Full-Bleed 4x6" may be a helpful name.

Choose this settings profile when you need to print full-bleed labels with the configured options.

- 4 Choose **OK**.

### **Related Topics:**

- *"Planning Full-Bleed and Non-Bleed Labels" on page 46*




## Printing Labels


- 1 Ensure the label media has been loaded.
- 2 If you are printing from a third-party design application, ensure the printer driver preferences are configured.
- 3 Open the label file using the appropriate software. Then choose to print the label, and enter the number of copies you would like to print.

**Note:** If your software has a collate option, disable it before printing.

- 4 Print the labels.
- 5 Adjust the media exit guide as needed. The edge of the media should lightly contact the edge of the media exit guide.

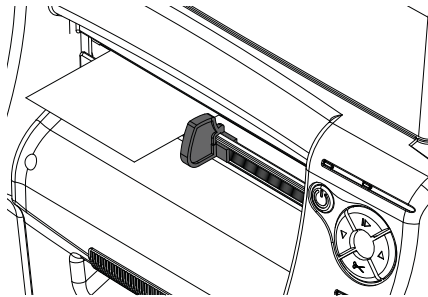

- 6 If necessary, you can pause, resume, and cancel print jobs from the operation panel on the front of the printer. You can also perform a printhead cleaning operation while paused if needed.

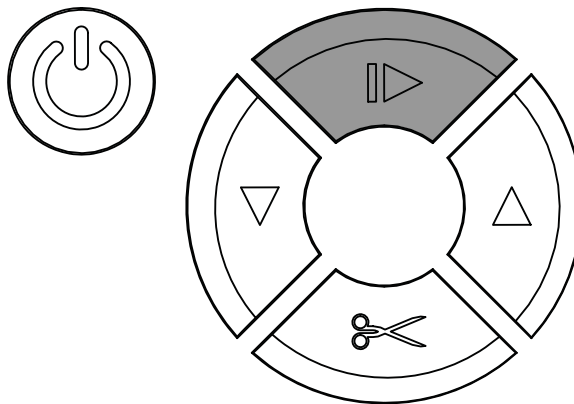


- While printing, press and release the pause/resume key to pause the print job.
- While paused, press and release the pause/resume key to resume the print job.
- While paused, press and hold the pause/resume key for approximately three seconds to cancel the print job.
- While paused, press and hold the feed key to perform a light printhead cleaning operation. Printhead cleaning options are also available in the QL-800 Maintenance Utility.

### 7 Receive the printed labels.

**Note:** Do not pull the printed labels in any direction as they exit the printer. Pulling the labels may result in a media jam.


- If **Cutter Enabled** is checked in the printer driver **Media** tab, the printed labels will automatically be cut at the end of the job.
- If **Cutter Enabled** is not checked in the printer driver **Media** tab, the printed labels will not be cut at the end of the job. Instead, you can use the manual cut feature by pressing and holding the cut key for approximately one second.

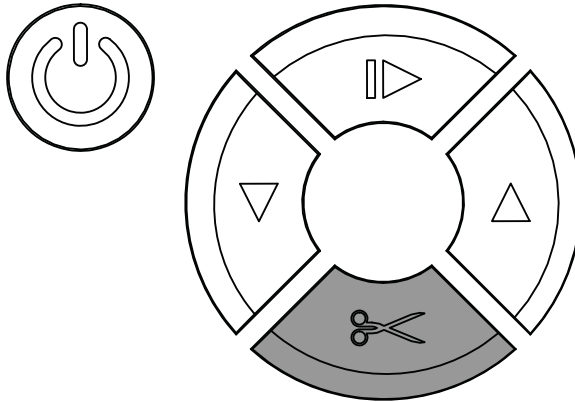

# Using the Status Monitor

## Viewing the Printer Status

- 1 Open the QL-800 Status Monitor. You can access the Status Monitor from the Windows Start Menu, QL-800 Maintenance Utility, or the printer driver.
  - From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Status Monitor**.
  - In the QL-800 Maintenance Utility, choose **Status Monitor**.
  - In the QL-800 printer driver, choose **Launch Status Monitor** from the **Services** tab.

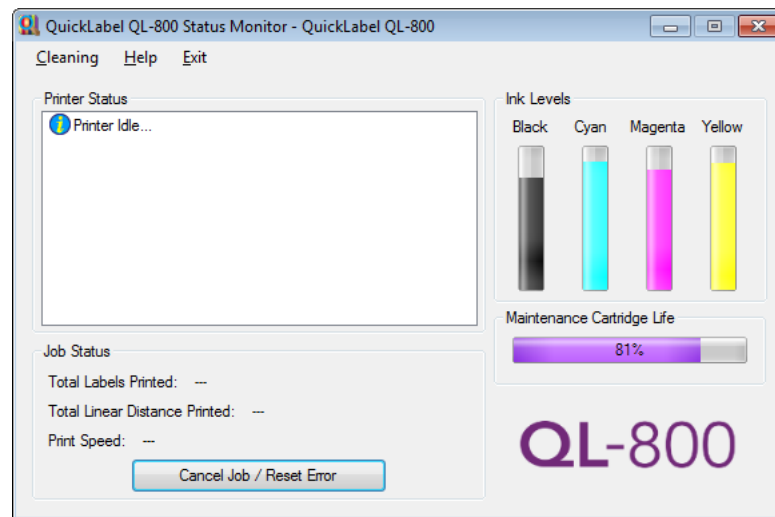

- 2 You can view status information in the Printer Status area. This area will display informational and error messages related to your printer's current status.
- 3 If necessary, you can initiate printhead cleaning if the printer is in the Ready, Sleeping, or Paused modes.


Two cleaning options are available (light and heavy). Start with light cleaning and then print a test label. If the issue is not resolved, repeat using the heavy cleaning method.

If multiple heavy cleanings do not resolve the issue, contact Technical Support.

- 4 If necessary, you can view help topics by choosing **Help > Help Topics**.

## Viewing the Job Status and Canceling Jobs

- 1 Open the QL-800 Status Monitor. You can access the Status Monitor from the Windows Start Menu, QL-800 Maintenance Utility, or the printer driver.
  - From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Status Monitor**.
  - In the QL-800 Maintenance Utility, choose **Status Monitor**.
  - In the QL-800 printer driver, choose **Launch Status Monitor** from the **Services** tab.

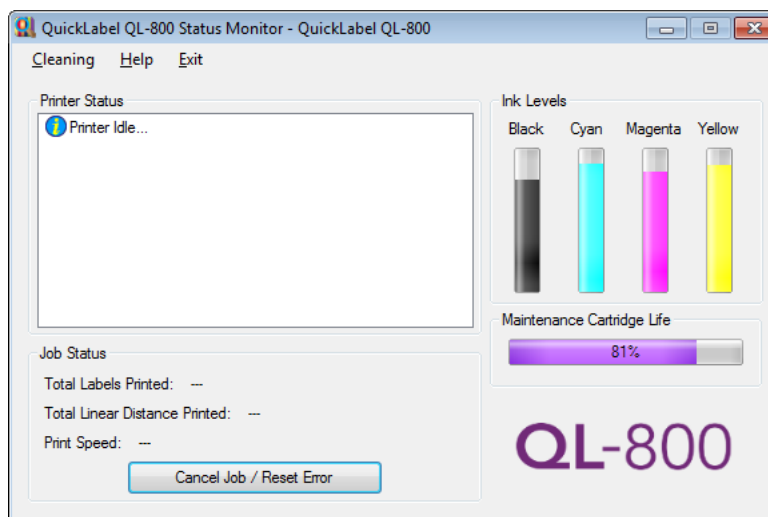


- 2 You can view print job information in the Job Status area.
  - **Total Labels Printed** - During printing, the current number of labels printed will be displayed. After a print job, the number of labels printed in the last job will be displayed.
  - **Print Speed** - During printing, the print speed is displayed.
- 3 If necessary, you can cancel an in-progress job by choosing **Cancel Job**.

You can also use the printer operation panel to cancel a job. While printing, press and release the pause/resume key to pause the print job. While paused, press and hold the pause/resume key for approximately three seconds to cancel the print job.

## Viewing Ink and Consumable Levels

- 1 Open the QL-800 Status Monitor. You can access the Status Monitor from the Windows Start Menu, QL-800 Maintenance Utility, or the printer driver.
  - From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Status Monitor**.
  - In the QL-800 Maintenance Utility, choose **Status Monitor**.
  - In the QL-800 printer driver, choose **Launch Status Monitor** from the **Services** tab.

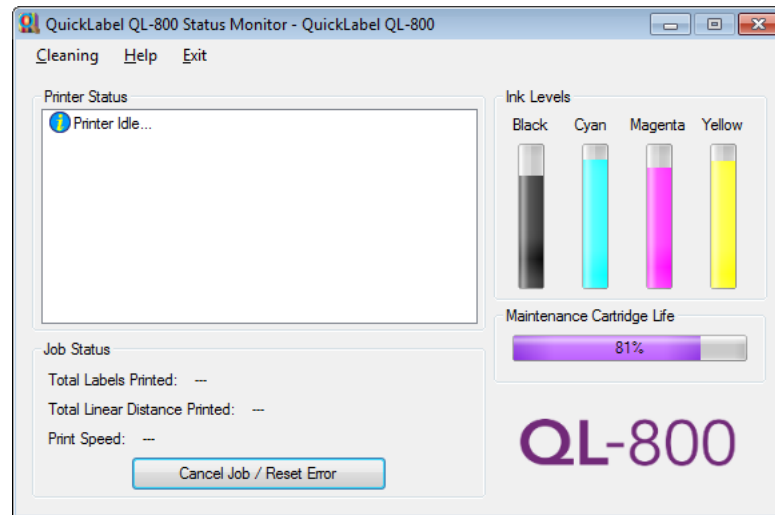

- 2 You can view estimates of remaining ink percentages in the Ink Levels area.
- 3 You can view an estimate of the maintenance cartridge remaining service life in the Maintenance Cartridge Life area.

## Estimating Ink Use

You can use the QL-800 Toolbox application to estimate ink use for print jobs. This is accomplished by printing a “virtual” print job and viewing projected ink use estimates.

**Note:** Some QL-800 Toolbox features are not supported. Use only the features described in this procedure.

- 1 Open the QL-800 Toolbox application from a PC connected to the printer.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > Toolbox**.

A web browser will open and display the QL-800 Toolbox application. Under the Available Printers, select a printer that is powered on and connected to the host PC.

- 2 Choose the **Ink Usage** link to display the Ink Usage information.

- 3 Check the Ink Estimation Mode **Enabled** option. Then choose **Submit**. A red “Ink Estimation Mode” indicator message will appear.

This step places the printer in a virtual printing mode. Print jobs you send will not be printed, but their associated ink use calculations will appear in the Ink Usage screen.

- 4 Print the label job. Observe the following guidelines to ensure an accurate ink estimate.
  - Print a high number of copies (such as 100).
  - Print with the same driver settings (media, resolution, size, etc.) as will be used in the actual print job.

When the virtual print job ends, the ink estimates will appear in the Ink Usage page of the QL-800 Toolbox. You may need to choose the **Ink Usage** link to refresh the page.

Ink Usage									
Printed Ink (uL)					Job	Pages	Mode	Media	
Cyan	Magenta	Yellow	Black	Black					
79	148	231	45	44	1	100	Best	Gloss Paper	

**Ink Estimation Mode**  
 Enabled ☒

Ink estimates do not consider auto-maintenance cleaning operations. The estimate only predicts the amount of ink that will be deposited onto labels during the print job.

**Note:** Two fields are used to display black ink usage estimates. Add these two estimates to obtain the total estimate for black ink usage.

- 5 Determine the ink use per label by dividing the micro liter (uL) estimates for each color by the number of copies (pages) printed.
- 6 If necessary, print other virtual jobs for ink estimation. The most recent print job will be listed at the top of the Ink Usage screen.
- 7 When you are finished printing virtual jobs for ink estimation, disable ink estimation mode. Uncheck the Ink Estimation Mode **Enabled** option. Then choose **Submit**.

Close the web browser to exit the QL-800 Toolbox application.

# 4


## QL-800 Maintenance Utility

### About the Maintenance Utility

The QL-800 Maintenance Utility is installed during the driver installation process. The utility allows you to view printer information and perform a variety of maintenance functions.

### Printer Information Tab

Use the **Printer Information** tab to view printer system information, upgrade printer firmware, and set the clock.

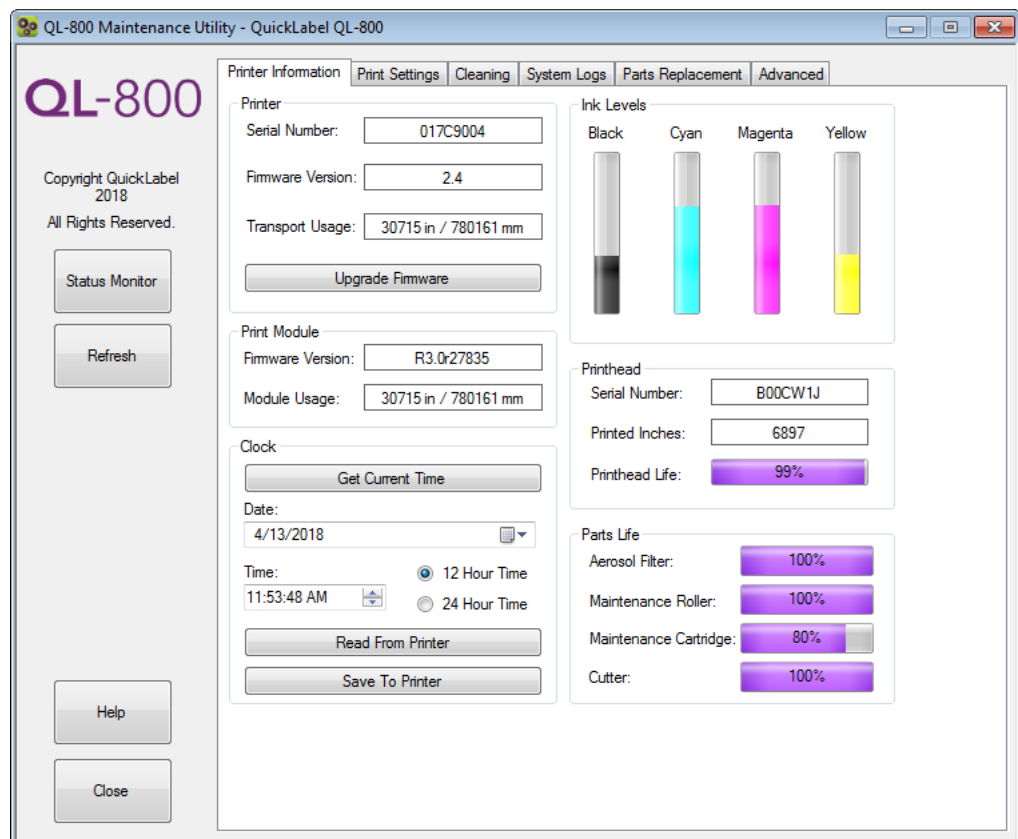

### Viewing Printer Information

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Printer Information** tab.

**3** View the printer information.

- **Printer** - This section provides the serial number of the printer and the installed firmware version number. It also provides the transport usage in inches.
- **Print Module** - This section provides the print module installed firmware version and module usage.
- **Ink Levels** - This section shows an estimate of ink levels in ink cartridges.
- **Printhead** - This section provides the remaining service life percentage of the printhead. If print quality is acceptable, you can continue to use a printhead past 100% of its service life.

This section also provides the serial number and number of inches printed with the printhead.

- **Parts Life** - This section provides the remaining service life percentages of the aerosol filter, maintenance roller, maintenance cartridge, and cutter.

## Upgrading the Printer Firmware

- 1** Ensure the QL800\_vX\_X.upgrade file is accessible from your PC. The vX\_X in the file name indicates the firmware package version. You can obtain the latest firmware file from the QuickLabel website ([www.quicklabel.com](http://www.quicklabel.com)).


- 2** Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 3** Choose the **Printer Information** tab.

- 4** Choose **Upgrade Firmware**. The Upgrade Firmware window will open.

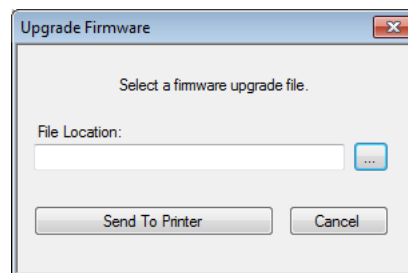

- 5** Choose the ... button. Browse to the QL800\_vX\_X.upgrade file and choose **Open**.

- 6** Choose **Send to Printer**.

A progress indicator will be displayed and the firmware will be upgraded. When this process is complete, proceed to the next step.

**Note:** The upgrade process requires up to 25 minutes. Allow the upgrade process to finish without interruption.



- 7 Power off the printer. On the rear of the printer, turn the power inlet switch off.
- 8 On the rear of the printer, turn the power inlet switch on. Power on the printer.

**Related Topics:**

- *"Upgrading the Print Module Firmware" on page 94*

## Setting the Clock

- 1 Launch the QL-800 Maintenance Utility.


From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Printer Information** tab.
- 3 To set the date/time controls to the current date/time as defined by your Windows clock, choose **Get Current Time**.
- 4 To read the time from the printer's internal clock and set the date/time controls accordingly, choose **Read From Printer**.
- 5 To set the printer's internal clock, select a date/time with the controls and choose **Save to Printer**.

## Print Settings Tab

Use the **Print Settings** tab to adjust the vertical baseline, horizontal baseline, and cut/stop position. You can also enable/disable external unwind mode and select a transport fan speed.

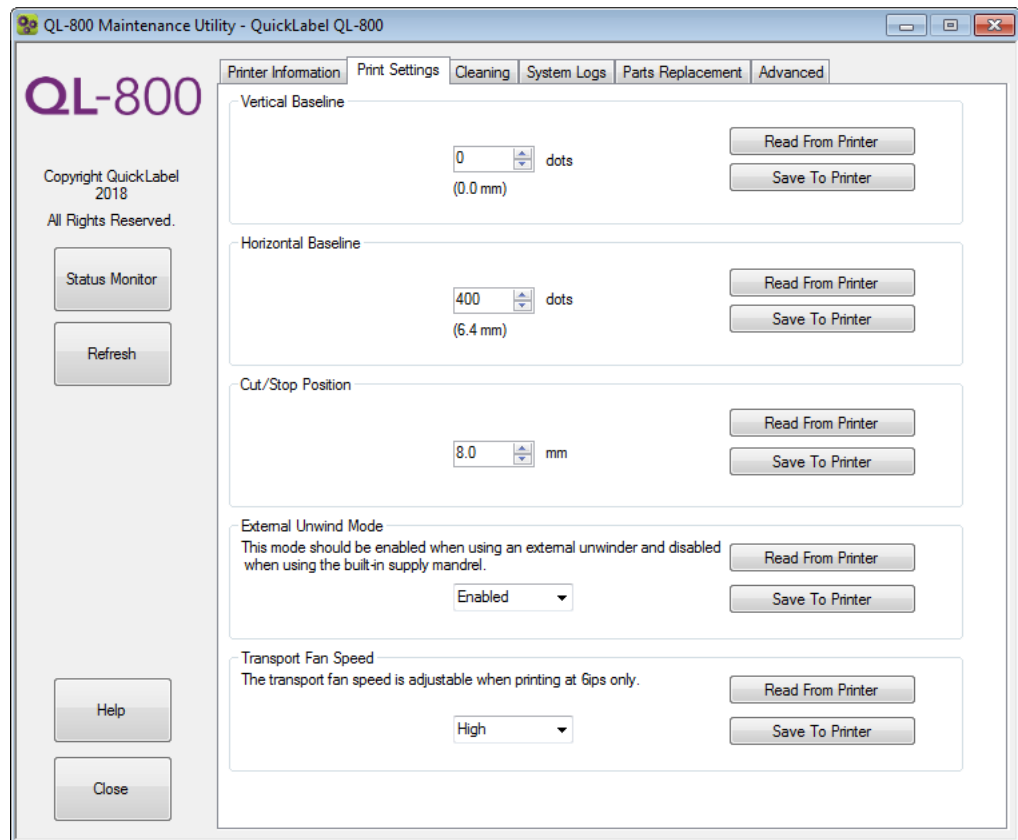

### Setting the Vertical Baseline

If you send the same job to two or more QL-800 printers and notice that the image prints in different locations, you can move the vertical baseline of a printer.

**Note:** Adjusting the baseline is needed only for synchronizing the output of two or more printers. Baselines are adjusted at the factory and should be close from printer to printer. If you are using one QL-800, baseline adjustment is not necessary.

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.


Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Print Settings** tab.

- 3 To read the vertical baseline value from the printer and set the **Vertical Baseline** control accordingly, choose **Read From Printer**.

- 4 Enter a vertical baseline value.

In the following illustration, a label is exiting the printer. Note the positive and negative adjustment directions.

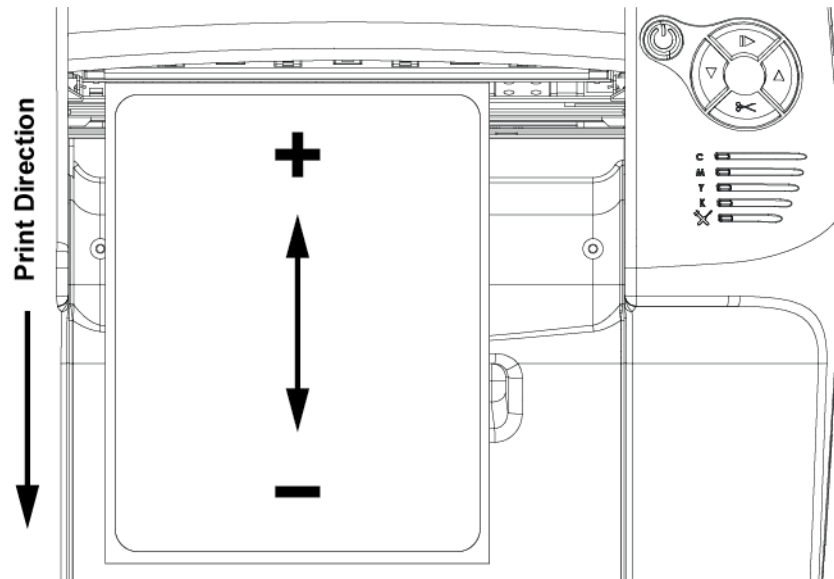

- 5 To save the vertical baseline value, choose **Save to Printer**.

## Setting the Horizontal Baseline

If you send the same job to two or more QL-800 printers and notice that the image prints in different locations, you can move the horizontal baseline of a printer.

**Note:** Adjusting the baseline is needed only for synchronizing the output of two or more printers. Baselines are adjusted at the factory and should be close from printer to printer. If you are using one QL-800, baseline adjustment is not necessary.

- 1 Launch the QL-800 Maintenance Utility.


From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Print Settings** tab.
- 3 To read the horizontal baseline value from the printer and set the **Horizontal Baseline** control accordingly, choose **Read From Printer**.

- 4 Enter a horizontal baseline value.

In the following illustration, a label is exiting the printer. Note the positive and negative adjustment directions.

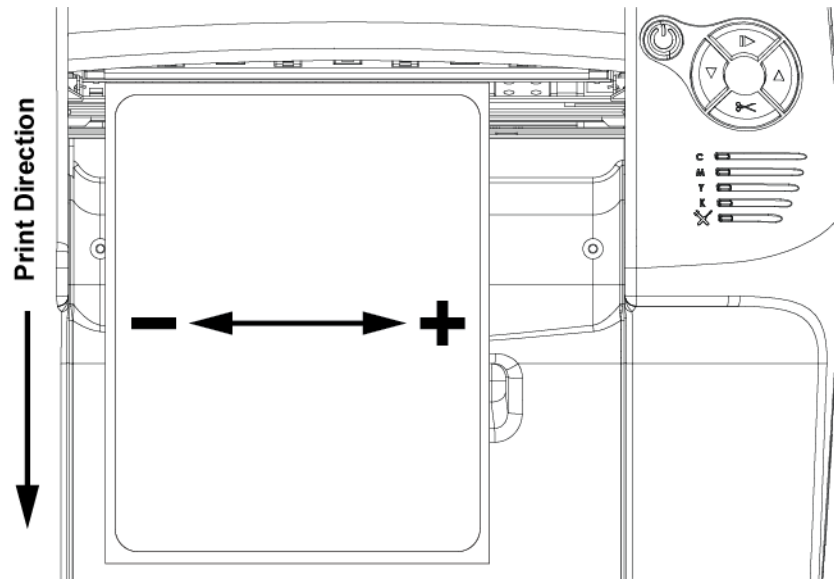

- 5 To save the horizontal baseline value, choose **Save to Printer**.

## Setting the Cut/Stop Position

The cut/stop position setting adjusts the position at which media is fed after printing. You can adjust the cut/stop position -20 to +20 mm.

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Print Settings** tab.
- 3 To read the cut/stop position value from the printer and set the **Cut/Stop Position** control accordingly, choose **Read From Printer**.
- 4 Enter a cut/stop position value.
  - Positive values result in more media being fed after printing before the media stops.
  - Negative values result in less media being fed after printing before the media stops.
- 5 To save the cut/stop position values, choose **Save to Printer**.

## Setting up External Unwind Mode

External unwind mode is used when an external unwinder accessory is supplying media to the printer. See *“External Unwinder” on page 151*.

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Print Settings** tab.

- 3 To read the external unwind mode setting from the printer and set the **External Unwind Mode** control accordingly, choose **Read From Printer**.

- 4 Select an **External Unwind Mode** setting.

- **Disabled** - Choose this option if you will supply media to the printer with the printer's mandrel.
- **Enabled** - Choose this option if you will supply media to the printer with an external unwinder.

- 5 To save the setting, choose **Save to Printer**.

## Selecting a Transport Fan Speed

The transport unit contains fans that run at a high speed during printing. In most cases, the fan speed will not require adjustment. However, fan vibrations can result in a print quality issue when printing at a speed of 6 inches per second. Use the transport fan speed adjustment feature to correct this issue.

**Note:** *The transport fan speed adjustment feature only applies when printing at a speed of 6 inches per second.*

When printing at 6 inches per second, horizontal banding may occur on the label. Horizontal bands repeat every tenth of an inch on the label. The banding is usually consistent in its intensity and visibility over the length of a label. This sort of banding does not usually vary or fade in and out over the label length.



If you notice this issue when printing at 6 inches per second, set the transport fan speed to low. The lower fan speed will result in better image quality.

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.


Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Print Settings** tab.
- 3 To read the fan speed value from the printer and set the **Transport Fan Speed** control accordingly, choose **Read From Printer**.
- 4 Select either the **High** or **Low** fan speed. Then choose **Save to Printer**.

Choose the **Low** speed to correct banding related to fan vibrations when printing at 6 inches per second. When the transport fans are running at low speed during a print job, you will hear that the fan noise will be lower in volume.

## Cleaning Tab

Use the **Cleaning** tab to set up auto-maintenance, clean the printheads, and prepare the printer for transport.

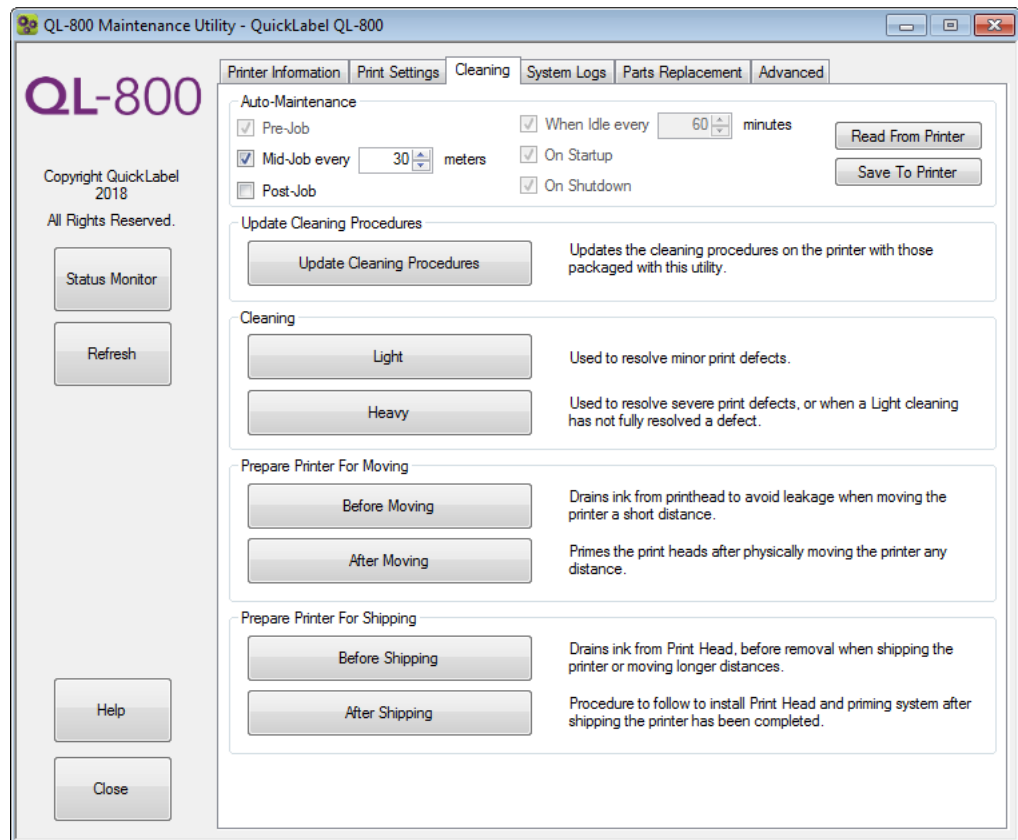

## Setting up Auto-Maintenance

You can schedule automatic maintenance routines for the printer. During an auto-maintenance routine, the printer will perform a predefined cleaning of the printhead. This maintenance helps ensure print quality.

**Note:** The auto-maintenance routine uses ink and other consumables. Run the auto-maintenance routine only as often as needed to maintain print quality.

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Cleaning** tab.
- 3 To read the auto-maintenance schedule values from the printer and set the auto-maintenance controls accordingly, choose **Read From Printer**.

**4** Set up the auto-maintenance schedule options.

- **Mid-Job every** - Performs maintenance during print jobs after the specified number of meters have been printed.
- **Post-Job** - Performs maintenance at the end of each print job.

By default, the following options are enabled and cannot be disabled. These routines ensure print quality and extend the printhead service life. Contact Technical Support if you must change these settings.

- **Pre-Job** - Performs maintenance at the start of each print job.
- **When Idle every** - Performs maintenance when the printer is idle for the specified number of minutes.
- **On Startup** - Performs maintenance when the printer is powered on.
- **On Shutdown** - Performs maintenance before the printer is powered off.

**5** To save the auto-maintenance settings, choose **Save to Printer**.

## Updating Cleaning Procedures

Some upgrades to the QL-800 Maintenance Utility may contain updated cleaning procedures. Use the following instructions to update the cleaning procedures on the printer with the cleaning procedures from the maintenance utility.

**1** Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

**2** Choose the **Cleaning** tab.

**3** Choose **Update Cleaning Procedures**. The cleaning procedures on the printer will be updated with the cleaning procedures from the maintenance utility.

The following Auto-Maintenance options in the **Cleaning** tab will be enabled as part of this process.

- Pre-Job
- When Idle every
- On Startup
- On Shutdown



## Cleaning Printheads

If you suspect print quality issues related to banding, clogged nozzles, or printing defects, you might want to initiate a cleaning.

Printhead cleaning cannot be done during a print job or if an error is occurring. When cleaning is in progress, do not perform any other operation.

**Note:** *Cleaning the printhead consumes ink. Clean the printhead only when necessary.*

The cleaning options discussed in this procedure are also available in the **Cleaning** menu of the QL-800 Status Monitor.

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Cleaning** tab.

- 3 Choose a cleaning option.

- **Light** - Start with light cleaning to resolve minor print defects. Then print a test label. If the issue is not resolved, use the heavy cleaning method.
- **Heavy** - Use heavy cleaning to resolve major print defects, or when light cleaning has not fully resolved a print defect.

If multiple heavy cleanings do not resolve the issue, contact Technical Support.

## Preparing for Moving

Before moving the printer a short distance in your building, such as to a different floor, prepare it using the following instructions. This procedure will drain ink from the printhead to avoid leakage when moving the printer a short distance.

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Cleaning** tab.

- 3 Choose **Before Moving**. Follow the on-screen instructions to complete this procedure.

- 4 Power off the printer.

- 5 Carefully move the printer.

- 6 After setting up the printer in the new location, return to the Cleaning tab in the QL-800 Maintenance Utility. Choose **After Moving**. Follow the on-screen instructions to complete this procedure.

## Preparing for Shipping

Before shipping the printer over long distances, prepare it using the following instructions. This procedure will drain ink from the printhead and guide you through the printhead removal process. Use this procedure when shipping the printer or moving longer distances.

**Note:** *The original packing materials are required for this procedure.*

- 1 Launch the QL-800 Maintenance Utility.


From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Cleaning** tab.
- 3 Choose **Before Shipping**. Follow the on-screen instructions to complete this procedure.
- 4 Power off the printer.
- 5 Pack the printer in its original packing material for shipping.
- 6 After setting up the printer in the new location, return to the Cleaning tab in the QL-800 Maintenance Utility. Choose **After Shipping**. Follow the on-screen instructions to complete this procedure.

## System Logs Tab

Use the **System Logs** tab to view the error history and save log files. It also provides a convenient way to e-mail QuickLabel Support.

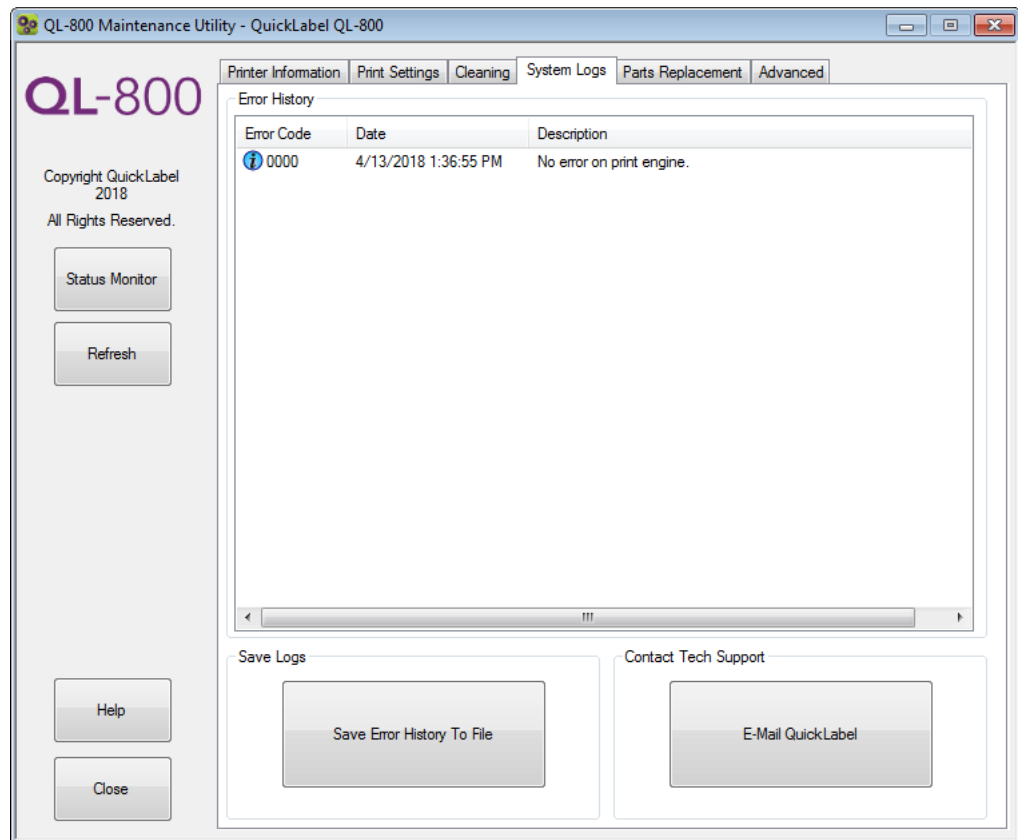

### Viewing the Error History

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **System Logs** tab.
- 3 Use the scroll bars to browse the error history of the printer.

### Saving Log Files

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.


- 2 Choose the **System Logs** tab.

- 3 Choose **Save Error History to File** to save the error history to a text file on your PC.

After the log file is created, a message will appear indicating the log was created successfully.

## Parts Replacement Tab

Use the **Parts Replacement** tab to replace printer wear items.

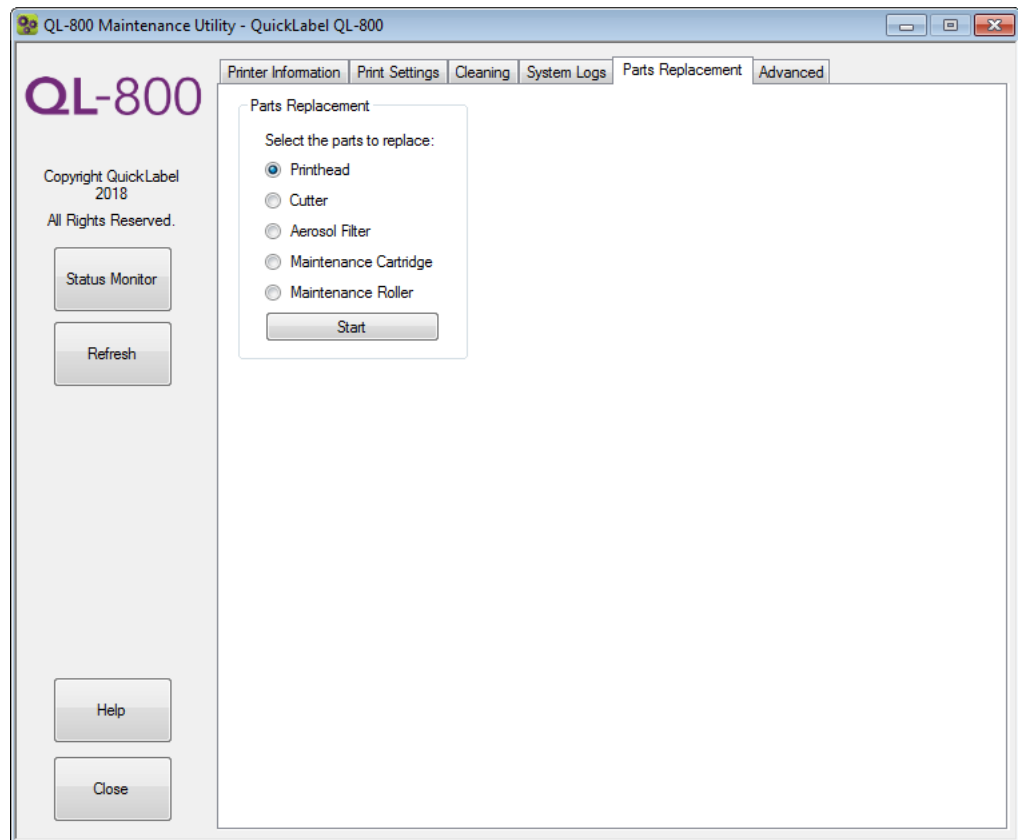

### Replacing the Printhead

Use the following procedure to replace the printhead. This process will replace the printhead for each color.

**Note:** Wear protective gloves to prevent ink from staining your hands during this procedure.

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Parts Replacement** tab.

- 3 Select **Printhead**. Then choose **Start**. Follow the on-screen instructions to complete this procedure.

## Replacing the Cutter

Use the following procedure to replace the cutter.

**Note:** *The cutter blade is sharp. Use caution to avoid personal injury or damage to clothing when working with cutting blades or around exposed blade surfaces.*

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Parts Replacement** tab.
- 3 Select **Cutter**. Then choose **Start**. Follow the on-screen instructions to complete this procedure.

## Replacing the Aerosol Filter

Use the following procedure to replace the aerosol filter.

**Note:** *Wear protective gloves to prevent ink from staining your hands during this procedure.*

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.


Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Parts Replacement** tab.
- 3 Select **Aerosol Filter**. Then choose **Start**. Follow the on-screen instructions to complete this procedure.

## Replacing the Maintenance Cartridge

When the maintenance cartridge is filled to capacity with collected ink, printing stops. An error message and LED indicate this condition.

- A message indicating the maintenance cartridge is full will be displayed in the Status Monitor and System Logs tab of the Maintenance Utility.
- The non-ink consumables LED will illuminate (solid).

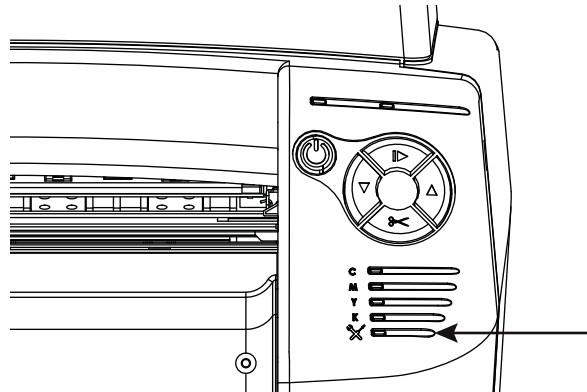

Use the following procedure to replace the maintenance cartridge.

**Note:** For safety, keep the maintenance cartridge out of the reach of children. If ink is accidentally ingested, contact a physician immediately.

- To prevent ink from leaking from a used maintenance cartridge, avoid dropping the cartridge or storing it at an angle. Otherwise, ink may leak and cause stains.
- Ink adheres to the maintenance cartridge after it has been used. Handle the maintenance cartridge carefully during replacement. The ink may stain clothing.

**Note:** Wear protective gloves to prevent ink from staining your hands during this procedure.

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Parts Replacement** tab.

- 3 Select **Maintenance Cartridge**. Then choose **Start**. Follow the on-screen instructions to complete this procedure.

## Replacing the Maintenance Roller

Use the following procedure to replace the maintenance roller.

**Note:** Wear protective gloves to prevent ink from staining your hands during this procedure.

- 1 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.


Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 2 Choose the **Parts Replacement** tab.

- 3 Select **Maintenance Roller**. Then choose **Start**. Follow the on-screen instructions to complete this procedure.

## Advanced Tab

The **Advanced** tab is reserved for use only by Technical Support.

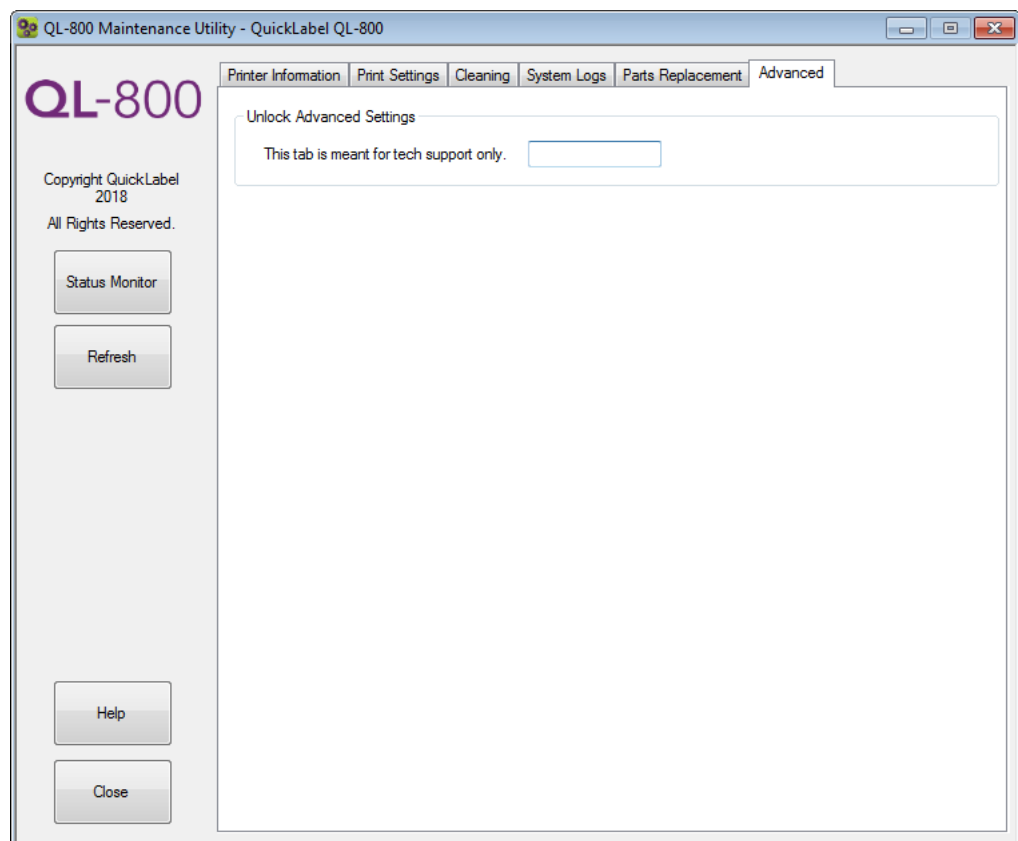





# 5

## Printer Maintenance

### Replacing Ink Cartridges

When the remaining ink level becomes low, a low ink message will be displayed on the Status Monitor and in the System Logs tab of the maintenance utility. When an ink cartridge is out of ink, an out of ink message will be displayed and printing will stop.


Additionally, four yellow LEDs on the printer indicate ink status. Flashing LEDs indicate low ink. Illuminated LEDs indicate empty ink.

The printer has four ink cartridges: black (K), cyan (C), magenta (M), and yellow (Y). Confirm the ink status and replace the appropriate ink cartridge.


Use the following instructions to replace ink cartridges. Before you begin, make sure the printer is in an idle state.

**Danger:** For safety, keep ink cartridges out of the reach of children. If ink is accidentally ingested, contact a physician immediately.

- 1 Open the main side door.

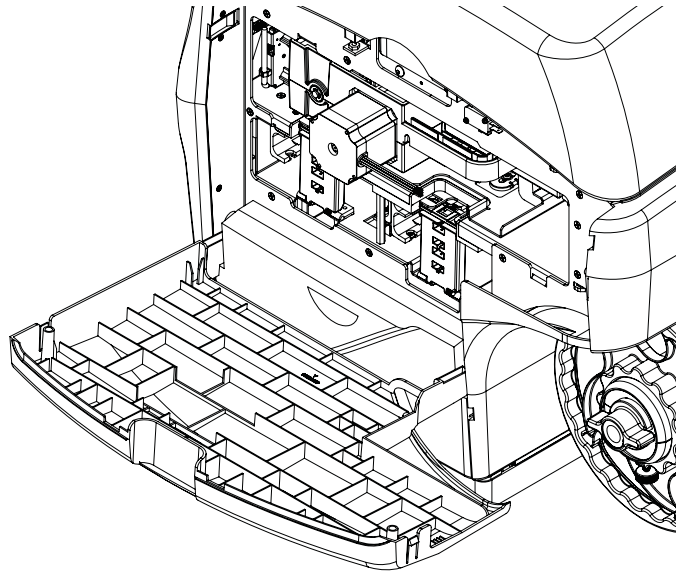

- 2 Open the ink cartridge latch for the empty ink cartridge. The latch can be opened by pressing the top of the locking mechanism and pulling outward.

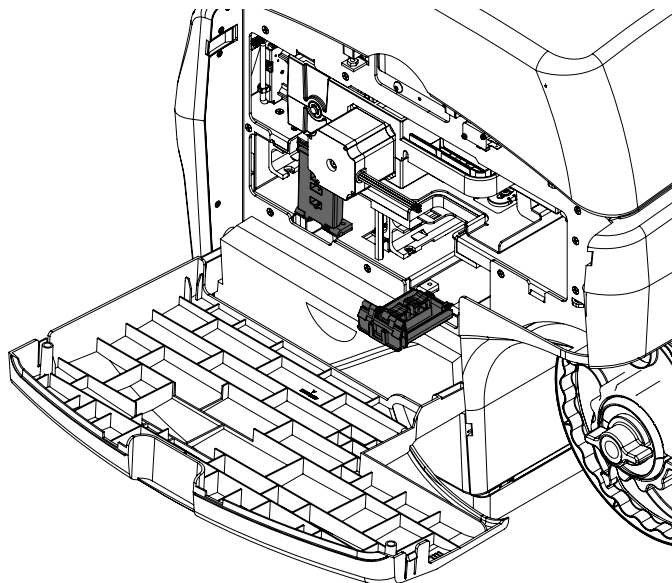


- 3 Remove the empty ink cartridge.
- 4 Slide in the new ink cartridge, nozzle end first, label side up. Push the cartridge in all the way.

You will feel slight resistance near the end of this process as the nozzle engages the ink needles inside the printer. Repeat this step for each color.

**Caution:** *There are sharp needles in the ink cartridge slot. Never put your fingers in this area.*

**Note:** *The printer is designed so that ink cartridges cannot be inserted in the wrong slots. Do not attempt to insert ink cartridges in the wrong slots.*

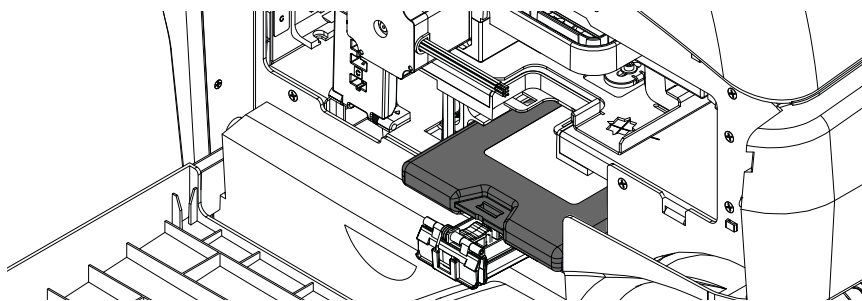

- 5 Close the ink cartridge latch.
- 6 Close the main side door.

## Cleaning

### Cleaning the Printer Exterior

Over time, the plastic exterior panels of the printer may accumulate dust, dirt, etc. You can clean these panels as needed.


- 1 Dampen a clean, lint-free cloth with water.
- 2 Gently clean the plastic exterior surfaces using the cloth.

Anti-static electronic equipment cleaner may be used for exterior cleaning as needed.


### Cleaning the Input Pinch Rollers

As media is fed into the printer, it is advanced by a series of rollers just inside the media entry slot. Over time, these rollers may accumulate dust or adhesive residue. You can clean these input pinch rollers as needed.

- 1 Remove media from the printer.
- 2 Power off the printer.
- 3 On the rear of the printer, turn the power inlet switch off.
- 4 Open the top cover.
- 5 Disconnect the roller cover plate [2] by removing the two screws [1]. Slide the plate outward, and then up away from the printer. Removing the plate may require a small amount of force because of the tight fit. Set the plate and screws aside.

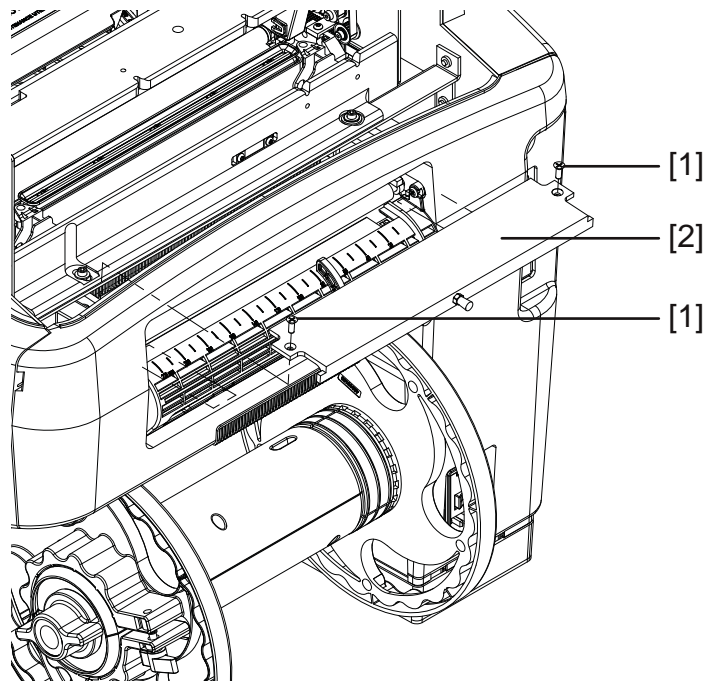

- 6 Use a clean, lint-free cloth dampened with isopropyl alcohol to clean the pinch rollers [3]. If necessary, you can rotate the rollers by turning the drive pulley [4].

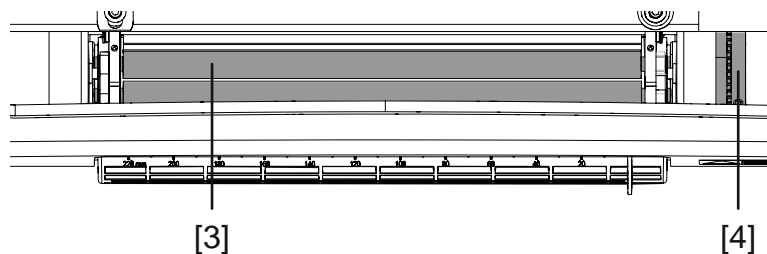

**Note:** If isopropyl alcohol is insufficient, Goo Gone® may be used as an alternative.

- 7 Position the roller cover plate [2] in the mounting location and install the two screws [1]. Installing the plate may require a small amount of force because of the tight fit.
- 8 Close the top cover.

### Cleaning the Maintenance Tray Area

During normal operation, waste ink is collected in the maintenance cartridge. Occasionally, drops of ink may be deposited outside of the cartridge into the maintenance tray area. You can temporarily remove the maintenance cartridge and clean the maintenance tray area as needed.

**Note:** For safety, keep the maintenance cartridge out of the reach of children. If ink is accidentally ingested, contact a physician immediately.

- To prevent ink from leaking from a used maintenance cartridge, avoid dropping the cartridge or storing it at an angle. Otherwise, ink may leak and cause stains.
- Ink adheres to the maintenance cartridge after it has been used. Handle the maintenance cartridge carefully. The ink may stain clothing.

**Note:** Wear protective gloves to prevent ink from staining your hands during this procedure.

- 1 Power off the printer.
- 2 On the rear of the printer, turn the power inlet switch off.
- 3 Open the lower side door.
- 4 Grasp the maintenance cartridge and carefully slide it out of the printer. Put the maintenance cartridge on a flat surface during the cleaning procedure.
- 5 Dampen a clean, lint-free cloth with deionized water.

Do not use paper towels, napkins, or any other material that may leave lint or debris behind while cleaning. Problems can occur if lint enters the interior of the printer.


- 6 Use the cloth to clean the empty maintenance tray area inside the printer.
- 7 When you are finished cleaning the maintenance tray area, reinstall the maintenance cartridge.
- 8 Close the lower side door.

## Cleaning the Transport Belts


Belts on the transport unit advance media through the printer. Occasionally, drops of ink may be deposited onto the belts. You can clean the transport belts as needed.

**Note:** Wear protective gloves to prevent ink from staining your hands during this procedure.

- 1 Remove media from the printer.
- 2 Open the main side door.

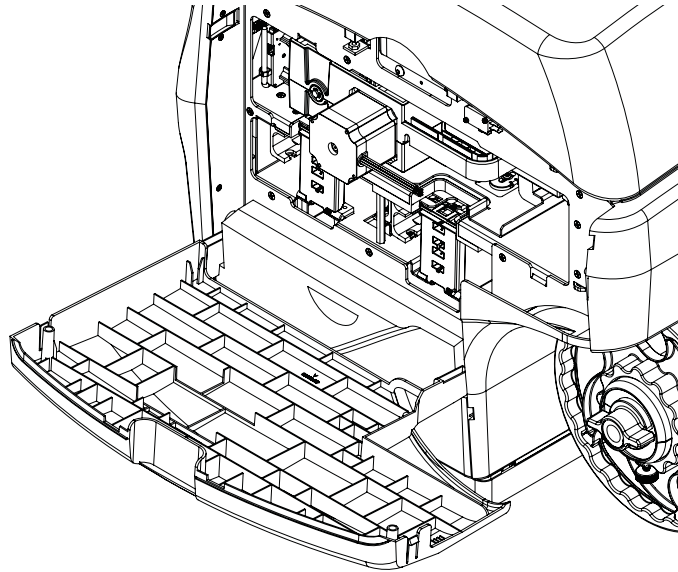

- 3 Grasp the handle on the transport unit. Then pull the transport unit straight out of the printer.

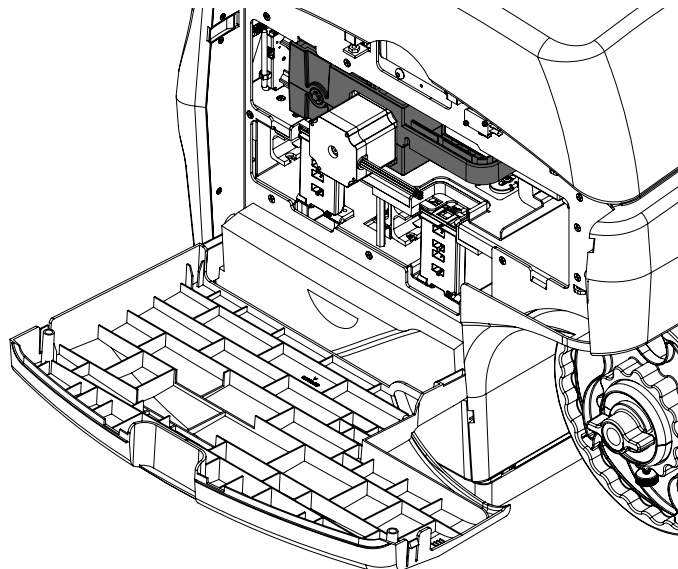


**Note:** If the yellow transport unit shipping lock is installed, you will not be able to remove the transport unit. You must first remove the shipping lock by rotating it counterclockwise and then pulling it straight out. This lock is usually removed during the unpacking process.

- 4 Place the transport unit on a flat surface.

- 5 Dampen a clean, lint-free cloth with deionized water.

Do not use paper towels, napkins, or any other material that may leave lint or debris behind while cleaning. Problems can occur if lint enters the interior of the printer.

- 6 Hold the transport unit cutter frame [1] with one hand. With your other hand, use the cloth to clean the four belts on the transport unit.

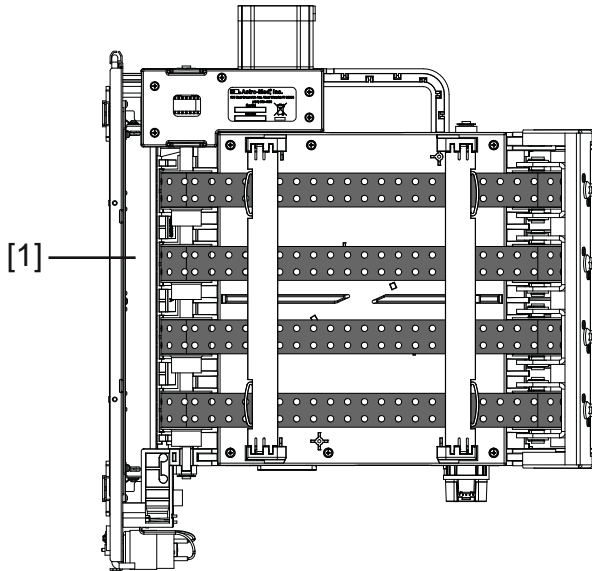

**Note:** If deionized water is insufficient, Goo Gone® may be used as an alternative.

- 7 If necessary, you can grasp and move the belts manually in either direction to expose more belt surface area for cleaning. All four belts will move at the same time.
- 8 If the belts are damp from cleaning, allow them to dry completely before reinstalling the transport unit.

## Cleaning the Ink Cartridge Contacts


If an ink cartridge is installed but not recognized by the printer, you can clean the electrical connection points to resolve the issue.

Use the following instructions to clean the electrical contacts on the ink cartridges. The electrical contacts in the ink cartridge slots inside the printer can also be cleaned.


**Note:** Wear protective gloves to prevent ink from staining your hands during this procedure.

- 1 Power off the printer.
- 2 On the rear of the printer, turn the power inlet switch off.


- 3 Open the main side door.

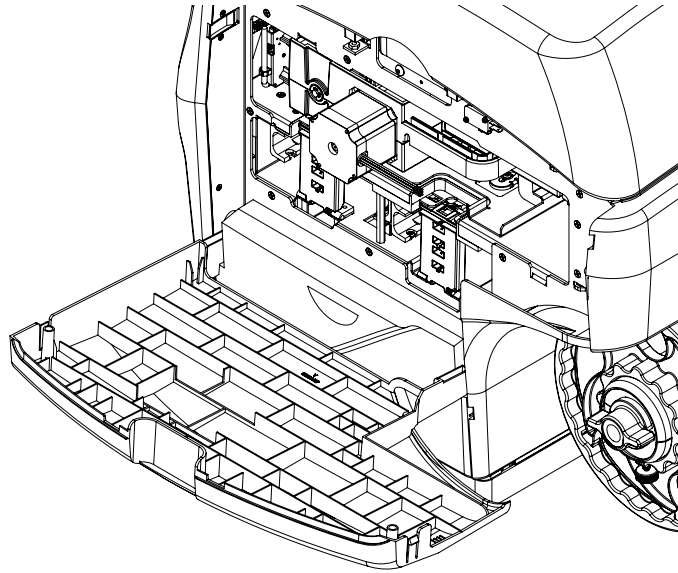

- 4 Release the two ink cartridge latches.
- 5 Carefully slide all four ink cartridges, one at a time, out of the unit.
- 6 Use a swab or lint-free cloth dampened with isopropyl alcohol to clean the ink cartridge electrical contacts.

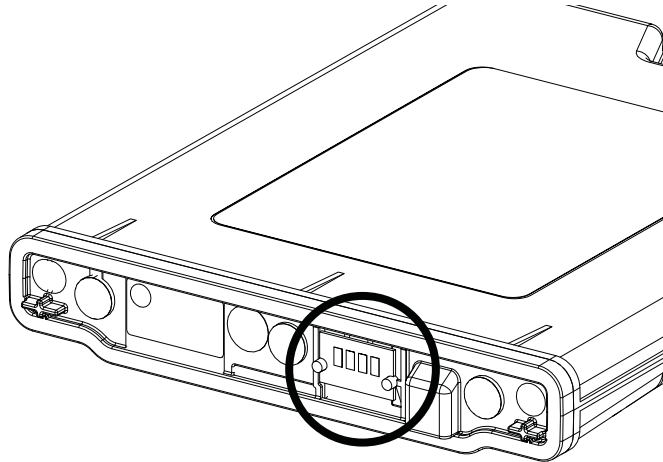

- 7 Use a swab dampened with isopropyl alcohol to clean the ink cartridge connection contacts inside the printer.

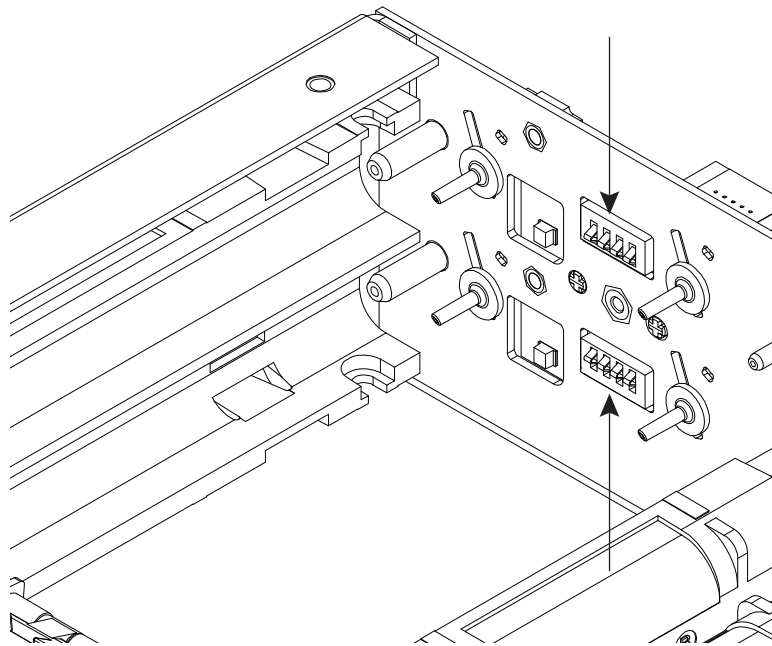

- 8 Insert all four ink cartridges into the unit, one at a time, according to the ink color indicated on the ink cartridge latches.
- 9 Close the two ink cartridge latches.

### Cleaning the Printhead Manually

When heavy and light automated cleanings are not sufficient in nozzle restoration, a manual cleaning method can be used.

This process requires a clean lint-free cloth, de-ionized or distilled water, and the original printhead packaging cap. A cleaning cloth is available from QuickLabel (part number 14806000).


- 1 Remove the printhead using the printhead replacement function in the Parts Replacement tab of the QL-800 Maintenance Utility.

Although the printhead will not be replaced, this procedure can be used to remove the printhead and reinstall it.



- 2 Fill the orange packaging cap with approximately an 1/8th of an inch of de-ionized or distilled water. Place the printhead in the cap. Allow the printhead to soak for approximately 5 minutes.

If the orange printhead packaging cap is not available, the printhead can be wiped with a lint free cloth thoroughly wet with de-ionized or distilled water. Wipe the printhead in one direction only.

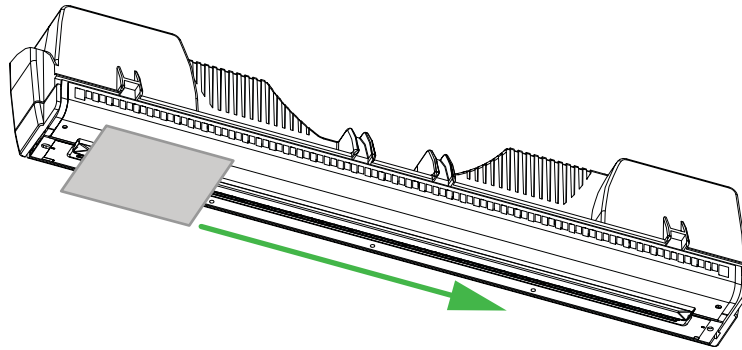


- 3 Wipe the printhead with a dry lint-free cloth to remove excess water. Ensure that the electrical contacts on the printhead are dry and clear of all ink and water.
- 4 Reinstall the printhead in the printer and close the latch. Complete the printhead replacement procedure.

## Powering Up After Extended Downtime

If the QL-800 has been powered down or unplugged for two weeks or longer, you must use the following procedure before printing again.

**Note:** The printer will power down automatically after eight hours of idle time.

- 1 Press and hold the power key for one second to turn the power on.

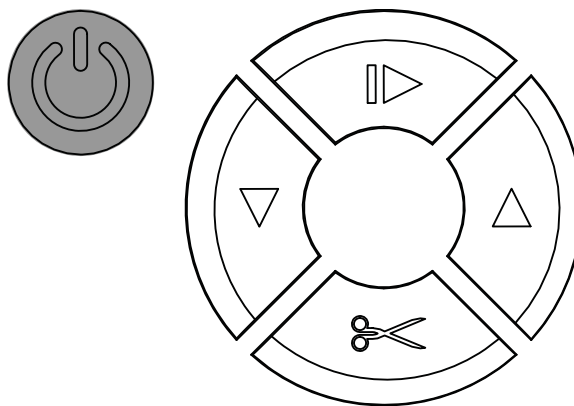

The printer will begin the power-up process, and the green LED will flash momentarily. When the green LED stops flashing and remains on, proceed to the next step.

- 2 Launch the QL-800 Maintenance Utility.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Maintenance Utility**. A language and printer prompt will open.

Select a display language and the QL-800 printer you want to connect to. Choose **OK**.

- 3 Choose the **Cleaning** tab.
- 4 Choose **Before Moving**, and then follow the on-screen instructions. When the process is complete, proceed to the next step.
- 5 Choose **After Moving**, and then follow the on-screen instructions. When the process is complete, the printer will be ready for regular use again.

## Upgrading the Printer Driver and Utilities

After installing an upgrade to the printer driver and QL-800 Maintenance Utility, you will need to apply the updated cleaning routines from the QL-800 Maintenance Utility to the printer.

Turn on the printer power and connect to the printer with the QL-800 Maintenance Utility. Then use the **Update Cleaning Procedures** feature in the **Cleaning** tab. *See “Updating Cleaning Procedures” on page 76.*

## Upgrading the Print Module Firmware

The print module inside the QL-800 has its own firmware. Upgrading this firmware is not possible using the QL-800 Maintenance Utility. However, a dedicated upgrade application is installed with the printer driver software. Use the following instructions to upgrade the print module firmware.

- 1 Obtain the print module firmware file from the QuickLabel website or QuickLabel Technical Support. The file will have a name similar to the following example.

sirius\_QLS-R3.0r27835.bin


- 2 Close all QuickLabel applications. Make sure the following applications are not running before continuing to the next step.

- CQL Pro
- QL-800 Maintenance Utility
- QL-800 Status Monitor
- QL-800 Toolbox (web browser utility)

- 3 Launch the QL-800 Update Firmware application.

From the Windows start menu, choose **Start > All Programs > QuickLabel QL-800 > QL-800 Update Firmware**. A file selection window will open.

- 4 Select the firmware file. Then choose **Open**. The Update Firmware window will open.

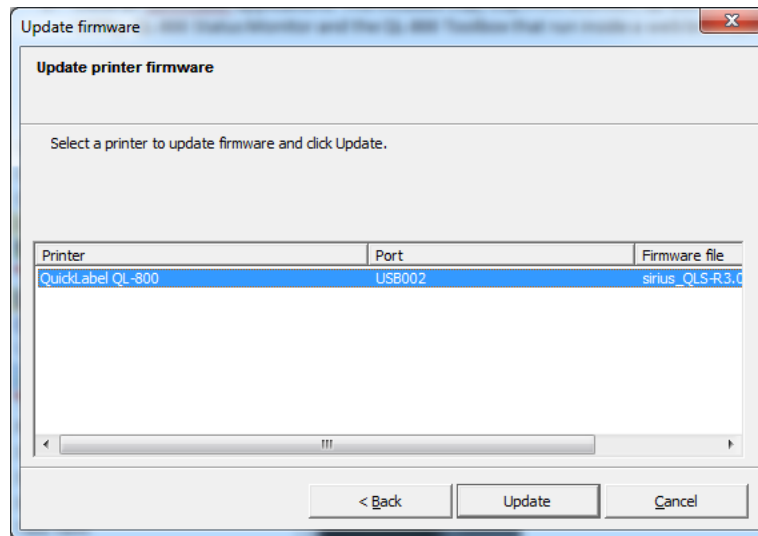

The printer names in this window correspond to the printer names in the Windows Devices and Printers window.

- 5 Select the printer to be upgraded. Then choose **Update**.

The firmware upgrade process will begin. This process requires several minutes. The displayed progress bar only indicates upgrade activity and is not an indicator of the percent complete.

Near the end of the upgrade process, the print module will automatically shut down and restart. You will hear maintenance functions running during this process. Once the print module has completed restarting, the upgrading progress bar window will close.

- 6 When the upgrade is complete, choose **Cancel** to close the Update Firmware window and close the upgrade application.
- 7 After the print module restarts, a full printer shutdown is required to synchronize the print module and paper path components. Press and hold the front panel power button until the green LED starts to blink and a beep is heard.

Once the shutdown is complete and the green LED is off, the printer can be turned back on by pressing and holding the front panel power button.

**Related Topics:**

- "Upgrading the Printer Firmware" on page 68



## Error 1001 - Paper Path Error

The printer did not move media into the proper position within the expected time.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Look for and clear a potential jam.
  - If a jam is present, cut the media. Press and hold the pause/resume key to cancel the job. Then clear the jam.  
  
Cut a fresh edge on the media and then reload it. The remainder of the job can be sent again.
  - If no jam is present, press and hold the pause/resume key to cancel the job. Press and release the feed key as needed until the last label printed is aligned with the exit. Resend the print job.

## Error 1002 - No Media at Pinch


Media is not detected at the loading pinch (where the media enters the printer). This error may also occur if the mandrel rewinds freely for too long without being stopped by tensioned media.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Load media.
- 2) Press and release the power key to resume the job. Or press and hold the pause/resume key to cancel the job.
- 3) If the job fails to resume or is canceled, turn the printer power off and disconnect the power cable from the power outlet.

Visually inspect the feed sensor where media enters the printer and clean debris with a lint-free cloth.

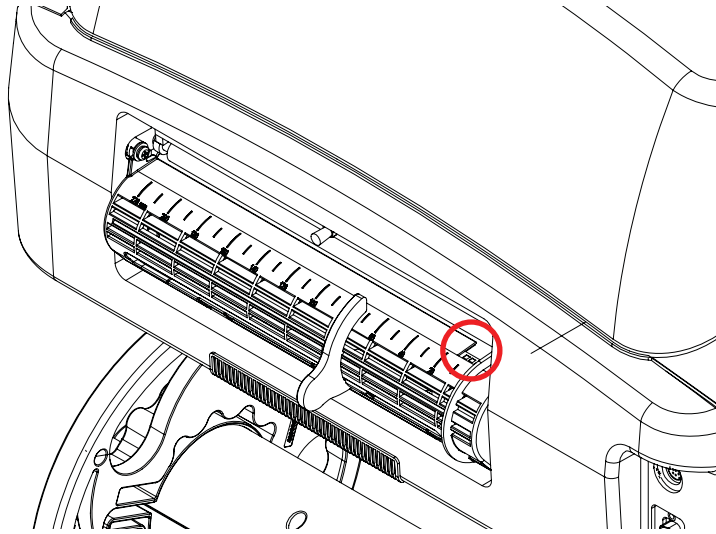

If adhesive is present, use a swab dampened with isopropyl alcohol to clean the affected areas.

If isopropyl alcohol is insufficient, Goo Gone may be used as an alternative. Use Goo Gone sparingly when cleaning sensors. Using excessive amounts may result in sensor damage.

- 4) Make sure the mandrel does not have excessive slack. Avoid pulling slack media off the mandrel.

## Error 1003 - Unwind too Slow

The mandrel is moving slower than expected.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Ensure that the wing nut on the end of the mandrel is tightened by turning it clockwise.
- 2) Look for and clear obstructions at the unwind mandrel.
- 3) Check for media slack between the media entry slot and roll. Reload media if necessary.
- 4) Ensure the outer diameter of the roll is 8 inches or less.
- 5) Press and release the power key to resume the job. Or press and hold the pause/resume key to cancel the job.

## Error 1004 - Unwind too Fast

The mandrel is moving faster than expected.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to resume the job. Or press and hold the pause/resume key to cancel the job.

## Error 1005 - Out of Media

The media roll is empty.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Load media.
- 2) Press and release the power key to resume the job. Or press and hold the pause/resume key to cancel the job.

## Error 1006 - Cutter Jam


The cutter did not make it to the opposite side, or the cutter may not be moving.

### Solutions


Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and hold the power key on the operation panel for three seconds to turn the printer off. On the rear of the printer, turn the power inlet switch off. Clear the obstruction in the cutter area. On the rear of the printer, turn the power inlet switch on. Power on the printer.
- 2) If the cutter is not moving at all, remove media from the printer. Remove and then reinstall the transport unit. Ensure it is fully inserted in the printer.
- 3) An electrical connection is not being made where the transport unit plugs into the printer. Examine both connectors and make sure the connectors' pins are clean and not pushed in or damaged.

The connector on the transport unit is illustrated below.

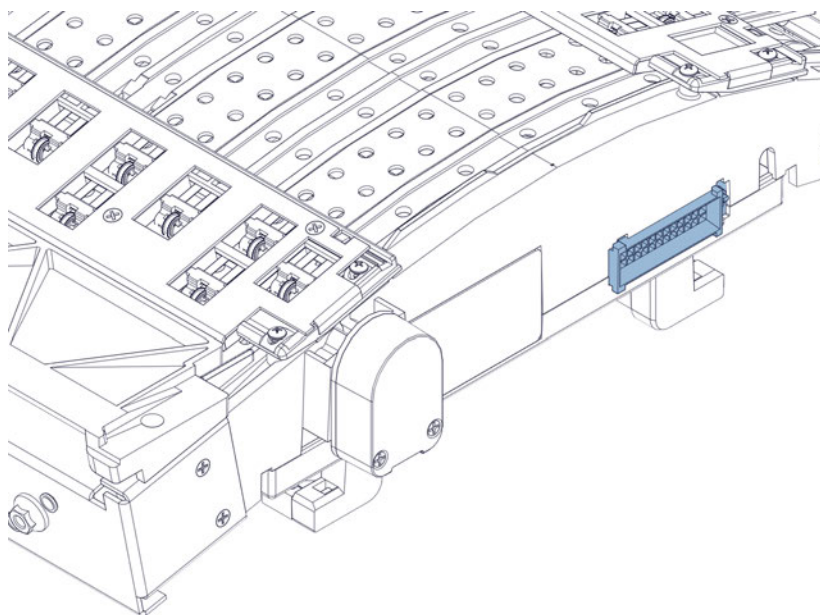


The mating connector inside the printer is illustrated below.

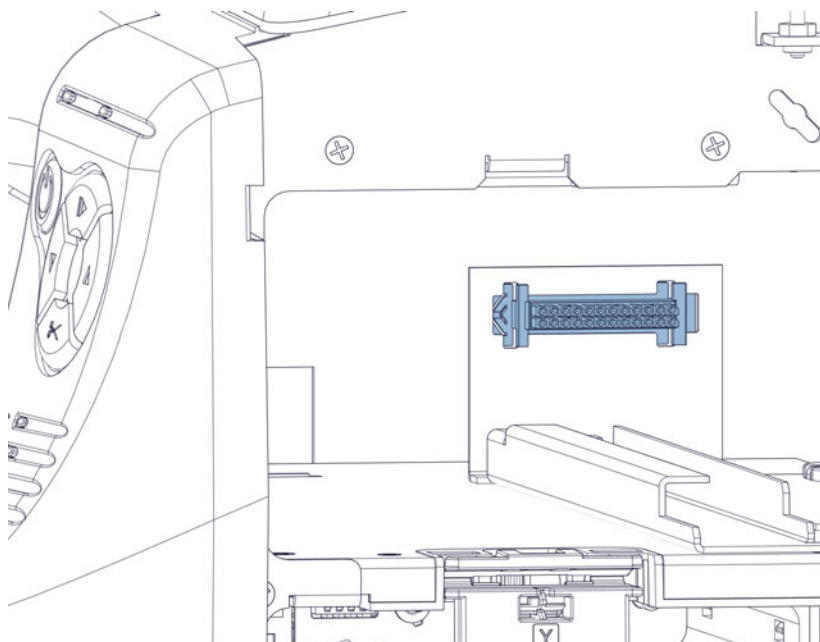



- 4) Examine the cutter assembly on the transport unit. Make sure all parts are intact. Ensure the metal locking washer that retains the white plastic gear is installed.

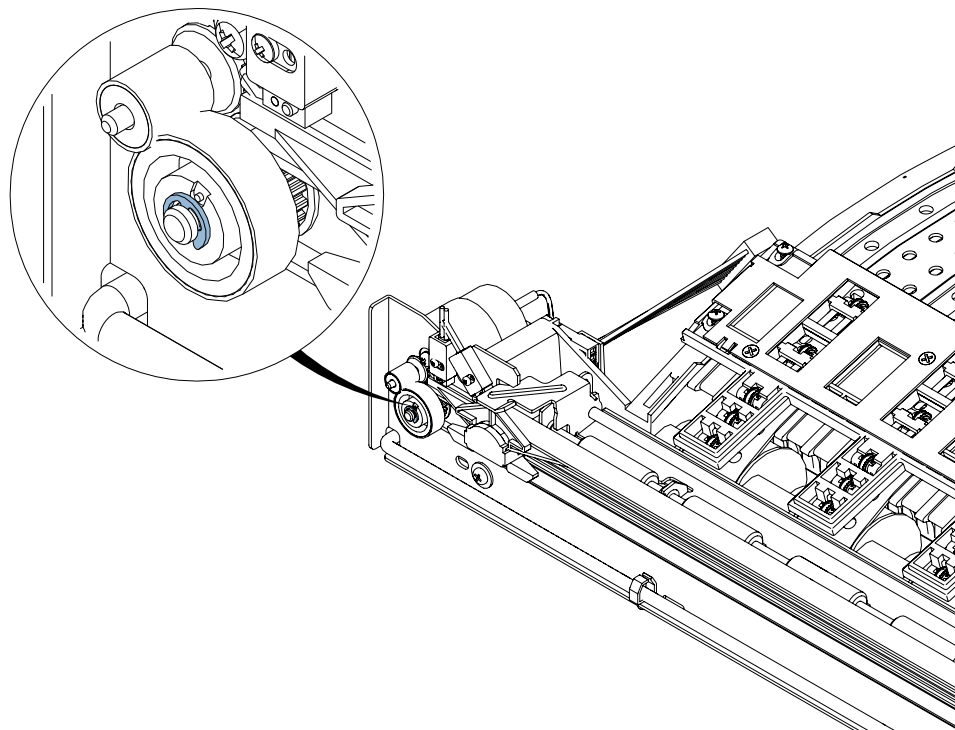

- 5) Ensure that the cut is occurring through the label liner between labels. If necessary, adjust the cut/stop position in the Print Settings tab of the QL-800 Maintenance Utility.

## Error 1007 - Reserved

This error is reserved (not applicable).

## Error 1008 - Continuous Media Selected

Attempting an operation incompatible with continuous media (a single label feed, for example).

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.

## Error 1009 - Can't Calibrate Media

The printer cannot read TOF marks.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Confirm the media meets specifications.
- 3) This message can occur when changing media types. For example, when switching to reflective after the previous job was printed on gap material.

When switching material types, the job should be sent to the printer before loading the media. There will be a brief delay before an error is produced due to unloaded media. Media can be loaded during this time. If media is not loaded before the error is produced, clear the error and re-attempt the load. The job will not be lost.

## Error 100A - Main Side Door Open

The main side door was opened during a print job.


### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Close the door.

Press and release the power key to resume the job. Or press and hold the pause/resume key to cancel the job.

- 2) If the door is closed and the error persists, ensure that the door switch is engaged when the door is closed. Bend the switch arm outward if necessary.

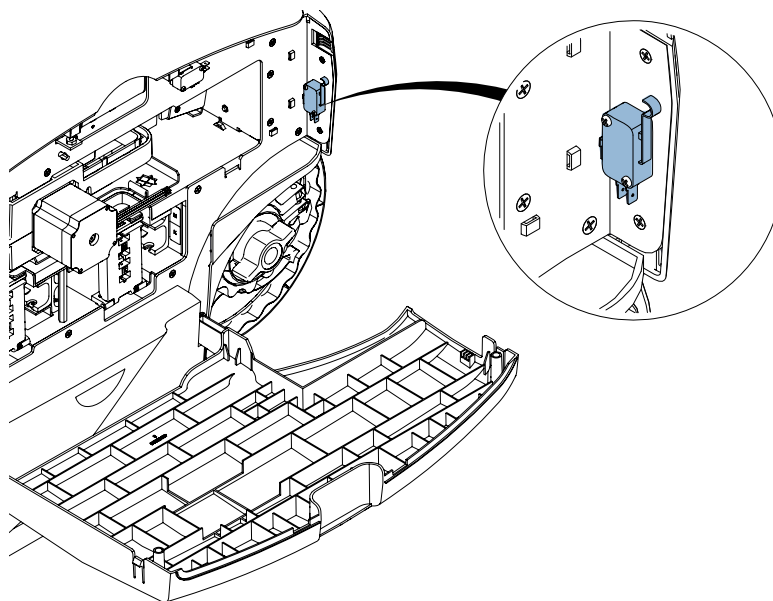

## Error 100B - Top Cover Open

The top cover was opened during a print job.


### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.


- 1) Close the top cover.

Press and release the power key to resume the job. Or press and hold the pause/resume key to cancel the job.

- 2) If the top cover is closed and the error still occurs, ensure that the cover switch is engaged when the cover is closed. The closed position of the cover is controlled by a screw that acts as a stop. Adjust this screw to lower the closed position of the cover.

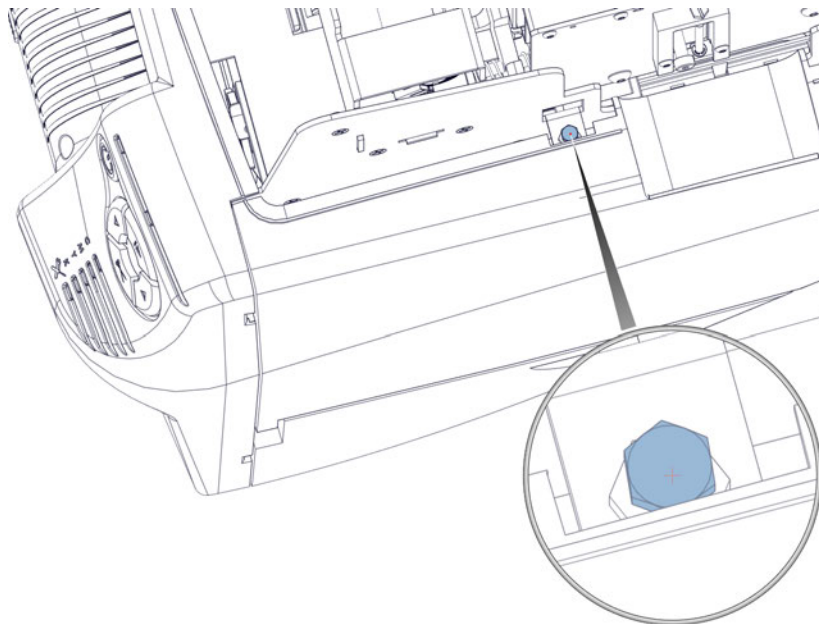

- 3) If the top cover is closed and the error persists, ensure that the cover switch is engaged when the door is closed. Bend the switch arm upward if necessary.

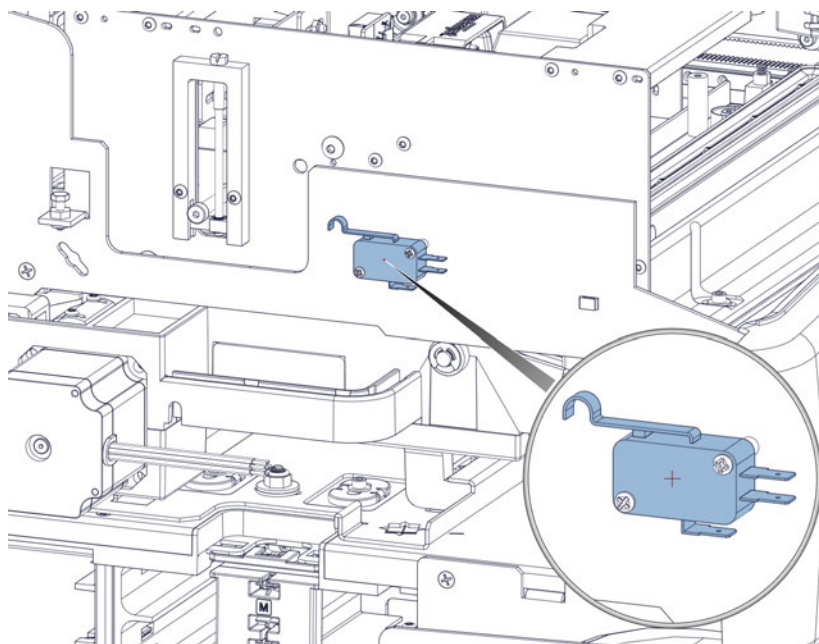

## Error 100C - Maintenance Cartridge Missing

The printer cannot detect the maintenance cartridge.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Install the maintenance cartridge. If a maintenance cartridge is installed, try repositioning it.  
Press and release the power key to clear the error.

## Error 100D - Transport not Installed

The printer cannot detect the transport unit.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Install the transport unit. If the transport unit is installed, try repositioning it.  
Press and release the power key to clear the error.

## Error 100E - Belt Motor Stall

The belt motor has stalled.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Remove and then reinstall the transport unit. Ensure it is fully inserted in the printer.
- 2) Remove the transport unit and inspect it.

Ensure no label media or excessive ink build-up is restricting movement of the belts.

Press and release the power key to resume the job. Or press and hold the pause/resume key to cancel the job.

## Error 100F - Pinch Motor Stall

The pinch motor has stalled.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Inspect the loading pinch (where the media enters the printer).

Make sure there is no label media or other debris on or near the pinch rollers that could restrict the rollers from turning.

- 2) Clean the input pinch rollers.

## Error 1010 - Can't Start Vacuum Fans

There is an electronics failure.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 2) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1011 - Unwind Over Current

Unwind motor requires more current than should be supplied.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Look for and clear obstructions at the unwind mandrel.

Press and release the power key to resume the job. Or press and hold the pause/resume key to cancel the job.

## Error 1012 - TOF Mark not Found

The printer cannot read TOF marks.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Confirm the media meets specifications.
- 3) Make sure the printer profile is set up correctly and the correct sensor type is selected in the printer driver.

## Error 1013 - Internal Error

There is an electronics failure.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1014 - Internal Error

There is an electronics failure.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.

- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1015 - Internal Error

There is an electronics failure.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1016 - Can't Tighten Unwind

The printer cannot tighten media at the supply mandrel.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Look for and resolve issues at the unwind mandrel.

## Error 1017 - Print Engine Start Timeout

The printer did not detect a top-of-form mark after the job was set to start.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Look for and clear a potential jam.
- 2) Remove and then reinstall the transport unit. Ensure it is fully inserted in the printer.
- 3) Confirm that the label dimensions set up in the driver match the actual material label size.



## Error 1018 - Reserved

This error is reserved (not applicable).

## Error 1019 - Reserved

This error is reserved (not applicable).

## Error 101A - TOF Calibration

The printer is not ready to start calibration.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and hold the pause/resume key to cancel the job.

Press and release the power key to clear the error.

## Error 101D - Not Printing Timeout

Printing has started, but there is too much time/space between printed labels.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Check for peeled off labels.
- 2) Make sure the label size defined in the printer driver matches the actual label dimensions.
- 3) Data starvation is occurring. *See "Addressing Data Starvation" on page 143.*

## Error 1020 - Shared Memory Read Timeout

There is an internal communications failure.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.

- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1021 - Shared Memory Write Timeout

There is an internal communications failure.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1022 - Shared Memory Response Timeout

There is an internal communications failure.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1023 - System Initialization Timeout

The print engine was not online in the expected time.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 2) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1024 - Unexpected Engine Response

There is an internal communications failure.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1025 - Shutdown Timeout

There was a failure to shut down the print engine.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Turn the printer off using the power inlet switch on the rear of the printer.

## Error 1030 - Can't Erase EEPROM

An internal EEPROM failure occurred.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1031 - Can't Program EEPROM

An internal EEPROM failure occurred.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1032 - Invalid EEPROM Checksum

An internal EEPROM failure occurred.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.

- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1038 - Upgrade Failure

There was an internal upgrade failure.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1039 - Upgrade Failure

There was an internal upgrade failure.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 103A - Upgrade Failure

There was an internal upgrade failure.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1040 - Failed to Read Job Status

Corrupt or incomplete job status message was received from print engine.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to clear the error.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1042 - Can't find Job Parameter

Job status message does not contain valid horizontal offset parameter.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and hold the pause/resume key to cancel the job. Reprint the job.
- 2) Press and release the power key to resume the job. Or press and hold the pause/resume key to cancel the job.

## Error 1043 - Can't find Job Parameter

Job status message does not contain valid vertical offset parameter.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and hold the pause/resume key to cancel the job. Reprint the job.
- 2) Press and hold the power key on the operation panel for three seconds to turn the printer off. Wait three seconds. Then press and hold the power key for one second to turn the printer on again.
- 3) On the rear of the printer, turn the power inlet switch off. Wait three seconds. Then turn the power inlet switch on. Power on the printer.

## Error 1044 - Can't find Job Parameter

Job status message does not contain valid top-of-form parameter.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to resume the job. Or press and hold the pause/resume key to cancel the job.

## Error 1045 - Can't find Job Parameter

Job status message does not contain valid cut at end of job parameter.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to resume the job. Or press and hold the pause/resume key to cancel the job.

## Error 1046 - Can't find Job Parameter

Job status message does not contain valid cut every N parameter.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Press and release the power key to resume the job. Or press and hold the pause/resume key to cancel the job.

## Error 1050 - The Maint Cartridge is Full


A print job cannot start if the maintenance cartridge is full.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.


- 1) Install a new maintenance cartridge.
- 2) Press and release the power key to clear the error.
- 3) If your printer model has a maintenance cartridge sensor, clean the sensor and the maintenance cartridge. If ink is present on the sensor or the exterior of the maintenance cartridge, false sensor readings may occur.

Open the lower side door and remove the maintenance cartridge. Use a clean, lint-free cloth dampened with isopropyl alcohol to clean the optical sensor [1] inside printer.

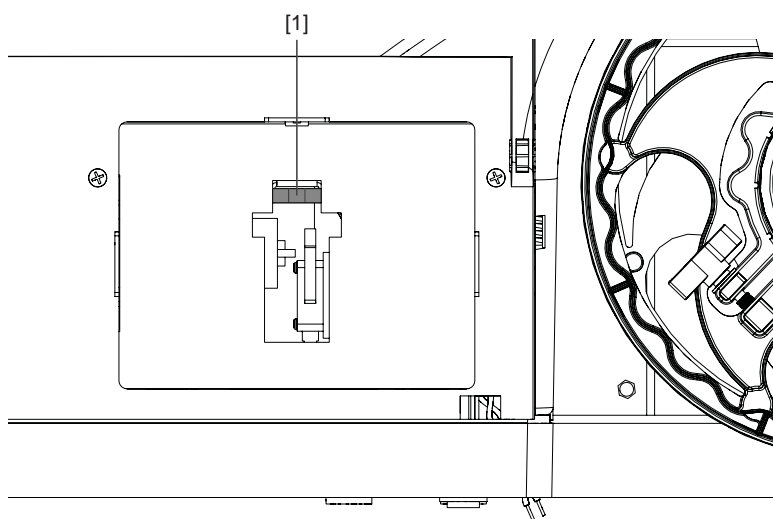



Use a clean, lint-free cloth dampened with isopropyl alcohol to clean the indicated area on the maintenance cartridge.

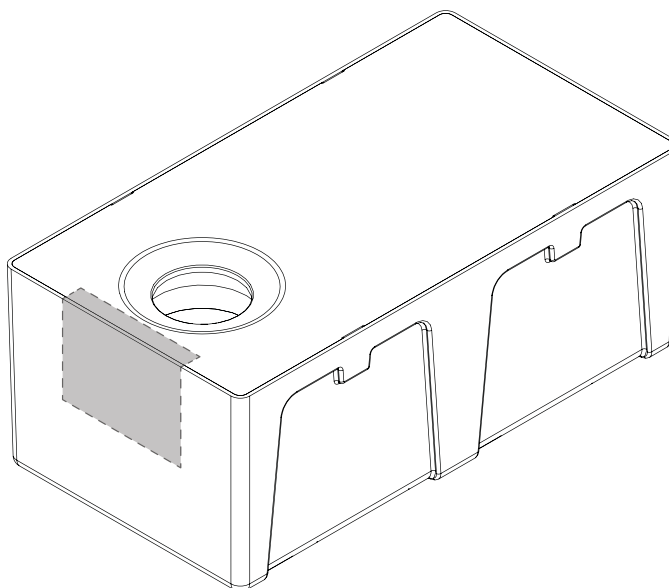

Insert the maintenance cartridge and close the lower side door.

## Error 1051 - Not ready to print

The printer is unable to start a print job in the current state.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Complete the current task.

Press and release the power key to clear the error.

## Error 2001 - Faulty Printhead

The printhead is damaged or has a poor electrical connection.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Remove the printhead using the printhead replacement function in the Parts Replacement tab of the QL-800 Maintenance Utility.

Clean the electrical contacts on the printhead with a clean, lint-free cloth and isopropyl alcohol.

Finish using the printhead replacement function but reinstall the same printhead.

- 2) Replace the printhead.

## Error 2002 - Incorrect Printhead

The installed printhead is not appropriate for this printer.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Install a genuine QuickLabel printhead.

## Error 2003 - Printhead Missing

The printhead is not installed, has a poor electrical connection, or a printhead latch is not recognized as being closed.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Remove the printhead using the printhead replacement function in the Parts Replacement tab of the QL-800 Maintenance Utility.

Clean the electrical contacts on the printhead with a clean, lint-free cloth and isopropyl alcohol.

Finish using the printhead replacement function but reinstall the same printhead.

- 2) Replace the printhead.

## Error 2004 - Unlicensed Printhead

A qualified electrical component is not being found by the system.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Install a genuine QuickLabel printhead.

## Error 2005 - Unusable Printhead

A qualified electrical component is not appropriate for the system.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Remove the printhead using the printhead replacement function in the Parts Replacement tab of the QL-800 Maintenance Utility.

Clean the electrical contacts on the printhead with a clean, lint-free cloth and isopropyl alcohol.

Finish using the printhead replacement function but reinstall the same printhead.

- 2) Replace the printhead.

## Error 2006 - Printhead Unprimed

The printhead is detected as not primed.

The printhead is primed when you run the After Moving function in the Cleaning tab of the QL-800 Maintenance Utility.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) If the printhead has been primed and used successfully and then this error occurs, the printer may have been powered off using the power inlet switch on the rear of the printer after priming.

Run the After Moving procedure in the Cleaning tab of the QL-800 Maintenance Utility to re-prime the printhead. After priming the printer, turn the printer off with the power key on the operation panel first for the settings to be saved.

- 2) Remove the printhead using the printhead replacement function in the Parts Replacement tab of the QL-800 Maintenance Utility.

Clean the electrical contacts on the printhead with a clean, lint-free cloth and isopropyl alcohol.

Finish using the printhead replacement function but reinstall the same printhead.

## Error 2007 - Maintenance Busy

The printer is performing maintenance.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Wait until the printer has finished the maintenance operation.

## Error 2008 - 1000 Series Error Occurred

Error 2008 in the Maintenance Utility log indicates that a 1000 series error has occurred or did previously occur. The specific 1000 series error can be viewed in the Status Monitor. 1000 series error details are not retained in the Maintenance Utility log.

## Error 2009 - Maintenance Jam

Mechanical components in the print module have failed to move.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.


- 1) It is often best to monitor the motion of print module parts with the cover up. Power down the printer, open the cover, and restart the printer.

Observe the positional calibration routine as well as the start up maintenance. Problems with the printhead lift can often be observed here. Listen carefully when the printer attempts to lift the printhead from a lowered position. There is often a chirp or squeaking sound that can be heard if the lift motor has stalled.

- 2) Open the top cover and check for obstructions.


Open the main side door. Remove the transport unit and inspect it. Make sure the star wheel assemblies are tightened. If they are not tightened, or if they are bent, the assemblies may come in contact with the maintenance assembly and prevent it from moving.

- 3) Inspect the waste ink tube from the maintenance sled. This can shift position and prevent the maintenance sled from moving into position. The waste ink tube connects to the maintenance sled at the illustrated port.

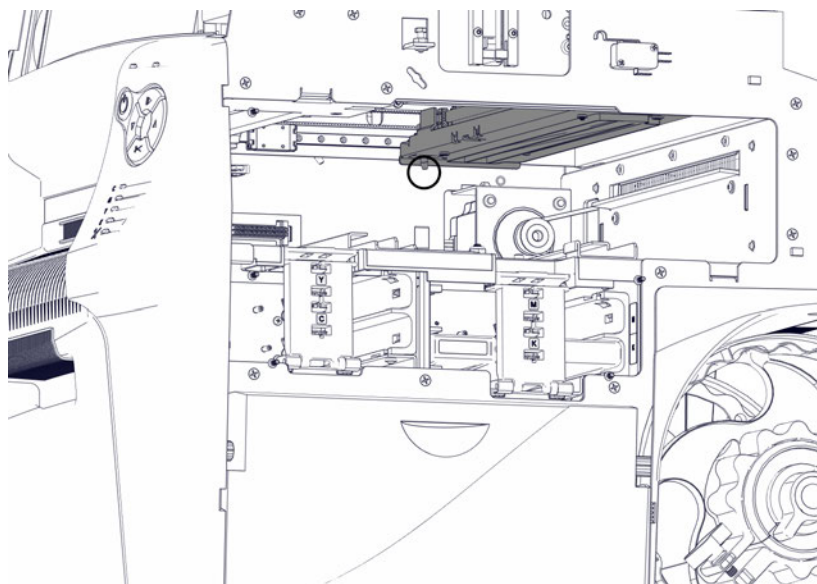


- 4) Tension in the printhead harness bundles can restrict motion and make it more difficult for the printhead to move up and down. Check the harness routing.
- 5) Inspect the gears of the printhead positioning motor.

The worm gear and lift gear combination is illustrated below. Make sure the gears are in alignment and there is no damage or significant wear in the black plastic lift gear.

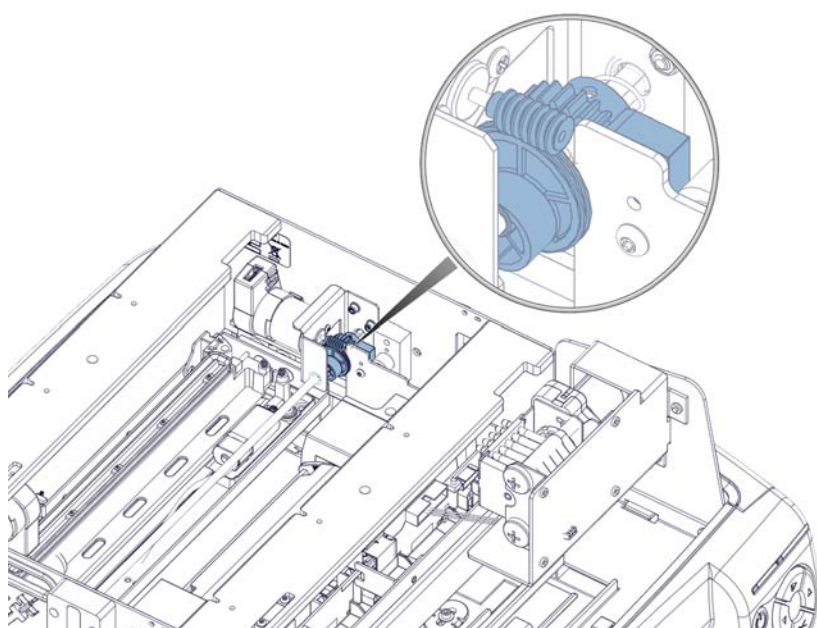

- 6) Inspect the cam rollers on the print engine. Ensure both rollers are present.

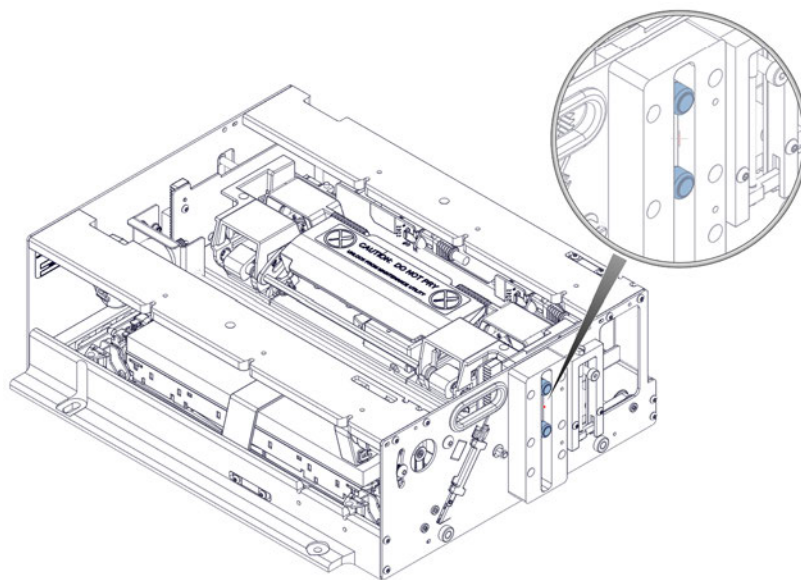

## Error 200A - Black Cartridge is Missing

The black ink cartridge was not detected.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Clean ink cartridge electrical contacts and reinstall the ink cartridge.

## Error 200B - Magenta Cartridge is Missing

The magenta ink cartridge was not detected.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Clean ink cartridge electrical contacts and reinstall the ink cartridge.

## Error 200C - Yellow Cartridge is Missing

The yellow ink cartridge was not detected.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Clean ink cartridge electrical contacts and reinstall the ink cartridge.

## Error 200D - Cyan Cartridge is Missing

The cyan ink cartridge was not detected.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Clean ink cartridge electrical contacts and reinstall the ink cartridge.

## Error 200E - Multiple Cartridges are Missing

Multiple ink cartridges were not detected.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Clean ink cartridge electrical contacts and reinstall the ink cartridge.

## Error 200F - Black Ink Out

The black ink cartridge is empty.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Replace the ink cartridge.

## Error 2010 - Magenta Ink Out

The magenta ink cartridge is empty.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Replace the ink cartridge.

## Error 2011 - Yellow Ink Out

The yellow ink cartridge is empty.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Replace the ink cartridge.

## Error 2012 - Cyan Ink Out

The cyan ink cartridge is empty.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Replace the ink cartridge.

## Error 2013 - Multiple Inks Out

Two or more ink cartridges are empty.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Replace the ink cartridges indicated by the front panel LEDs.



## Error 2014 - Missed TOF

The top-of-form mark was not found within the expected time.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Ensure the printer driver is set up correctly for your label size and sensor type.

## Error 2015 - Page Sequence Error

The print job could not start.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Check for obstructions in the paper path and re-attempt the print job.

## Error 2016 - Cartridge Error

There was an error communicating to an ink cartridge.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Clean ink cartridge electrical contacts and reinstall the ink cartridge.

## Error 2017 - Encoder Error

The media motion is not consistent across the print encoder.

The first step in diagnosing the cause of the error is determining when the error occurs after sending the print job. Error timing and related solutions are described in the following sections.

### Error Occurs Prior to Media Moving

The error occurs as the printhead moves into the print position but before media moves forward to start printing. This can be confirmed by sending a print job and watching the media mandrel.

- 1) If the media does not move after the printhead moves to the print position, the printer may be receiving corrupt data.


This may occur when using CQL Pro software. The corrective action is to reduce the size of the image slightly. For example, if your label is 8" x 8", then use a 7.980" x 7.980" image.

### Error Occurs During Printing

The error occurs after the printhead moves into the print position and after media moves forward to start printing.

- 1) In the **General** tab of the printer driver, if the **Rotate 180°** option is unchecked, check it and reprint the label. Rotating the label by 180 degrees may prevent this error from occurring.
- 2) Media is tracking poorly. This may occur under the following conditions.
  - Media is wound loose on the roll. Reload media and ensure media is tightly wound around the roll.  
Roll is not secure on the mandrel. Secure the roll and tighten the wing nut.
  - Misalignment of unwind/rewind - If the media is not squarely aligned with the rewinder inner flange, adjust the position of the rewinder as needed.  
Loosen the thumb screws that fasten the rewinder to the bracket. Slide the rewinder left/right as allowed by the adjustment slots until the media is squarely aligned with the inner flange. Then tighten the thumb screws.
- 3) The transport speed is incorrect.
  - Dry (sticky) ink under the transport unit belts is causing drag on the belts.
- 4) There is a star wheel malfunction.
  - A star wheel is not spinning. Replace the affected star wheel or the star wheel assembly.
  - A star wheel has become unseated. Remove and reinstall the affected star wheel.

Proper operation is for the star wheel to spin on the dowel pin that snaps into the star wheel bracket. If the bore in the star wheel is too tight, the star wheel will not spin.

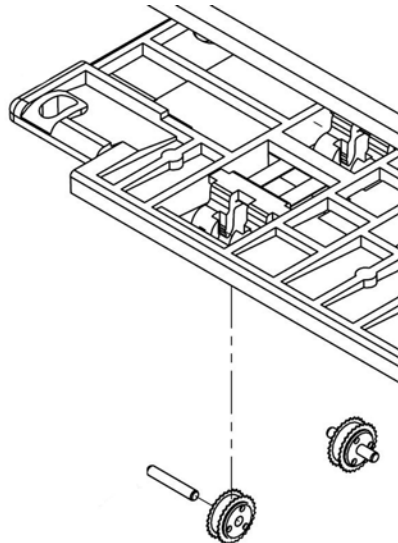

## Error 2100 - Unspecified Paper Path

The media motion is not consistent across the print encoder.

### Solutions

Contact technical support.

## Error 3XXX - Software Communication Error

Errors in the 3000 series indicate software communication errors.

### Solutions

Use the following solutions to troubleshoot the issue. The most likely solutions are listed first, followed by other possibilities. Check to see if the issue is resolved after performing each recommended solution. If the issue is not resolved, proceed to the next solution. If the issue persists after performing all solutions, contact Technical Support.

- 1) Contact Technical Support.




## Removing a Media Jam

If a media jam occurs during a print job, the red error LED will light on the front panel and the specific error message will be displayed in the Status Monitor.

**Note:** After clearing a media jam, you will need to reprint labels that were not completed before the jam occurred.


**Caution:** Use caution when removing a media jam. The printer contains sensitive components that can be damaged by debris, impact, excessive force, etc.

- 1 If media is exiting the front of the printer, perform a manual cut by pressing and holding the cut key for approximately one second.

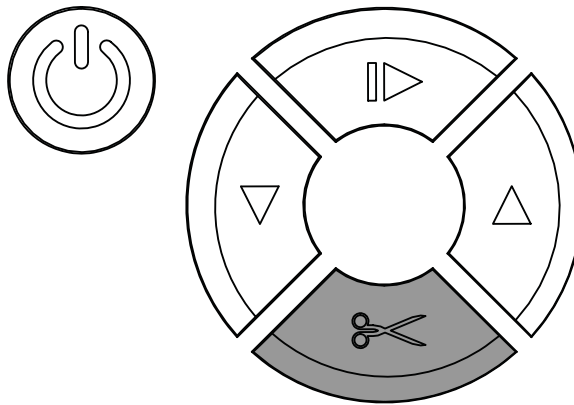

- 2 Power off the printer.
- 3 On the rear of the printer, turn the power inlet switch off.
- 4 Open the top cover and main side door.
- 5 Inspect the printer and locate the jam. With the top cover and main side door open, you can view most of the media travel path.


- 6 Remove the transport entrance guide. This guide is located on the transport unit near the media entrance pinch.
  - If the entrance guide is secured by screws, unfasten the two screws and remove the guide.
  - If the entrance guide is secured by magnets, simply remove the guide.

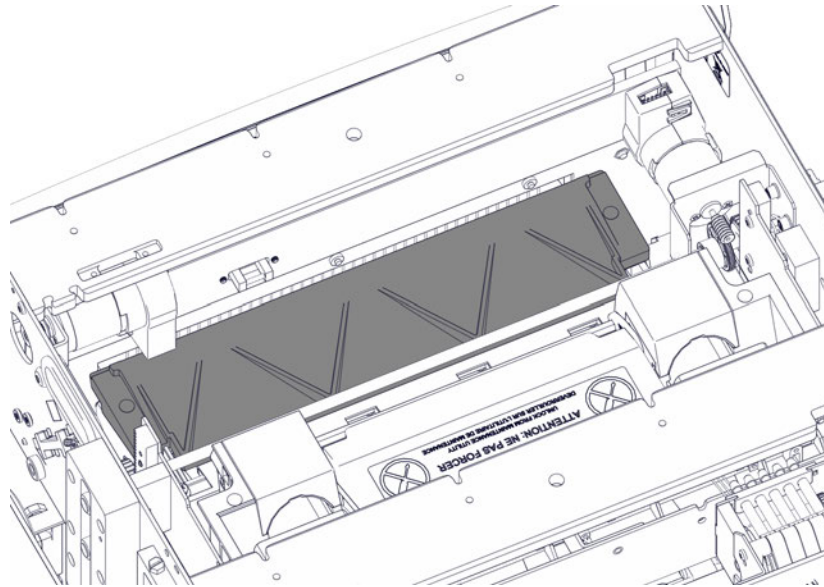

- 7 Carefully cut the media under the transport entrance guide. You can use scissors or a blade to start the cut, and then tear the rest of the way with your hands.


**Caution:** Use caution when cutting media inside the printer. Do not cut near ink tubes, belts, or wires.

- 8 Lift the roller handle to open the input pinch rollers. Then remove the media from the printer.

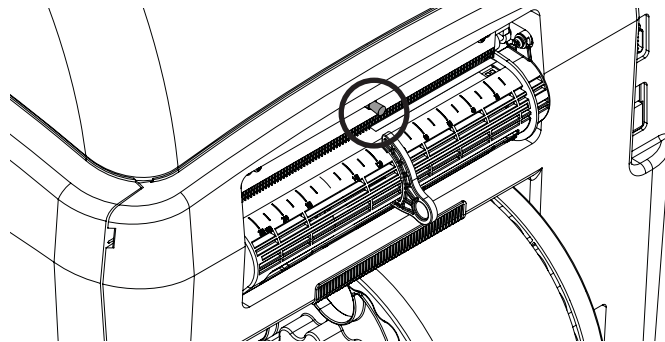

- 9 Release the roller handle and the rollers will return to their normal position.

- 10 Grasp the handle on the transport unit. Then pull the transport unit straight out of the printer.

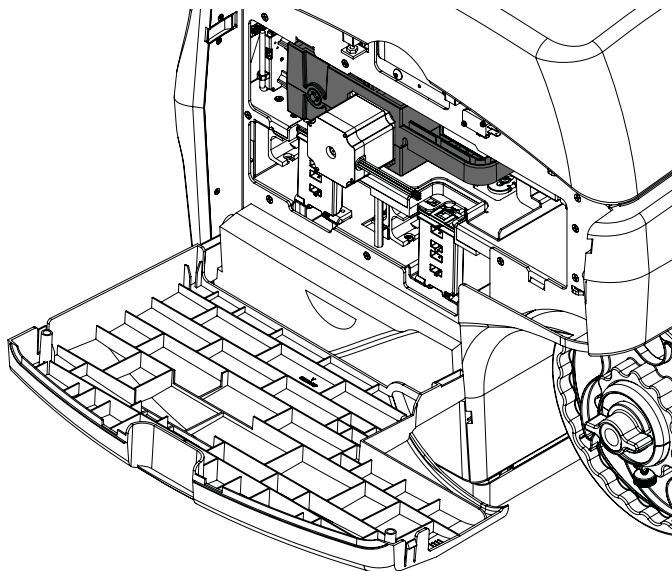


**Note:** If the yellow transport unit shipping lock is installed, you will not be able to remove the transport unit. You must first remove the shipping lock by rotating it counterclockwise and then pulling it straight out. This lock is usually removed during the unpacking process.

- 11 The next steps will vary based on the media jam location. Refer to the related section for details.
  - Input pinch rollers - See *“Removing a Media Jam in the Input Pinch Rollers”* on page 132.
  - Transport unit - See *“Removing a Media Jam in the Transport Unit”* on page 133.
  - Transport area - See *“Removing a Media Jam in the Transport Area Inside the Printer”* on page 135.

**12** After the jam has been removed, reinstall the transport entrance guide on the transport unit.

- If the entrance guide is secured by screws, position the guide and fasten it with the two screws.
- If the entrance guide is secured by magnets, simply snap the guide into position.

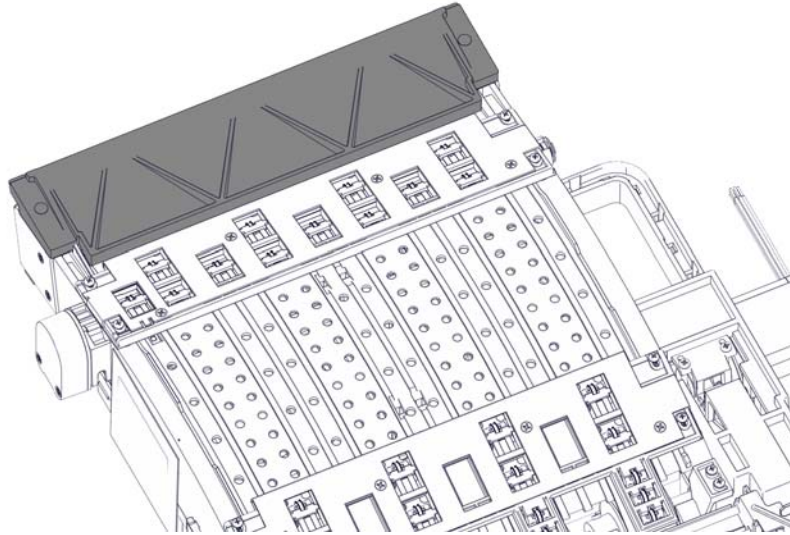

**13** Reinstall the transport unit.

**14** Close the top cover and main side door if they are open.

**15** Power on the printer.

**16** Reload the media.


### Removing a Media Jam in the Input Pinch Rollers

- 1** Remove the media roll from the printer. Use scissors to cut the media near the roll to allow for roll removal.
- 2** Power off the printer.
- 3** On the rear of the printer, turn the power inlet switch off.
- 4** With the top cover open, inspect the area near the input pinch rollers. If the jam is in an accessible location, remove it.




- 5 If the jam is located between the input pinch rollers, you can remove a cover plate to access the rollers.

- a) Disconnect the roller cover plate [2] by removing the two screws [1]. Slide the plate outward, and then up away from the printer. Removing the plate may require a small amount of force because of the tight fit. Set the plate and screws aside.

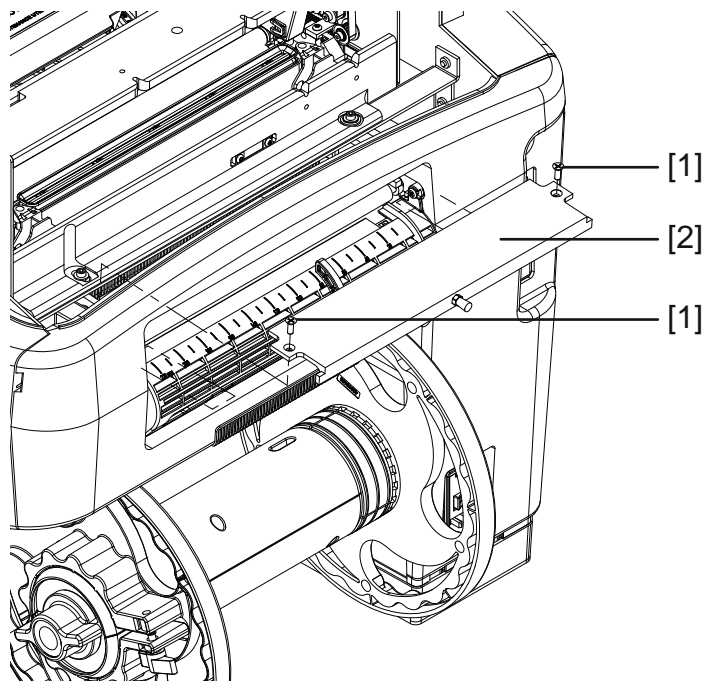

- b) Rotate the rollers [3] as necessary by turning the drive pulley [4]. Remove the jam when it is accessible.

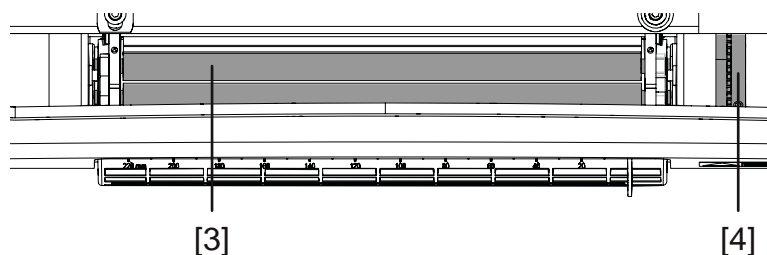

- c) Position the roller cover plate [2] in the mounting location and install the two screws [1]. Installing the plate may require a small amount of force because of the tight fit.


## Removing a Media Jam in the Transport Unit

**Note:** Before removing the transport unit, make sure that the media has been cut at the media exit and under the transport entrance guide. See [“Removing a Media Jam” on page 129](#).

- 1 Place the transport unit on a flat surface.
- 2 If the jam is located in an accessible location, remove it.


- 3 If the jam is located under one of the star wheel assemblies, remove the affected star wheel assembly.
  - a) If you will remove the star wheel assembly near the media entrance, you must first unplug a sensor harness. This harness connects the sensor on the star wheel assembly to the encoder sensor.

On newer models, this harness is protected by a cover. Remove the cover by unfastening the two screws. Then unplug the harness.

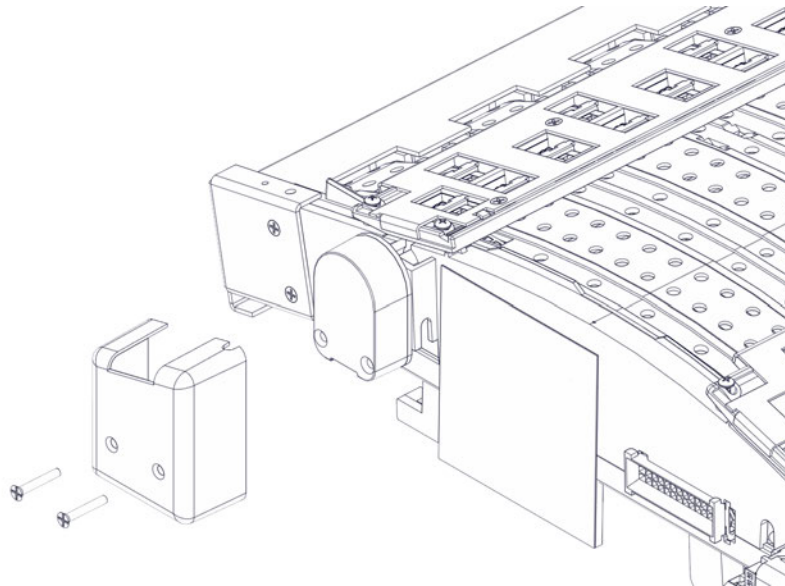


**Note:** Use caution when working near the encoder disc. The encoder disc is a sensitive component that can be damaged by debris, scratches, etc.

- b) Remove the affected star wheel assembly by unfastening the screws. Each assembly is secured by four screws.

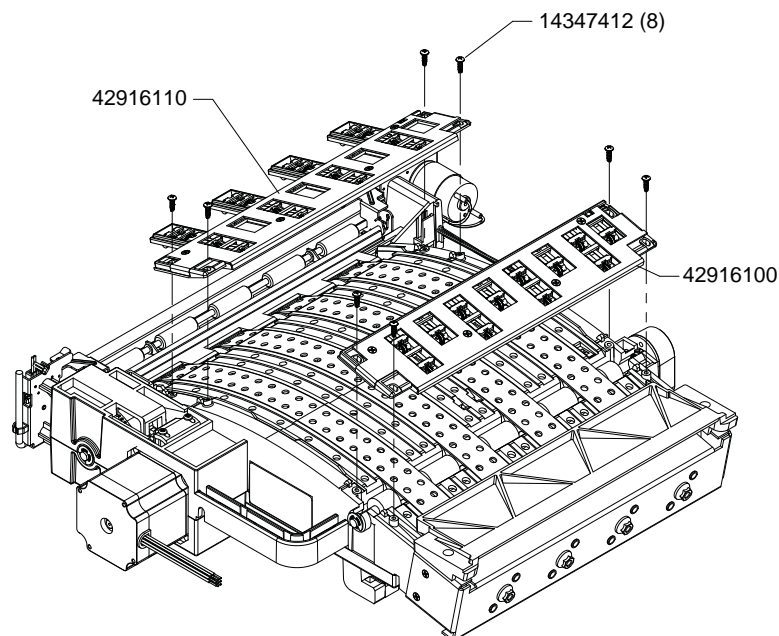

- c) Remove the jam.
- d) Inspect each star wheel on the assembly. Make sure the wheels spin freely on the dowel pins, and the dowel pins are snapped into the bracket. If a star wheel is misaligned or disconnected, remove the star wheel and its dowel pin. Then reinstall the wheel in the bracket.

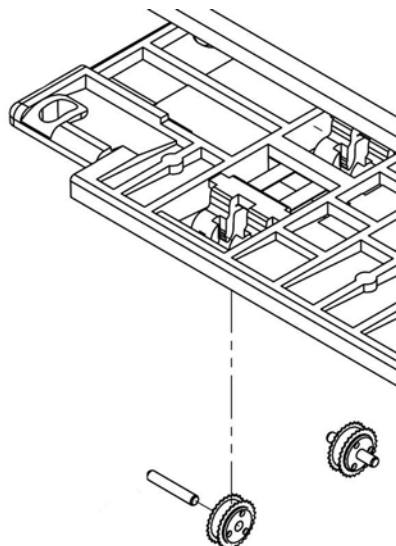

- e) Reinstall the affected star wheel assembly by fastening the four screws. Make sure the star wheel bracket is straight and not misaligned.
- f) If you removed the star wheel assembly near the media entrance, plug in the sensor harness.

If you are working with a newer model, move the harness under the protective cover. Then fasten the two screws to secure the cover.

**Caution:** Do not overtighten these screws. The screws should just contact the cover. Overtightening can result in 2017 / 2100 errors.


## Removing a Media Jam in the Transport Area Inside the Printer

- 1 Power off the printer.
- 2 On the rear of the printer, turn the power inlet switch off.
- 3 Examine the printer interior. With the transport unit removed, you will be able to locate media jams inside the printer.
- 4 If the jam is located in an accessible location, remove it.


- 5 If the jam is located up in the printhead area, manually lift the printhead and move the maintenance sled.

**Caution:** The following instructions must be completed in a short period of time. Leaving the printhead in the uncapped position too long will result in dried ink nozzles.

- a) Turn the worm gear counterclockwise to raise the printhead.

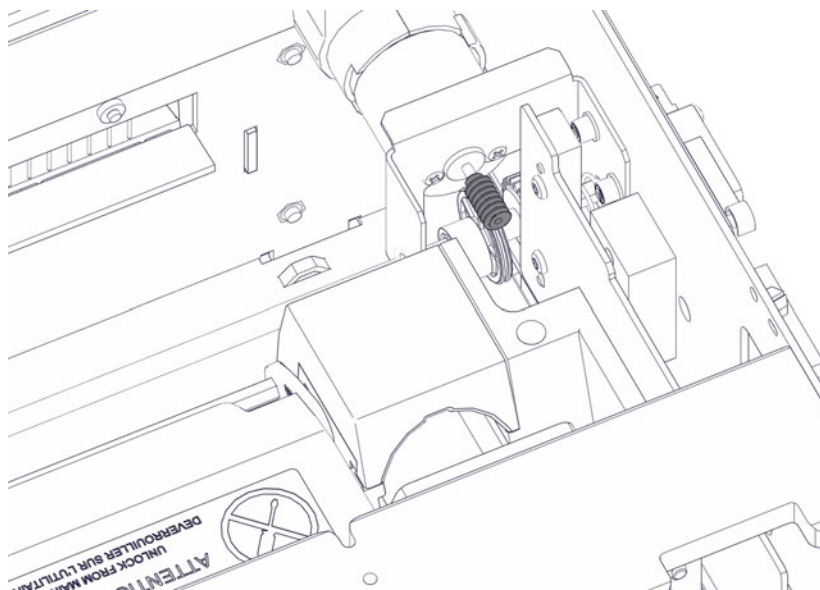

- b) Slide the maintenance sled away from the printhead toward the media entrance pinch.

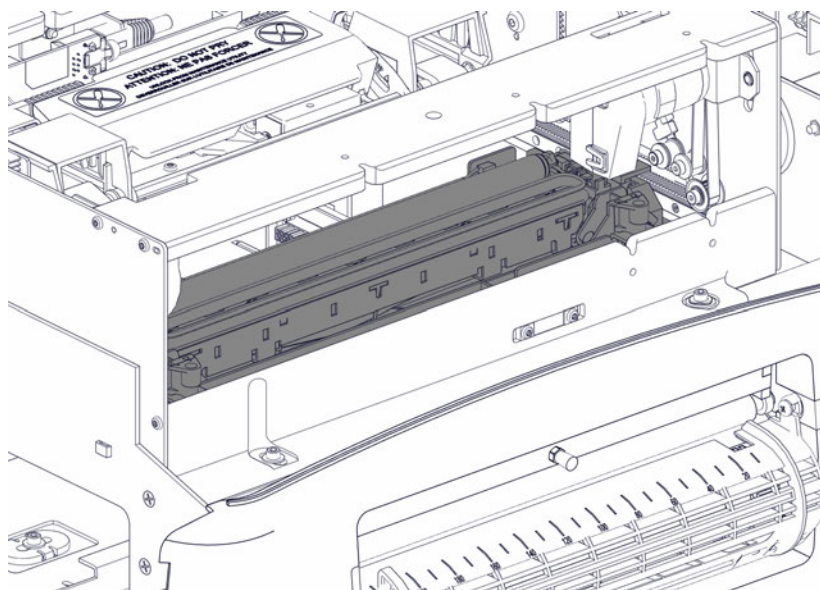

- c) Remove the jam when it is accessible.
- d) Power on the printer. The printhead and maintenance sled will automatically be adjusted during the power-up sequence, and the printhead will be moved to the capped position.

## Known Issues

### Printing Variable Data on Continuous Media Results in Blank Media Feeding

This issue results from printing under the following conditions:

- In the **Media** tab of the printer driver, **None** is selected as the **Sensor** type (continuous media).
- The print job contains labels with variable data such as barcodes or serial numbers that change during printing.

When printing under these conditions, and there is no more data available to print, the printer will not pause and wait for more data. Instead, it will continue to feed media as if printing. This has the potential to create long sections of unprinted media.

To resolve this issue, enable the **Buffer** option in the **General** tab of the printer driver. The entire job will be rendered in the spooler before it is sent to the printer.

This issue does not occur when using **Gap** or **Reflective** as the **Sensor** type. The printer will automatically pause and resume appropriately as data is received. It also does not occur when printing static labels.

#### **Related Topics:**

- *"Setting up General Options" on page 48*
- *"Setting up Media Options" on page 52*

### Color Shifts or Drops Out During Printing

This issue results due to loss of ink or excessive air in the ink lines internal to the printer.

To resolve this issue, perform the following steps:

- Cancel the print job and perform a "Prepare for Moving" sequence one time. There is no need to physically move the printer. *See "Preparing for Moving" on page 77.*
- Resume printer use. If problem continues or recurs, reseal the printhead by performing a "Replacing the Printhead" procedure and either replace the printhead or reuse the same printhead in the procedure. *See "Replacing the Printhead" on page 80.*
- Resume printer use. If the problem persists, contact Technical Support.

### Powering On with the Main Side Door Open Results in Incomplete Initialization

When the printer is powered on, components within the printer are initialized and prepared for use. You will be able to hear these components mechanically adjusted as the printer completes this routine. However, if the main side door is open, this sequence may be interrupted and the initialization process will fail.

This condition is not indicated by an error message. The initialization process will stop and only the sump pump motor will be running. To correct this issue, ensure the main side door is closed prior to powering on the printer.

## Resolving Windows 7/8/10 USB Installation Issues


When you install the printer driver via USB, you first run the installation wizard and then connect the printer to your PC via the USB cable.

If you connected the USB cable before running the installation wizard, Windows 7/8/10 will not recognize the printer correctly. In this case, the QL-800 will be listed as an Unspecified item in the Devices and Printers window.


Use the following procedure to correct this issue. This procedure assumes you have already installed the printer driver.

**Note:** This procedure requires administrator level access in Windows.


- 1 Open the Devices and Printers window.

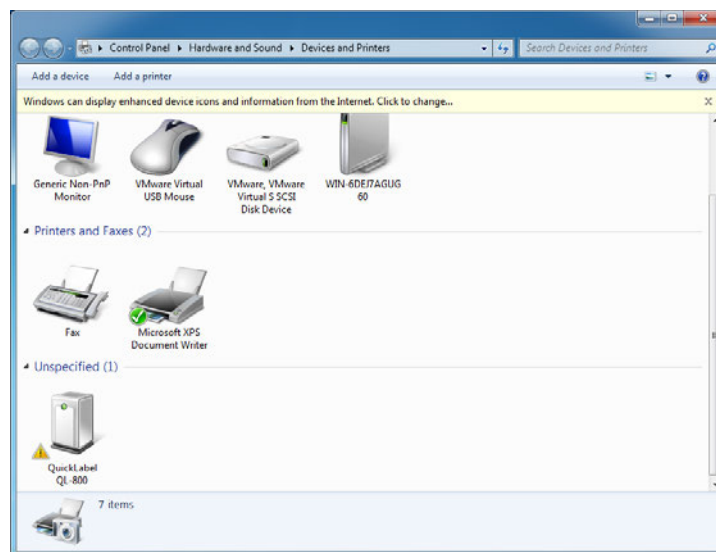


- 2 Right-click the QuickLabel QL-800 in the Unspecified list. Then choose **Properties**. The QuickLabel QL-800 Properties window will open. Choose the **Hardware** tab.

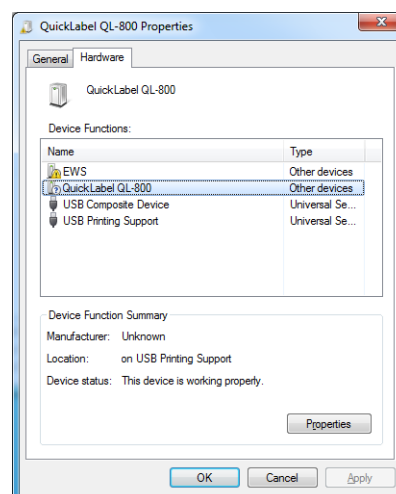

- 3 Select QuickLabel QL-800 and choose **Properties**. The Properties window will open. Choose the **General** tab.

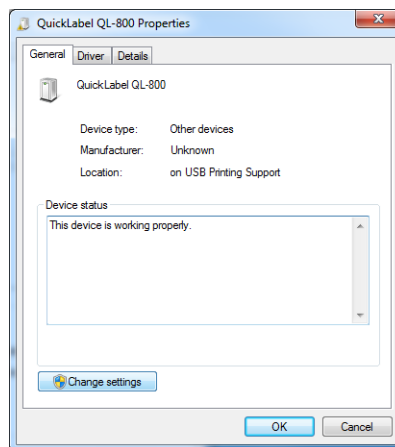

- 4 Choose **Change Settings**. Then choose the **Driver** tab.

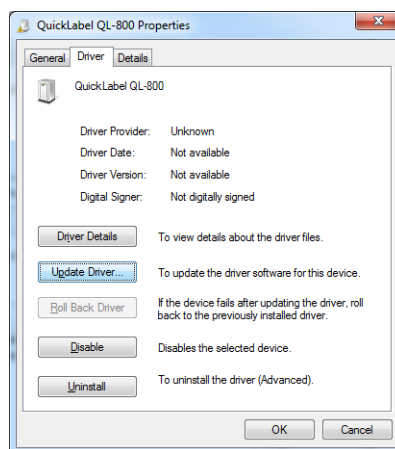


- 5 Choose **Update Driver**. When you are prompted, select the **Search automatically for updated driver software** option. Windows will locate the driver on your system and create a printer item.



## Resolving USB Communication Issues

USB communication issues may prevent you from connecting to the printer with the QL-800 Maintenance Utility, Status Monitor, or CQL Pro software.

In this situation, a warning symbol will displayed over the printer icon in the driver properties window.

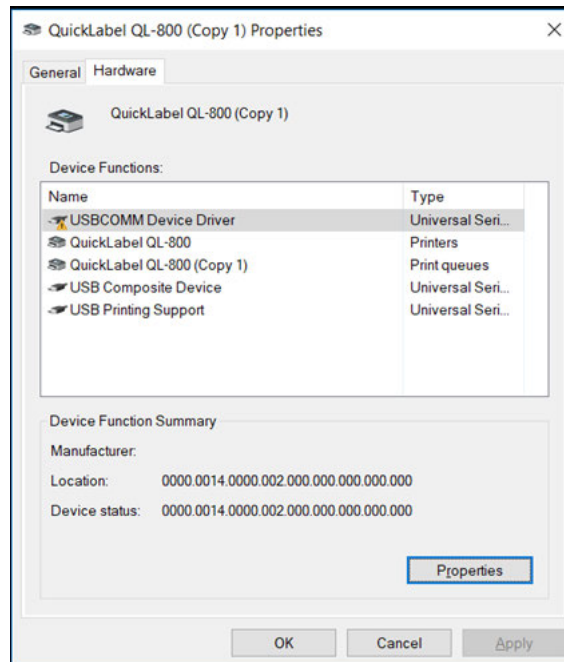


Use the following procedure to correct USB communication issues.


**Note:** This procedure requires administrator level access in Windows.

- 1 Open the Device Manager window.




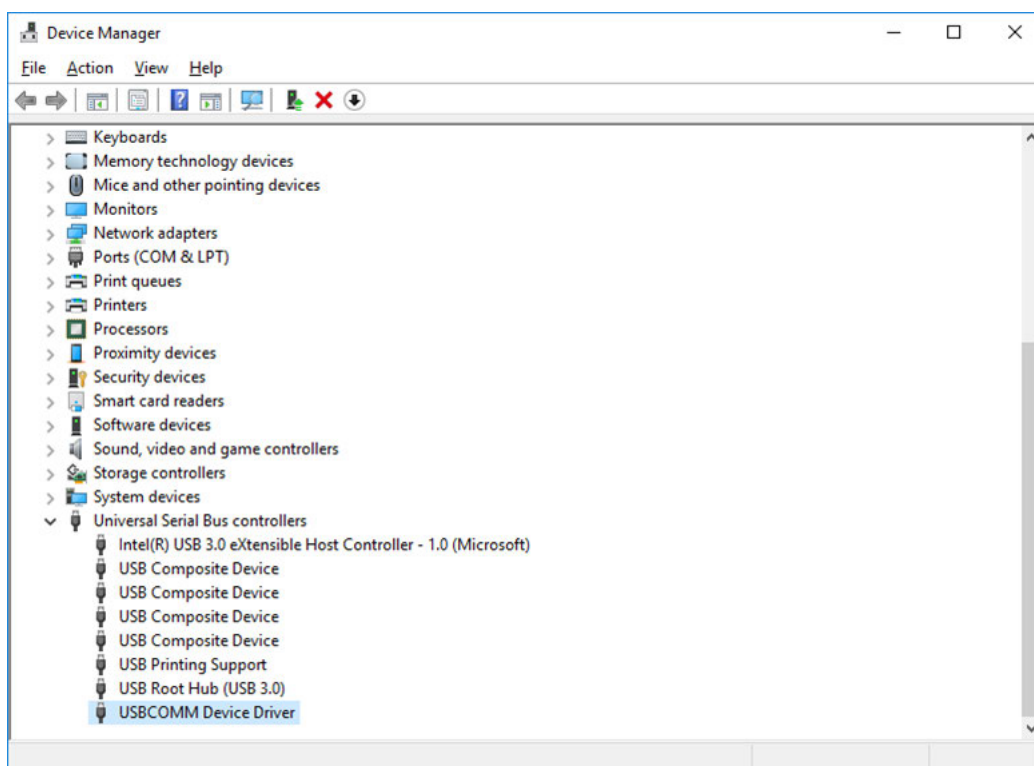

- 2 Expand the Universal Serial Bus controllers option.
- 3 Right-click **USB COM1 Device Driver** and select **Update Driver**. You will be prompted to select a search method. Choose **Browse my computer for driver software**. The Browse for drivers on your computer window will open.

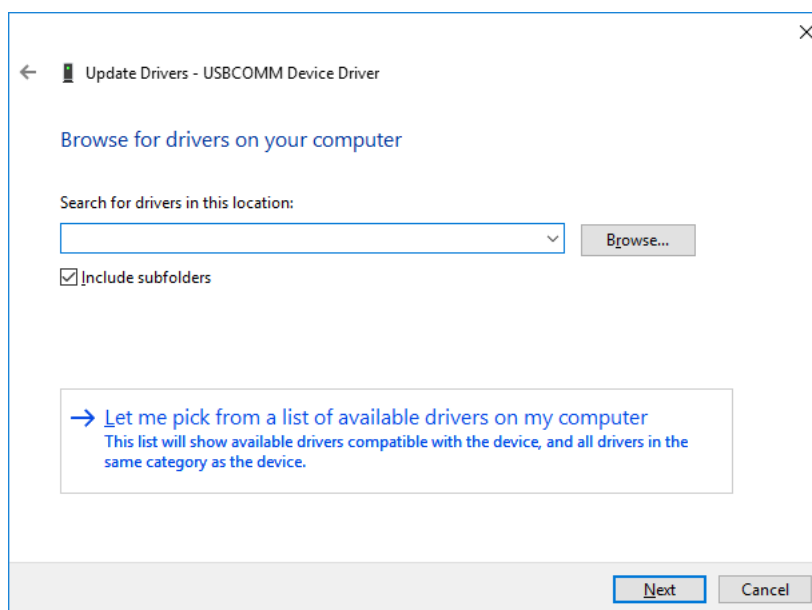

- 4 Choose **Let me pick from a list of available drivers on my computer**. The device selection window will open.

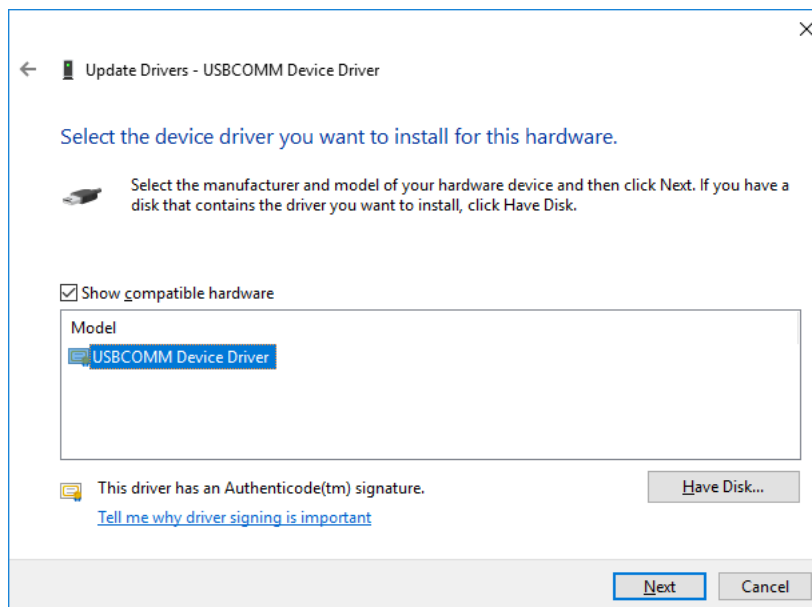


- 5 Select **USBCOMM Device Driver**. Then choose **Next** and follow the on-screen instructions to complete this procedure.

## Identifying and Resolving Priming Problems

The printer is primed when you use any of the following features:

- **After Moving** function in the **Cleaning** tab of the QL-800 Maintenance Utility
- **After Shipping** function in the **Cleaning** tab of the QL-800 Maintenance Utility
- **Printhead** replacement function in the **Parts Replacement** tab of the QL-800 Maintenance Utility

A successful priming operation can be verified by opening the top cover and examining the ink tubes illustrated below. If the five tubes are filled with ink, the printer is primed.

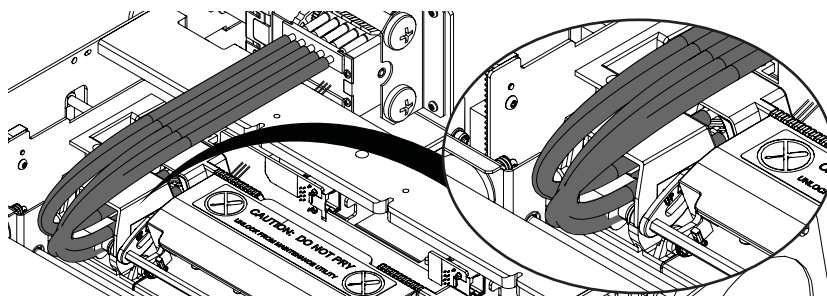

If ink is not visible in all of the indicated tubes, the priming function was not successful. In this situation, do not use any priming functions again or an ink overflow may occur.

Instead, you may need to perform a special restorative pre-prime under the guidance of Technical Support. When the restorative pre-prime has finished, you will be able to prime the printhead using the **After Moving** function in the **Cleaning** tab of the QL-800 Maintenance Utility.


**Note:** The restorative pre-prime procedure consumes ink. Only use this function as needed and with the guidance of Technical Support.

## Addressing Data Starvation

Data starvation can occur when an application produces page data for each individual page in a job rather than data for a single page and then printing it multiple times.

For some jobs, data for each individual page is necessary, such as when printing unique labels or labels containing unique data like serialization.


Some graphic design applications produce individual page data by default. In some cases, this can be avoided by setting the print quantity in the QL-800 driver instead of the application's print dialog.

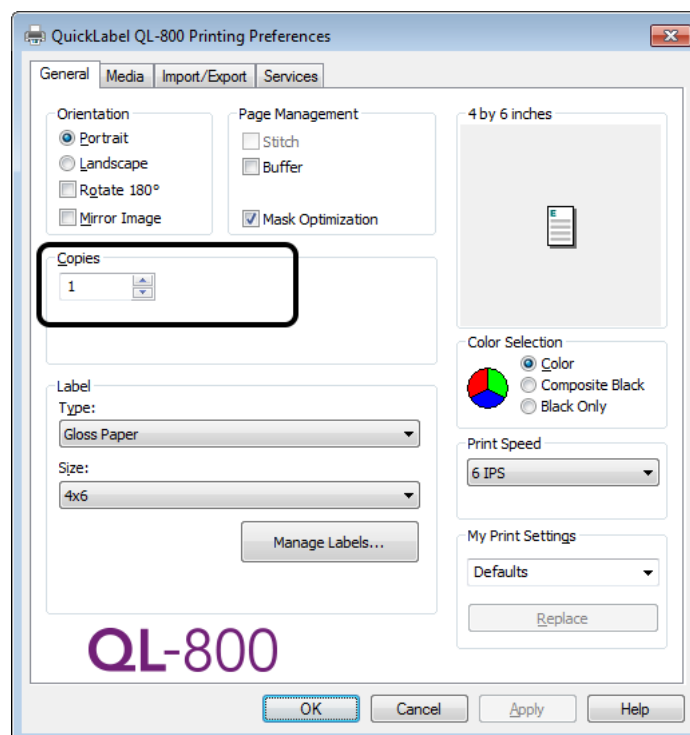

If setting the quantity in the print driver is not an option, or the job contains variable data, then the printer may become “starved for data” at some point during the job.

Data starvation is a condition where labels are being printed faster than they can be sent to the printer. At times, the printer does not have any data to print.

This condition usually results in automatically pausing and resuming when more data is available to print. In some situations, this may result in an error (101D). If either of these situations is to be avoided, then the entire job can be set to be rendered before sending to the printer. This can be done by enabling the **Buffer** option in the QL-800 driver.

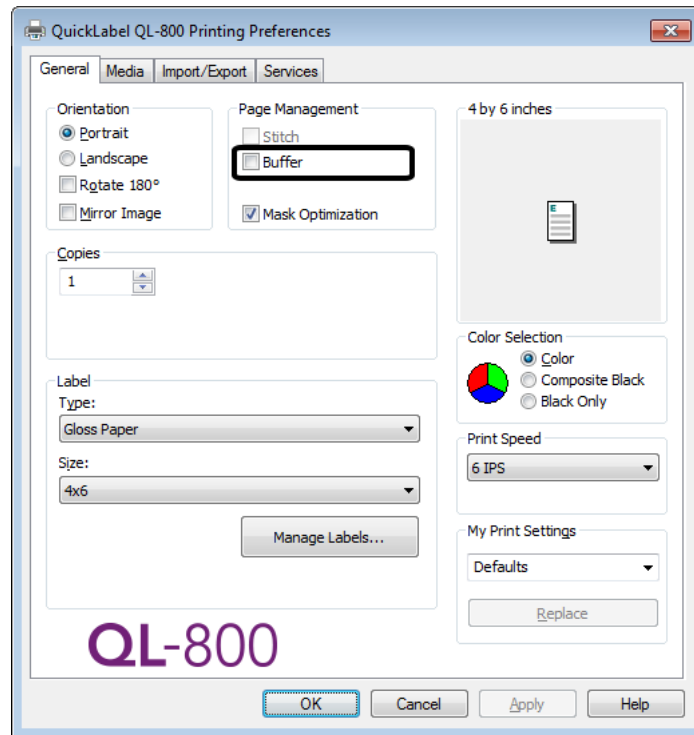

## Before Installing the Rewinder


Before installing the rewinder, observe the following precautions.

- No rewinder feet should float. The rewinder must be held level constantly.
- The rewinder must be installed on the same plane as the printer.
- The rewinder weighs 25 pounds (11.3 kilograms). When placing the rewinder on a desk, table, or other similar surface, it must be sturdy and stable enough to support the weight of the printer, rewinder, and roll media. A table that can support at least 150 pounds (68 kilograms) is recommended.
- The rewinder and associated bracket require a surface 14 inches (356 mm) in length and 21 inches (534) in width.
- Do not turn the rewinder mandrel by hand to rewind the media. Turning the mandrel by hand can result in rewinder damage.

## Installing the Rewinder

Use the following instructions to install the rewinder. Refer to the following illustration during this process.

**Note:** These instructions assume you are using the rewinder accessory only. If you are also using the unwinder accessory, the installation procedure will differ. See “Installing the Rewinder when using the External Unwinder” on page 147.

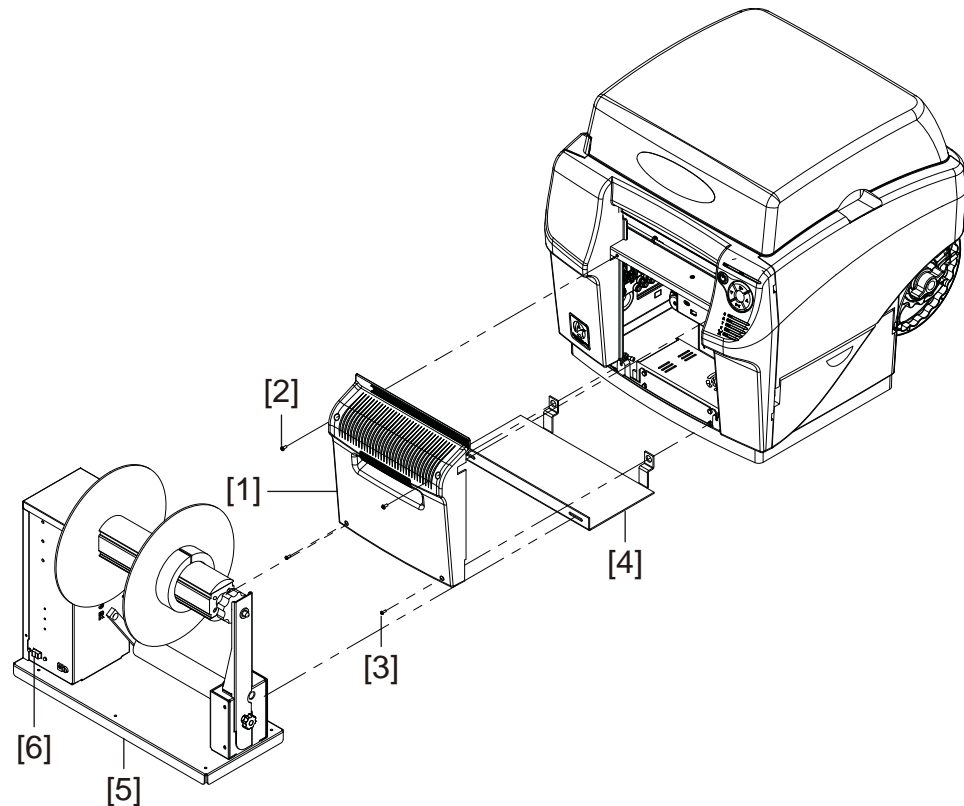

- 1 Ensure the power switch [6] on the rewinder is in the off position.
- 2 Power off the printer. On the rear of the printer, turn the power inlet switch off.
- 3 Disconnect the accessory cover [1] by removing the two upper [2] and two lower [3] screws.

**Note:** The upper and lower screws are different sizes. Keep these screws separated to ensure correct installation later in the procedure.

- 4 Orient the rewinder bracket [4] as illustrated. Insert the tabs from the bracket into the printer and align them with the lower accessory cover mounting bosses.
- 5 Reinstall the accessory cover [1] using the two upper [2] and two lower [3] screws. The lower screws will capture and secure the tabs from the rewinder bracket [4].
- 6 Remove the two thumb screws from the rewinder [5].
- 7 Align the rewinder [5] with the rewinder bracket [4]. Ensure the thumb screw mounting locations align with the slotted holes on the bracket.


- 8 Install the two thumb screws through the bracket [4] slots and into the rewinder [5].

**Note:** Do not fully tighten the thumb screws at this time. You will tighten the thumb screws after ensuring proper alignment in the rewinding procedure.

- 9 Plug the power jack into the power slot on the rewinder. Insert the power plug into an AC power receptacle.
- 10 On the rear of the printer, turn the power inlet switch on. Power on the printer.

## Installing the Rewinder when using the External Unwinder

Use the following instructions to install the rewinder when also using the external unwinder. Refer to the following illustration during this process.

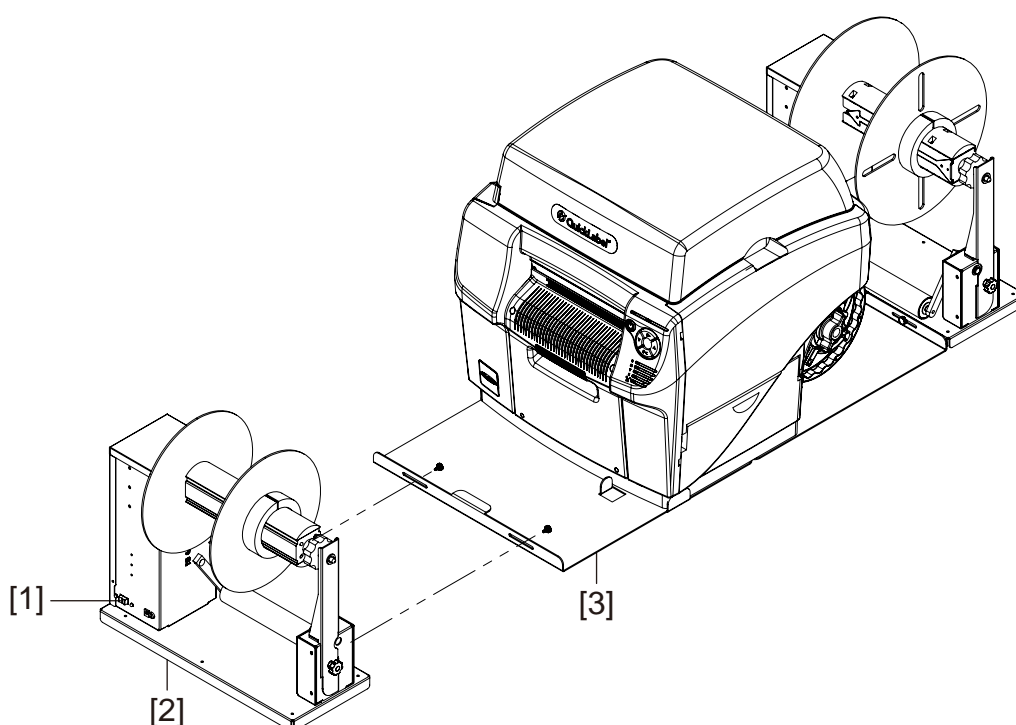

**Note:** These instructions assume you are using the rewinder accessory and the external unwinder accessory. If you are using only the rewinder accessory, the installation procedure will differ. See [“Installing the Rewinder” on page 146](#).

- 1 Before installing the rewinder, ensure the external unwinder is installed properly. See [“Installing the External Unwinder” on page 152](#).
- 2 Store the rewinder bracket in case it is needed in the future.

The bracket supplied with the rewinder is not needed during this procedure. Instead, the rewinder will be attached to the front end of the unwinder bracket.

**Note:** Do not discard the rewinder bracket. It is required for installing the rewinder when not using the external unwinder.

- 3 Ensure the power switch [1] on the rewinder is in the off position.

- 4 Remove the two thumb screws from the rewinder [2].
- 5 Align the rewinder [2] with the unwinder bracket [3]. Ensure the thumb screw mounting locations align with the slotted holes on the bracket.
- 6 Install the two thumb screws through the bracket [3] slots and into the rewinder [2].

**Note:** Do not fully tighten the thumb screws at this time. You will tighten the thumb screws after ensuring proper alignment in the rewinding procedure.


- 7 Plug the power jack into the power slot on the rewinder. Insert the power plug into an AC power receptacle.

## Rewinding Labels

The rewinder automatically winds printed media exiting the QL-800 onto rolls. The setup process for rewinding labels requires an empty label core and tape.

**Note:** Do not turn the rewinder mandrel by hand to rewind the media. Turning the mandrel by hand can result in rewinder damage.

- 1 Ensure the power switch [3] on the rewinder is in the off position.

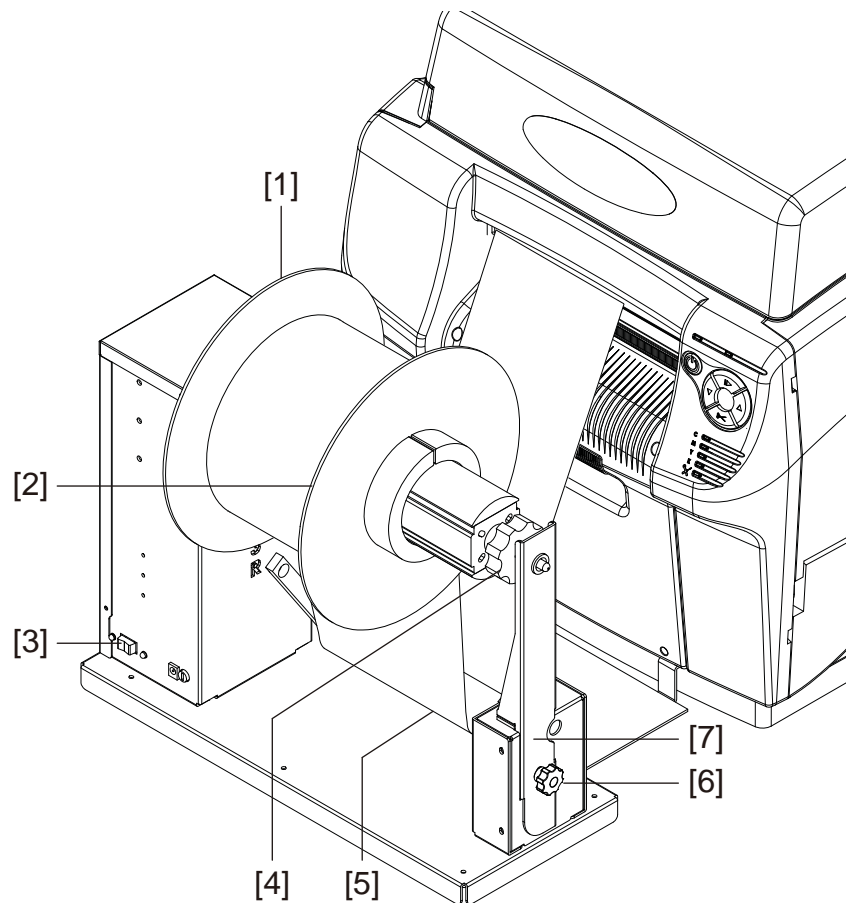

- 2 Turn the thumb screw [6] counterclockwise to loosen and remove the removable roll support arm [7].




- 3 Turn the rewinder mandrel adjustment knob [4] counterclockwise to loosen the mandrel.
- 4 Remove the outer flange [2] from the mandrel.
- 5 Load an empty label core on the mandrel.

Use an empty label core of the same width as the label media you will be using. Install the roll core on the rewinder, sliding it until it contacts the inner flange [1]. The outer flange [2] will be installed after you fasten the label media to the roll core.
- 6 Start a print job. Pause the job when the printed media advances slightly past the rewinder.
- 7 Guide the media under the rewinder dancer arm [5] and up around the empty label core. The inside edge of the media should be aligned squarely with the inner flange [1].

If the media is not squarely aligned with the inner flange, adjust the position of the rewinder as needed.

  - Loosen the thumb screws that fasten the rewinder to the bracket. Slide the rewinder left/right as allowed by the adjustment slots until the media is squarely aligned with the inner flange. Then tighten the thumb screws.
- 8 Fasten the end of the media to the core with tape. Ensure the printed side faces out.
- 9 Reinstall the outer flange [2] and then turn the mandrel adjustment knob [4] clockwise to tighten the mandrel.
- 10 Install the removable roll support arm [7]. Then tighten the thumb screw [6] to lock it into position.
- 11 Turn the power switch [3] on the rewinder to the on position.

When the dancer arm is in a lowered position, the rewinder mandrel will rewind media as needed. Do not turn the mandrel by hand to rewind the media. The media rewind path is illustrated below.

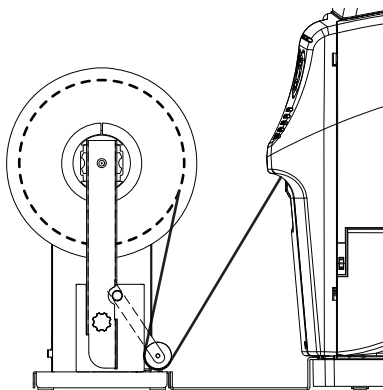

- 12 Resume the print job on the QL-800 printer. The rewinder will rewind media automatically as needed. The rewinder will stop when the printer stops advancing media or when the printer is out of media.




## Before Installing the External Unwinder

Before installing the unwinder, observe the following precautions.

- No unwinder feet should float. The unwinder must be held level constantly.
- The unwinder must be installed on the same plane as the printer.
- The unwinder weighs 25 pounds (11.3 kilograms). When placing the unwinder on a desk, table, or other similar surface, it must be sturdy and stable enough to support the weight of the printer, unwinder, and roll media. A table that can support at least 150 pounds (68 kilograms) is recommended.
- The unwinder and associated bracket require a surface 43 inches (1093 mm) in length and 21 inches (534) in width.
- If you are installing both the rewinder and unwinder, a surface 51 inches (1296 mm) in length and 21 inches (534 mm) in width is required.
- Do not turn the unwinder mandrel by hand to unwind the media. Turning the mandrel by hand can result in unwinder damage.

## Installing the External Unwinder

Use the following instructions to install the unwinder. Refer to the following illustration during this process.

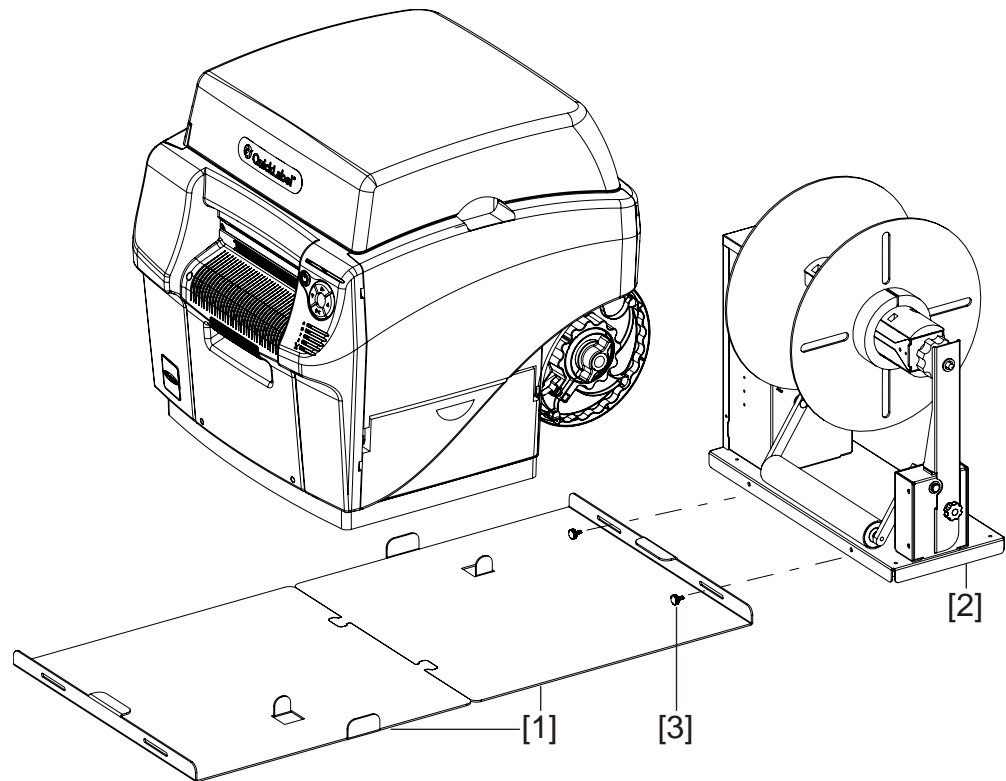


- 1 Use the **Before Moving** feature in the **Cleaning** tab of the QL-800 Maintenance Utility. This utility will prepare the printer for lifting and moving onto the brackets. See *"Preparing for Moving" on page 77*.
- 2 Power off the printer. On the rear of the printer, turn the power inlet switch off.
- 3 Ensure the power switch on the unwinder [2] is in the off position.
- 4 Arrange the brackets [1] as illustrated. Insert the tabs into the corresponding slots on the brackets.
- 5 Align the unwinder [2] with the bracket. Ensure the thumb screw mounting locations align with the slotted holes on the bracket.
- 6 Install the two thumb screws [3] through the bracket slots and into the unwinder [2].


**Note:** Do not fully tighten the thumb screws at this time. You will tighten the thumb screws after ensuring proper alignment.

- 7 With help from another person, lift the printer and then place it on the brackets.

**Caution:** The printer is heavy and moving it requires two people. One person should lift the front by the indicated lift point, while the other person should lift the back by the indicated lift point. Do not lift the printer by the mandrel. Lift the front of the printer by the recessed handle. Lift the rear of the printer by the flat area of the purple frame above the mandrel. Keep the printer level while lifting it.

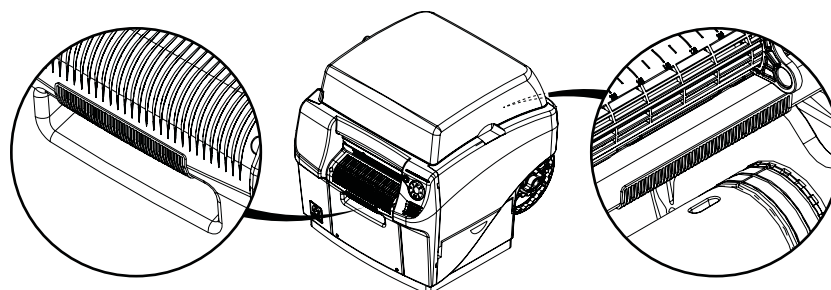


The printer should sit level on the brackets as shown. The front of the printer should make contact with the raised tab on the bracket.

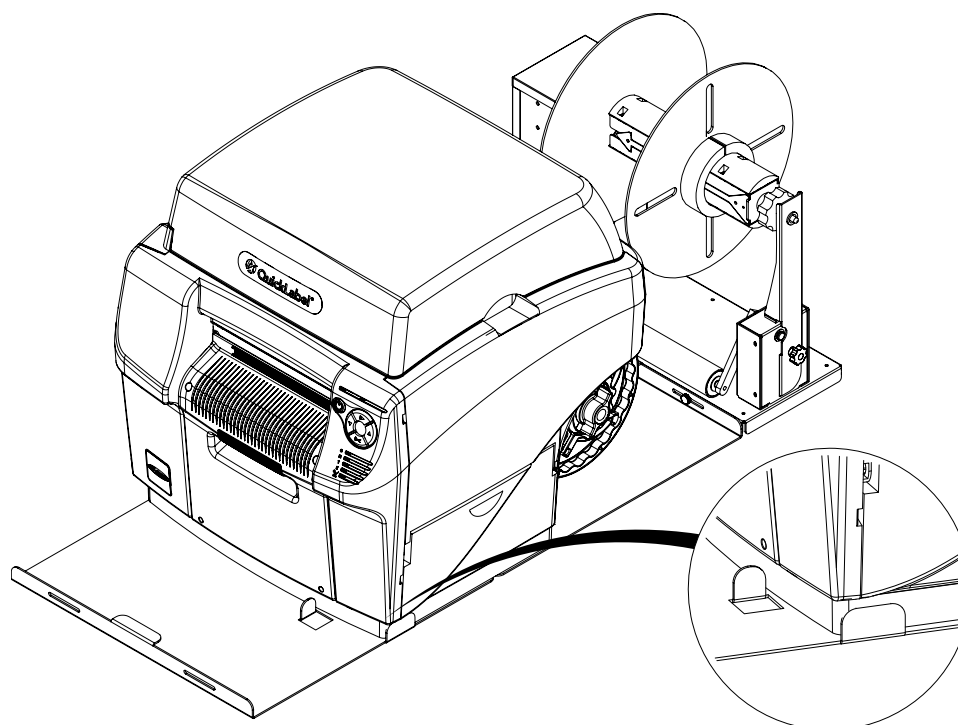

- 8 Plug the power jack into the power slot on the unwinder. Insert the power plug into an AC power receptacle.
- 9 On the rear of the printer, turn the power inlet switch on. Power on the printer.
- 10 Use the **After Moving** feature in the **Cleaning** tab of the QL-800 Maintenance Utility. This utility will prepare the printer for printing. See *"Preparing for Moving" on page 77.*

- 11 Use a straight edge such as a ruler to align the unwinder with the printer. The inside edge of the inside flange should be aligned with the fixed media guide on the media entry slot.

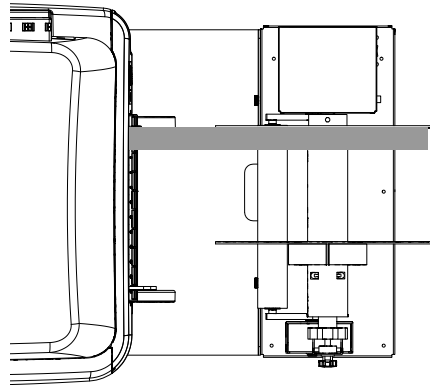


Slide the unwinder left/right as allowed by the adjustment slots until the flange is squarely aligned with the fixed media guide. Then tighten the thumb screws.

## Unwinding Labels with the External Unwinder

The unwinder automatically unwinds media into the QL-800 for printing. This option is used when feeding rolls over eight inches in diameter.

**Note:** Do not turn the unwinder mandrel by hand to unwind the media. Turning the mandrel by hand can result in unwinder damage.

- 1 Enable **External Unwind Mode** in the **Print Settings** tab of the QL-800 Maintenance Utility. See “[Setting up External Unwind Mode](#)” on page 73.
- 2 Ensure the power switch [3] on the unwinder is in the off position.

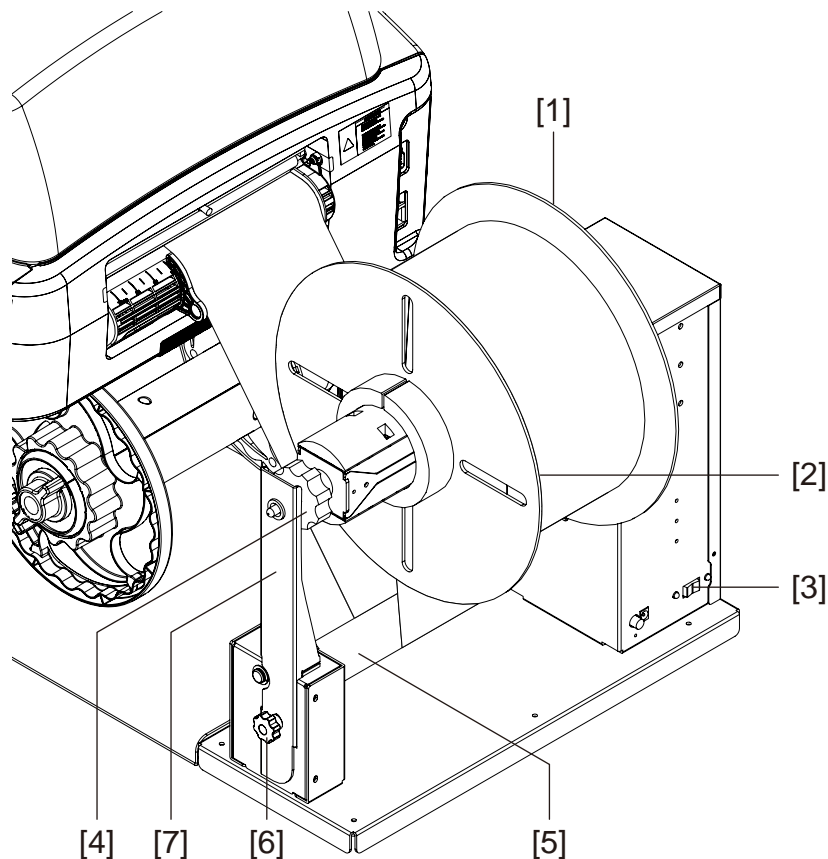


- 3 Turn the thumb screw [6] counterclockwise to loosen and remove the removable roll support arm [7].
- 4 Turn the unwinder mandrel adjustment knob [4] counterclockwise to loosen the mandrel.
- 5 Remove the outer flange [2] from the mandrel.
- 6 Load a roll of labels on the mandrel. The media should unwind over the top of the roll toward the printer. Ensure the side of the roll contacts the inner flange [1].
- 7 Reinstall the outer flange [2] and then turn the mandrel adjustment knob [4] clockwise to tighten the mandrel.

- 8 Install the removable roll support arm [7]. Then tighten the thumb screw [6] to lock it into position.
- 9 Guide the media under the unwinder dancer arm [5] and up to the media entry slot. The inside edge of the media should be aligned squarely with the fixed media guide on the media entry slot.

If the media is not squarely aligned with the fixed media guide, adjust the position of the unwinder as needed.

- Loosen the thumb screws that fasten the unwinder to the bracket. Slide the unwinder left/right as allowed by the adjustment slots until the media is squarely aligned with the fixed media guide. Then tighten the thumb screws.
- 10 While holding the media near the media entry slot, turn the power switch [5] on the unwinder to the on position. The unwinder will remove slack and provide back tension during the loading process.

The media unwind path is illustrated below.

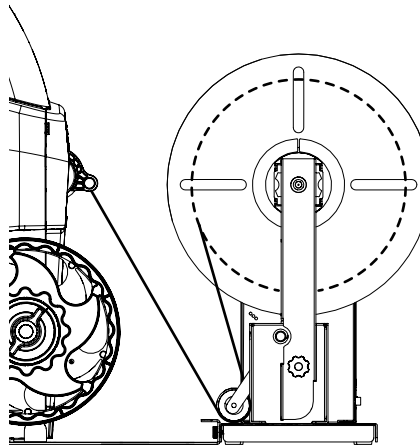

- 11 Finish loading media using either the standard method or the manual feed method. Refer to the related section for details and illustrations.
  - **Standard** - Position the adjustable media guide. Guide the media into the printer and release the media when the printer starts feeding media. *See “Loading Media” on page 32.*
  - **Manual** - Position the adjustable media guide. Open the top cover. Lift the roller handle and then guide the media into the printer until it is positioned under the first star wheel on the transport unit. Release the roller handle and then close the top cover. The printer will start feeding media. *See “Loading Media with Manual Feed Mode” on page 33.*



---

# 10

## Shipping Precautions

Before shipping this printer, please read this section thoroughly. These shipping precautions must be followed to reduce the risk of printer damage during shipping.

Please contact Technical Support if you have any questions or concerns about shipping your printer.

**Caution:** *Do not ship a printer without following the shipping precautions. Failure to follow the precautions may result in catastrophic printer damage that will not be covered by any warranty.*

### Use the Before Shipping Feature

Use the **Before Shipping** feature in the **Cleaning** tab of the QL-800 Maintenance Utility. See *“Preparing for Shipping” on page 78.*

The maintenance wizard will guide you through the following actions:

- Draining ink from the printhead
- Removing the printhead
- Removing ink cartridges
- Securing the maintenance roller

**Caution:** *If you are unable to use the Before Shipping function due to an error condition, leave the ink cartridges installed in the printer. This will help prevent ink leakage if there is a problem.*

### Pack the Printer Carefully

Observe the following guidelines when packing the printer for shipping.

- Install the original protective caps on the two fluidic couplings in the printhead area.
- Install the four absorbent pads in the ink cartridge slots.
- Pack the printer in the original packaging material and shipping carton. The printer should be shipped in its original packaging and strapped to the shipping pallet.
- If you are sending the printer to QuickLabel for factory service, please do not ship the printhead or ink cartridges. Store the printhead in its original plastic tray and packaging material.



---

# 11

## Safety Warnings and Precautions

Before using this printer, please read this section thoroughly. Warnings to heed and important matters are described here to prevent user injury and printer damage.

Do not attempt to operate this printer in any way other than those mentioned in the User Guide.

### Location

Make sure there is sufficient space around the printer.

#### Warning

- Never place items on the printer. If such items were to fall on the printer, this could cause a fire, electrical shock, or damage to the printer.
- The electrical contacts inside the printer become extremely hot during normal operation. To avoid causing a fire, never store flammable substances like alcohol, thinner, etc. near the printer.

#### Caution

Avoid using the printer in the following types of locations.

- Where the printer is exposed to open air or high humidity. This could cause a fire, serious electrical shock, or damage to the printer. Also, if the printer is carried into a warm room on a cold day, this could cause condensation inside the printer. If this happens, allow the printer to sit for at least 1 hour at room temperature to adapt to the ambient temperature and humidity.
- Never place the printer on a slanted or unstable stand or table. If the printer is dropped or slides off, this could cause personal injury.
- Never expose the printer to dust. This could cause a fire, serious electrical shock, or damage to the printer. Also, never locate the printer near a water faucet or in any other location where it will be exposed to water. This could cause serious electrical shock.
- Never set up the printer in a location that is exposed to direct sunlight, high temperature, or open flame. This could cause a fire or electrical shock.
- Use the printer in an environment where temperature and humidity are within the ranges of 41 to 95 degrees Fahrenheit (5 to 35 degrees Celsius) and 20% to 80% RH (with no condensation).
- Never block the ventilation ports on the printer. A blocked ventilation port could cause heat to build up inside the printer and cause a fire. Also, place the printer in an area where you can disconnect the power cord immediately; keep the area around the power cord connection free of obstacles. This allows you to unplug the power cord quickly in an emergency.

## Power Supply and Power Cord

### Warning

- To avoid causing a fire or serious electrical shock, always use the power cord provided with this printer. To avoid a fire or electrical shock, do not use an extension cord.
- To avoid causing a fire or serious electrical shock, make sure that the power plug is securely and completely inserted into the power source. To avoid personal injury from an electrical shock, never handle the power cord or plug when your hands are wet.

### Caution

- Be sure to turn off the printer before removing the power plug from the outlet.
- Check the power plug and cord for any problem (abnormal heat, rust, bend, cracks, scratches, etc.) at least once a month. If any problem with the power plug or cord is found, replace it. Using it without replacement can result in a fire or electrical shock hazard.
- To avoid damaging the power plug, which could cause a short circuit and cause a fire or electrical shock, never pull on the power cord to unplug the cord from the power supply. Always grip the plug to remove it from the power supply.
- If the printer will not be used for a long period, for your safety disconnect the power cord from the power source.
- Never use any power source other than the one rated for the printer. This printer is designed to be used in the region where purchased. Also, make sure the power source can supply sufficient power for the printer. This could cause a fire or serious electrical shock, or damage the printer.

## General Safety

### Warning

- If you find a large ink leak, switch the printer off immediately, disconnect the power plug from the power source, and call for service. If you continue to use the printer, this could cause a fire or serious electrical shock.
- Never clean the printer with water or any flammable liquid (alcohol, benzene, thinner, etc.) either applied directly or with a cloth. If you accidentally spill liquid on the printer, switch the printer off immediately, disconnect the power plug from the power source, and call for service. If you continue to use the printer, this could cause a fire or serious electrical shock.
- If the printer emits smoke, unusual odors, or makes noises, leaving it could cause a fire or serious electrical shock or damage to the printer. Switch the printer off immediately, disconnect the power plug from the power source, make sure that the printer has stopped smoking, and call for service. Do not attempt to repair the printer by yourself. This could cause a fire or serious electrical shock.
- Use only a slightly damp cloth, thoroughly wrung out, to clean the printer surfaces. Never use alcohol, thinner or any other flammable liquids. If such materials come into contact with electrical components inside the printer, this could cause a fire or serious electrical shock.

**Caution**

- There are high voltage points inside the printer. To avoid a fire or electrical shock, never attempt to disassemble or repair the printer.
- Never insert or drop any metal objects into the printer when it is open. This could cause a fire or serious electrical shock, or damage the printer. If something falls into the printer accidentally, switch the printer off immediately, disconnect the power plug from the power source, and call for service. If you continue to use the printer, this could cause a fire or serious electrical shock.
- If the printer is dropped and damaged, switch the printer off immediately, disconnect the power plug from the power source, and call for service. If you continue to use the printer, this could cause a fire or serious electrical shock.
- To avoid a fire or electrical shock, never use flammable sprays around the printer.
- Never remove the fixed covers from the printer. This could cause a serious electrical shock.

**Important**

- While the printer is printing, do not open any covers and do not remove the power plug.
- Do not apply excessive force or strong shock to the printer. Doing so can result in a machine failure or impair printer quality. Be sure to open/close the covers slowly.


## Moving the Printer

**Warning**

- Call the dealer for advice before you ship the printer a long distance or move the printer by car or truck where it may be subjected to shock and vibration. Moving the printer without the proper preparation could subject it to shocks and vibrations which could damage the printer and cause a fire.

### Caution

- Before moving the printer, use the appropriate procedures to drain ink from the printhead or entire print system. *See “Preparing for Moving” on page 77. See “Preparing for Shipping” on page 78.*
- Before you move the printer to another location in the same building, disconnect the power cord and make sure that all other cables are disconnected.
- The printer is heavy and moving it requires two people. One person should lift the front by the indicated lift point, while the other person should lift the back by the indicated lift point. Do not lift the printer by the mandrel. Lift the front of the printer by the recessed handle. Lift the rear of the printer by the flat area of the purple frame above the mandrel. Keep the printer level while lifting it.

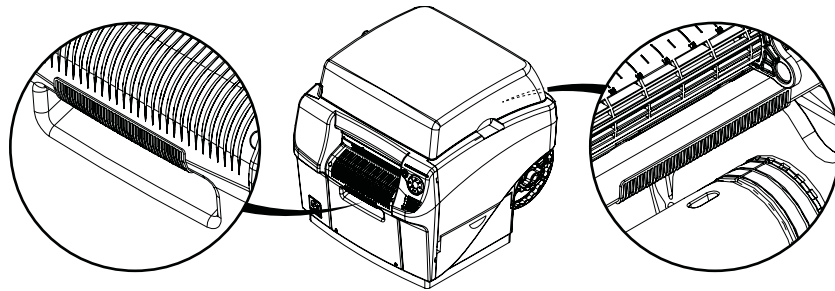

- Always hold the printer level and carry it slowly. If ink is spilled inside the printer while moving it, this could cause a fire or serious electrical shock or damage the printer.

### Important

- To prevent machine failures, do not relocate or transport this printer with the covers open.

## Ink Cartridge and the Maintenance Cartridge

### Caution

- Always store these items out of the reach of small children. This prevents accidents. If a child accidentally swallows ink, seek medical attention immediately.
- If ink gets into your eyes, wash it out with flowing water immediately. If irritation persists, consult a physician.
- If ink comes into contact with your skin, rinse it off with flowing water immediately. If irritation persists, consult a physician.
- Never drop or apply excessive force to an ink cartridge or the maintenance cartridge. Ink can stain clothing and the work area.
- Never attempt to disassemble or modify the ink cartridges. They contain ink, which may leak out and smear your clothes or things around you.

### Important

- Do not install or remove the ink cartridge or maintenance cartridge unless it needs to be replaced. Doing so can accelerate wear of the printer components.

## Printer Specifications


Printer	
Printing Technology	Thermal Inkjet
Resolution	1600 x 1600 dpi, 1600 x 800 dpi
Label Size/Print Area	Width 2.0" (51 mm) - 8.3" (211 mm)
	Length 1.0" (25 mm) - 30.0" (762 mm)
Print Speed	6 ips at 1600 x 1600 dpi 12 ips at 1600 x 800 dpi
Media Sensing	Gap, Reflective (bottom-only), Continuous; Non-adjustable/fixed sensors
Ink Cartridge Capacity	QuickLabel QL-800 CMYK dye cartridges, 250mL
Maintenance Cartridge Capacity	Approximately 1 million printed inches or 850 mid-job cleanings  Near full warning at approximately 80% full
Printhead Life	Approximately 250,000 linear inches. Printhead life varies with image content and duty cycle, and is reported by the QL-800 Maintenance Utility so the user can anticipate end of life. Printing of vertical lines will accelerate printhead wear.
Maintenance Roller Life	Approximately 1 million printed inches or 850 mid-job cleanings
Ventilation Filter	Approximately 500,000 linear inches
Cutter Blade	Approximately 100,000 cuts on paper liner

Printer	
Label Media	Width: 2.125" (54 mm) - 8.425" (214 mm)
	Length: 1.125" (29 mm) - 30.125" (765 mm)
	Types: Gloss Paper, Matte Paper and Synthetic pressure-sensitive; Paper Tag Stock
	Roll: 8" OD (203 mm) QuickLabel® paper and synthetic labels on 3" ID (76.2 mm) core
	Thickness: 5.5 mil - 7.5 mil (0.140 mm - 0.191mm)
Control Panel	5 buttons - Power, Pause, Feed, Back Feed, Cut  7 LEDs - Power/Status, Error, Ink Out C/M/Y/K, Service
Wait Time to Ready	On -> Ready 60 seconds
Connectivity	USB 2.0; 10/100 BaseT Ethernet, RJ-45 connection
Software	CQL Pro® label creation and print management program suite and QL-800 Windows® 10/8/7 Server 2012/2008 64/32-bit driver
Barcodes	All major barcodes supported, including 2D Datamatrix and QR Code



Printer	
Environmental	<p>Printer Operating</p> <p>41° F to 95° F (5° C to 35° C), 20% to 90% Relative Humidity (non-condensing) Printer should be installed on level surface with no more than 1° tilt in any axis</p> <p>No longer than 8 weeks powered off or in standby.</p>
	<p>Printer Non-Operating</p> <p>23° F to 113° F (-5° C to 50° C), 5% to 95% Relative Humidity (non-condensing)</p> <p>No longer than 2 weeks powered off or in standby.</p>
	<p>Ink Storage</p> <p>32° F to 95° F (0° C to 35° C), 35% to 85% Relative Humidity (non-condensing)</p>
	<p>Ink Warranty</p> <p>24 months from date of production or 6 months after installation in printer</p>
	<p>Atmospheric Pressure</p> <p>1060hPa (795mmHg) - 700hPa (525mmHg)</p>
Power Requirements	100-240 VAC 50-60 Hz, 2.6A
Power Consumption	Operating: 260W (max) Idle: 60W (max)
Dimensions	23.7" L x 20.3" W x 20.8" H (602 mm x 515 mm x 528 mm)
Weight	No Supplies: 64 lbs. (29 Kg)
	With Supplies: 71 lbs. (32 Kg)
	Packaged: 79 lbs. (36 Kg)
Optional Accessories	Automatic Label Roll Rewinder

# Label Specifications

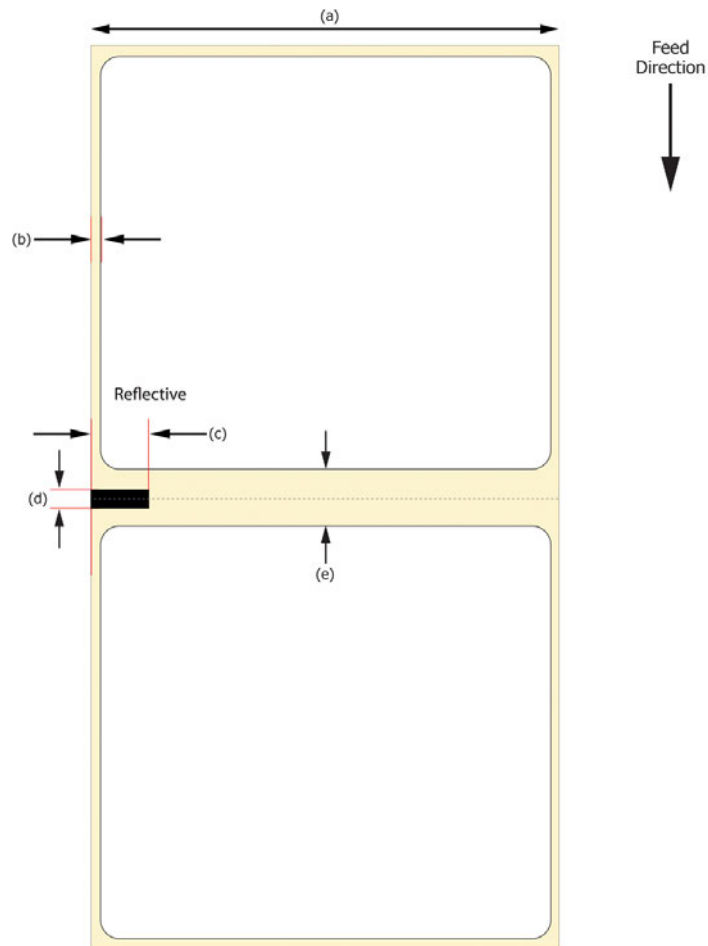

Label	
Rollstock	8" OD (203 mm) QuickLabel® paper and synthetic labels
Label Size/Print Area	Width: 2.0" - 8.3" (51 mm - 211 mm)
	Length: 1.0" - 30.0" (25 mm - 762 mm)
Construction	Width (a): 2.125" - 8.425" (54 mm - 214 mm)
	Edge Trim Left / Right (b): 0.063" (1.59 mm)
Reflective Mark	Width (c): 0.75" (19 mm) minimum
	Length (d): 0.125" (3.175 mm)
	Density: >1.1 (reflective measured with X-Rite 504) Non-glossy finish

Label	
Other Features	Gap (e): 0.118" (3.0 mm) - 0.75" (19 mm)
	Multi-Across/Down: Yes, 1.0" (25 mm) min. width, 1.0" (25 mm) min. length
	Maximum of 0.25" horizontal and vertical gaps
	Butt Cut Label Construction: acceptable if no print required for length of reflective mark
	Splices: clear tape splices are permissible



---

# Index

## A

Aerosol Filter	
Replacing	81
Auto-Maintenance	75

## C

Canceling jobs	64
Cleaning	
Exterior	87
Input pinch rollers	87
Maintenance Tray Area	88
Transport belt	89
Cleaning Printheads	77
Cleaning Procedures	
Updating	76
Clock	69
Color Basics	43
Continuous Media	45
CQL Pro	45
Label Setup	47
Cut/Stop Position	72
Cutter	
Replacing	81

## D

Data starvation	143
Design Software	
Choosing	45
CQL Pro	45
Setup	47
Third Party Applications	45
Designing Labels	45
DHCP	26

Driver	48, 50, 52, 54, 56, 60
Driver Installation (Network)	25
Driver Installation (USB)	24

## E

Error History	79
Errors	
Error 1001	97
Error 1002	97
Error 1003	98
Error 1004	99
Error 1005	99
Error 1006	99
Error 1007	101
Error 1008	101
Error 1009	102
Error 100A	102
Error 100B	103
Error 100C	105
Error 100D	105
Error 100E	105
Error 100F	106
Error 1010	106
Error 1011	106
Error 1012	107
Error 1013	107
Error 1014	107
Error 1015	108
Error 1016	108
Error 1017	108
Error 1018	109
Error 1019	109
Error 101A	109

Error 101D .....	109	<b>H</b>	
Error 1020 .....	109	Horizontal Baseline .....	71
Error 1021 .....	110	<b>I</b>	
Error 1022 .....	110	Ink Cartridge Co ntacts	
Error 1023 .....	111	Cleaning .....	90
Error 1024 .....	111	Ink Cartridges	
Error 1025 .....	111	Installing .....	28
Error 1030 .....	112	Replacing .....	85
Error 1031 .....	112	Ink Levels .....	65
Error 1032 .....	112	Inner Flange .....	40
Error 1038 .....	113	Installation Location .....	22
Error 1039 .....	113	Installation Precautions .....	23
Error 103A .....	114	Installation Summary .....	18
Error 1040 .....	114	IP Address .....	26
Error 1042 .....	114	<b>L</b>	
Error 1043 .....	115	Label Design Software	
Error 1044 .....	115	Setup .....	47
Error 1045 .....	115	Labels	
Error 1046 .....	116	Designing .....	45
Error 1050 .....	116	LAN Port .....	40
Error 1051 .....	117	LED Indicators .....	39, 42
Error 2001 .....	117	Log Files .....	80
Error 2002 .....	118	Lower Side Door .....	39
Error 2003 .....	118	<b>M</b>	
Error 2004 .....	118	Main Side Door .....	39
Error 2005 .....	119	Maintenance Cartridge .....	65
Error 2006 .....	119	Replacing .....	82
Error 2007 .....	120	Maintenance Roller .....	27
Error 2008 .....	120	Replacing .....	83
Error 2009 .....	120	Maintenance Utility .....	67
Error 200A .....	122	Advanced Tab .....	83
Error 200B .....	122	Cleaning Tab .....	75
Error 200C .....	123	Parts Replacement Tab .....	80
Error 200D .....	123	Print Settings Tab .....	70
Error 200E .....	123	Printer Information Tab .....	67
Error 200F .....	123	System Logs Tab .....	79
Error 2010 .....	124	Mandrel .....	40
Error 2011 .....	124	Media	
Error 2012 .....	124	Loading .....	32, 33
Error 2013 .....	124	Unloading .....	35
Error 2014 .....	125	Media Entry Slot .....	40
Error 2015 .....	125	Media Exit Slot .....	39
Error 2016 .....	125	Media Jam Removal .....	129
Error 2017 .....	125	Moving .....	77
Error 2100 .....	127	<b>N</b>	
Error 3XXX .....	127	Non-Bleed Labels	
External Unwind Mode .....	73	Planning .....	46
<b>F</b>		<b>O</b>	
Full-Bleed Labels		Operation Panel .....	39, 41
Planning .....	46		
<b>G</b>			
Gap Media .....	45		

---

Outer Flange .....	40	Shipping .....	78, 157
<b>P</b>		Specifications .....	163
Power .....	23, 93	Status Monitor .....	63, 64, 65
Power Inlet .....	40	System Requirements .....	23
Print Module Firmware Upgrade .....	94	<b>T</b>	
Printer Firmware Upgrade .....	68	Third Party Applications .....	45
Printer Information .....	68	Top Cover .....	39
Printhead		Transport Fan Speed .....	74
Installing .....	29	<b>U</b>	
Manual Cleaning .....	92	Unwinder .....	151, 155
Replacing .....	80	Upgrade .....	68, 94
Printhead Cleaning .....	77	USB Port .....	40
Printing Labels .....	61	<b>V</b>	
<b>R</b>		Vertical Baseline .....	70
Reflective Mark Media .....	45	<b>W</b>	
Rewinder .....	145, 146, 147, 148	Wing Nut .....	40
<b>S</b>			
Safety .....	159		

